


Royale

Assembly instructions

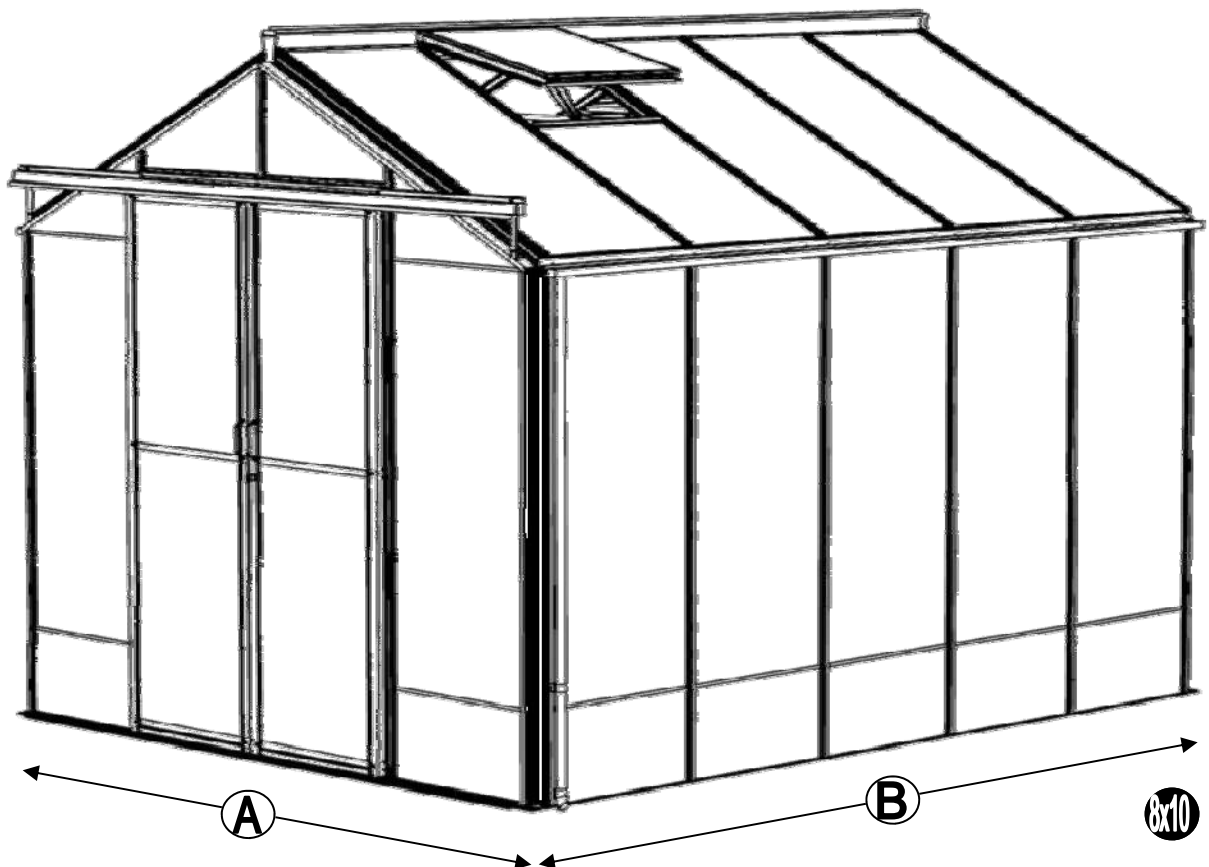

NOMINAL SIZE	A (mm)	B (mm)
8 x 6	2584	2012
8 x 8		2632
8 x 10		3252
8 x 12		3872

NOMINAL SIZE	A (mm)	B (mm)
6ft extension	-	1860
8ft extension		2480
10ft extension		3100
12ft extension		3720



Thank you for purchasing your new Robinsons greenhouse. We recommend you familiarise yourself with the instructions and read all safety information before you commence assembly. This instruction manual is also available online at www.robinsonsgreenhouses.co.uk in our technical help section should you need to reprint it. Should you require any additional advice you can always call us on 01782 385409.

These instructions are divided into sections highlighted by a white number/letter on a black background at the bottom corner of most pages (see opposite page for details); **part lists**, **B**-base, **P**-preparation, **1**-sides, **2**-front gable, **3**-rear, **4**-joining the four sides together, **5**-roof, **6**-vent, **7**-door, **8**-glazing, **9**-vent attachment, **10**-door attachment, **11** anchoring down, **12** optional louvre, **13** optional shelf, **14** optional staging. If you need to contact us for assistance please refer to the relevant section/s. If your building is longer than 12', i.e. has an extension then please also refer the separate extension manual.

Safety Warning

- Glass and aluminium can potentially cause injury. Please ensure you wear protective goggles, gloves, headgear and suitable footwear when assembling and glazing the building.
- Please remember that glass is fragile and should be handled with extreme care. Always clear up and dispose of any breakages immediately.
- Do not assemble the greenhouse in high winds.
- For safety reasons and ease of assembly, we recommend that this greenhouse is assembled by a minimum of two people.
- Please clear all lying snow from the greenhouse roof as it can cause the roof to buckle or collapse.

Site Preparation


- When selecting a site for your greenhouse, it is vital that you choose as flat and level an area as possible.
- A concrete or slabbed base will provide the most solid foundation for your greenhouse.
- **IMPORTANT:** Do **not** fix your building down until the building is fully assembled, including glazing.
- Avoid placing your greenhouse under trees or in other vulnerable locations.
- To minimise the risk of wind damage, try to select as sheltered a site as possible, e.g. beside a hedgerow or garden fence.

Additional Considerations

- Please bear in mind that assembling your greenhouse can be time consuming. You may need to spread the construction over two or more days. We recommend that you avoid leaving the building partially glazed. If you ever have to leave your greenhouse half assembled and not anchored down, weigh it down with slabs or bags of sand to stop the wind moving it.
- You will find it helpful to prepare a large, clean and clear area in which to work in. A garage floor or flat lawn area is ideal.
- If you have arranged for someone to install your greenhouse for you, please check that all components are included. Most parts are numbered and can be identified by a stamped number (without the 'D') or removable label. Alternatively, the components can be identified by lengths detailed in the packing list (see diagram below).
- Anchoring down your greenhouse should be the final stage of construction (including glazing).
- Once installed your greenhouse requires little maintenance, but to maintain the smooth running of your door(s) WD40 or similar can be applied to the door wheels and lower door guides.

Guarantee

- Your new Robinsons greenhouse is guaranteed for 10 years against faulty manufacture of the frame-work. This does not include glazing, moving parts, accidental damage or wind damage.

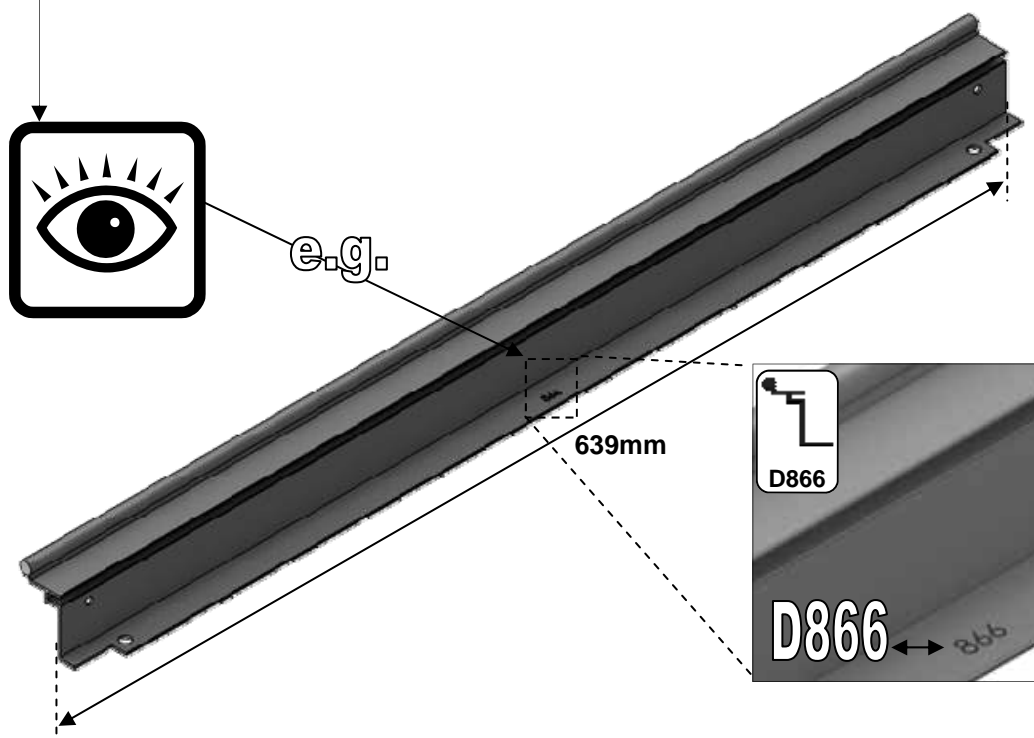

KEY SYMBOL	KEY DESCRIPTION
	EXTERNAL VIEW
	INTERNAL VIEW
	THINK
	THIS SECTION RELATES TO ANOTHER (e.g. 1 to 5)
	CORRECT
	DO NOT FIX DOWN!
	TWIST TO LOCK
	TIGHTEN
	PUSH AND HOLD
	CUT TO LENGTH







SECTION No	TITLE	ASSEMBLY SYNOPSIS: IMPORTANT INFORMATION / CONSIDERATIONS
B P 1 2 3 4 5 6a 6b 7 8 9 10 11 12 13 14 15	PARTS LIST	Most components should have a 'D' code punched into their metal surface. Identify and separate all like for like components prior to assembly. The 'parts list' also separates parts into the various sections 1 - 12 shown below. Parts can also be identified by their profile pictures and stated lengths etc..
	BASE	Base dimensions and recommendations. Ensure that your base is level as this will make assembly of the building, especially the glazing of the roof much more straight forward.
	PREPARATION	Tools required. IMPORTANT: Use WD40 or similar in the glazing bar channels and insert the black glazing rubber prior to frame assembly.
	SIDES	Take the side glazing bars 'D066' with the rubber inserted and the diagonal braces 'D103', use 10mm bolts to join them to the gutter and 15mm bolts to the cills (note how the head of the bolt slides into each glazing bar during construction).
	FRONT	Again insuring that the gable framework is rubbered-up follow the diagrams to assemble each end of the building. Make sure that you have inserted the extra bolts utilised in sections 4, 5 and 10. On the roof and side corner bars not every rubber channel will require rubber unless it is to be utilised in a partition (see separate manual and section P).
	REAR	
	JOINING THE FOUR SIDES	Take the two sides (1) and both gables (2 & 3) and join them together on your base. It is a good idea to tie some ladders to the sides to support them if you do not have anyone to hold them for you.
	ROOF	Attach ridge and then the rubbered-up roof bars ensuring that they are fully butted up to the ridge and down onto the gutter. If you have <u>cresting</u> then it is a good idea to fit it before glazing, see section (15). Some tubular braces are supplied to add extra strength, they can be fitted now or later with crop head bolts.
	VENT	Once the vent is glazed add silicone to the vent sides and top. Stand the vent/s on their hinge (vent top) and then leave the silicone to set.
	VENT SLAM	The slam bar 'D079' can be moved up and down between the roof glazing bars so that it can be butted down onto the pane of glass beneath, the autovent will be attached to it later on (9).
	DOOR/S	Construct the door using the diagrams and then leave to one side ready for attachment in section (10).
	GLAZING	Layout the bar cappings and covers around the building like a sundial checking that all is present and correct. You can also place the roof cappings in the gutters so they are closer to hand. The glass in the sides has to bevel on the black separator strip which is on top of the 305mm high glass base panels. This bevelling action allows the glass to tuck underneath the gutter canopy. Use the capping and the self tapping screws to then hold the glass in place. The covers then enclose the screw heads giving a neat finish.
	VENT ATTACHMENT	Take the assembled vent and slide the vent hinge 'D866' into the end of the ridge allowing the vent the pivot open and closed. Vent stops go either side of the vent to stop any lateral movement (so insert stop / vent / stop). Attachment of the Bayliss XL autovents.
	DOOR ATTACHMENT	Utilise the bolts inserted in section (2) to attach the upper door track. The lower door runner 'D861' and ramp threshold 'D088' push down and lock together.
	ANCHORING DOWN	Now that the greenhouse is finished and the door and vent/s are operating without interference then you need to anchor the building down using 2" rawl plugs and screws. Use a 7mm masonry bit in a hammer drill to create the holes.
12 13 14	OPTIONAL LOUVRE	They attach to the building during the glazing process (8) like a piece of glass with a black separator above and below them.
	OPTIONAL SHELIVING	Robinsons integral cantilever staging and shelving attaches to the inside of the greenhouse frame using either square head bolts (insert four into each side glazing bar 'D066' during construction of the sides (1)) or rectangular 'crop head' bolts which can be fitted retrospectively (both sets of bolts accompany the shelving/staging). This system allows the height of either the staging or the shelf to be set at an operator specific height. Commonly the staging brackets are set 900mm from the cills though you can alter this to suit the end user/s. The aluminium shelf / staging slats come in two lengths; (4'):1240mm 'D2002' and (6'):1860mm 'D2003'. These slats can combine to create any length of staging required, i.e. 4'+6' = 10' etc...
	OPTIONAL STAGING	
	FINISHING TOUCHES	Now that the main body of the structure is complete you can add; ridge caps, downpipe fittings, eave bungs. Images showing cresting and finial attachment, this is often easiest to do after section (5) rather than using the vent apertures later on (i.e. before glazing).

Section Ref	Part No.	Section	Size (mm)	8 6	8 8	8 10	8 12
-------------	----------	---------	-----------	-----	-----	------	------



Royal

Section Ref	Part No.	Section	Size (mm)	8 6	8 8	8 10	8 12
-------------	----------	---------	-----------	-----	-----	------	------




1

D043		1894	2				
D021		2514		2			
D022		3134			2		
D023		3754				2	
D042		1897	2				
D014		2517		2			
D015		3137			2		
D016		3757				2	
D103		1787	4				
D066		1676	4	6	8	10	
RUBBER		1000 (1m)	14	21	27	34	
D174		N/A	4	4	8	8	

2
+
3

RUBBER		1000 (1m)	38				
D174		N/A	8				


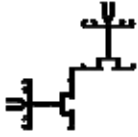






5

D044		1897	1				
D001		2517		1			
D002		3137			1		
D003		3757				1	
D064		1395	4	6	8	10	
RUBBER		1000 (1m)	11.5	17	22.5	28	









2

+




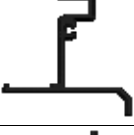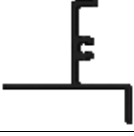








3

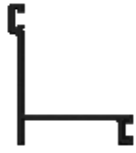


D037A		2596	2				
D048		1676	4				
D051		1976	4				
D053		2272	1				
D113		2510	1				
D103		1787	4				
D111		N/A	2				
D852L		1395	2				
D852R		1395	2				

6

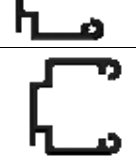


D866		639	1	2	2	3	
D863L		613	1	2	2	3	
D863R		613	1	2	2	3	
D862		593	1	2	2	3	
D079 PLUS FLUFF		590	1	2	2	3	
D114		N/A	2	4	4	6	
D220 PLUS SCREW		N/A	2	4	4	6	
D205		N/A	2	4	4	6	











Section Ref	Part No.	Section	Size (mm)	8 6	8 8	8 10	8 12
-------------	----------	---------	-----------	-----	-----	------	------

7	D090 + D347 lock = D301		1824	1
	D092 + D156 strike = D303		1824	1
	D093		1824	1
	D094		1824	1
	D096 + D217 wheel = D307		611	2
	D095		611	2
	D097		611	2
	D232		905	4
	D233		797	4
	P053		N/A	2
	D225		610	2
	D840B		4000	1

MAIN FRAME QUANTITIES VENTS / DOORS etc SEPERATE		10mm	29	35	41	47
		15mm	34	36	38	40
		m6	63	71	79	87

Section Ref	Part No.	Section	Size (mm)	8 6	8 8	8 10	8 12
-------------	----------	---------	-----------	-----	-----	------	------

8	1	D812		1660	4	6	8	10
	3	D816		1976	2			
	2	D817		77	2			
	3	D820		2272	1			
	2	D821		366	1			
	5	D896		1406	4	6	8	10
	2/3	D813		1675	4			
	2	D814		1883	2			
	1	D834		1660	4			
	5	D897		1406	4			
	5	D810		1405	8	10	12	14
	1	D825		1660	8	10	12	14
	2/3	D826		1677	4			
	3	D828		1978	2			
	3	D830		2274	1			
	2	D831		368	1			
	2	D836		1883	2			
	2	D837		79	2			

10	D052		372	1
	D865		1210	1
	D861		2450	1
	D088		1207	1
	D086		2510	1
	D085		2510	1
	D153		198	2
	D163		90	2
	D150		N/A	1
	D154		N/A	2

Royale

THE DIMENSIONS BELOW ARE THE EXACT EXTERNAL BASE DIMENSIONS FOR THE ROBINSONS RANGE.

We cannot emphasize how important it is to have a proper base for your Robinsons Greenhouse to be erected upon.



It is essential that the **BASE IS FLAT, LEVEL AND SQUARE AS WELL AS BEING SUBSTANTIAL** enough to take the weight of the greenhouse including its 4mm glass.

Give yourself enough room around your base to allow for fitting the glass and any on-going maintenance / cleaning. A slab base which is larger than the greenhouse is the ideal solution and is our preferred foundation.

A brick perimeter base is equally suitable providing there is a concrete foundation beneath it. We suggest using a solid brick with no frogs or holes (quality stock bricks or semi-engineering bricks).

IMPORTANT: Do not anchor your greenhouse down until it is fully assembled including glazing unless you are 100% sure your base is square and level. If not your glass will not fit properly.

IMPORTANT: If you have anything overhanging the ridge on a lean-to building then please make sure it does not interfere with the motion of the roof vents.

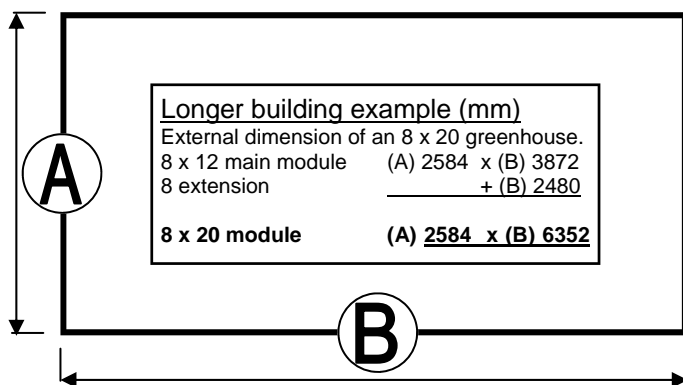
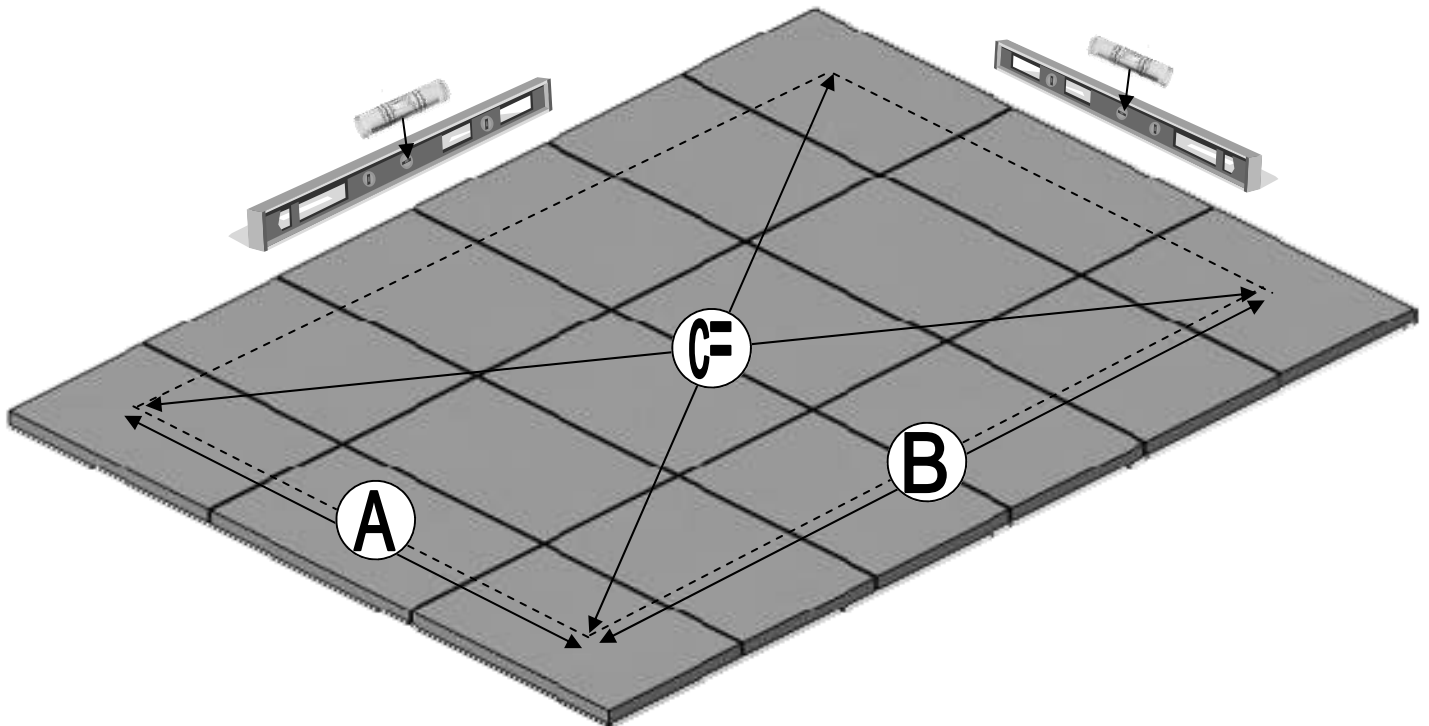




B





EXTERNAL DIMENSIONS (mm)

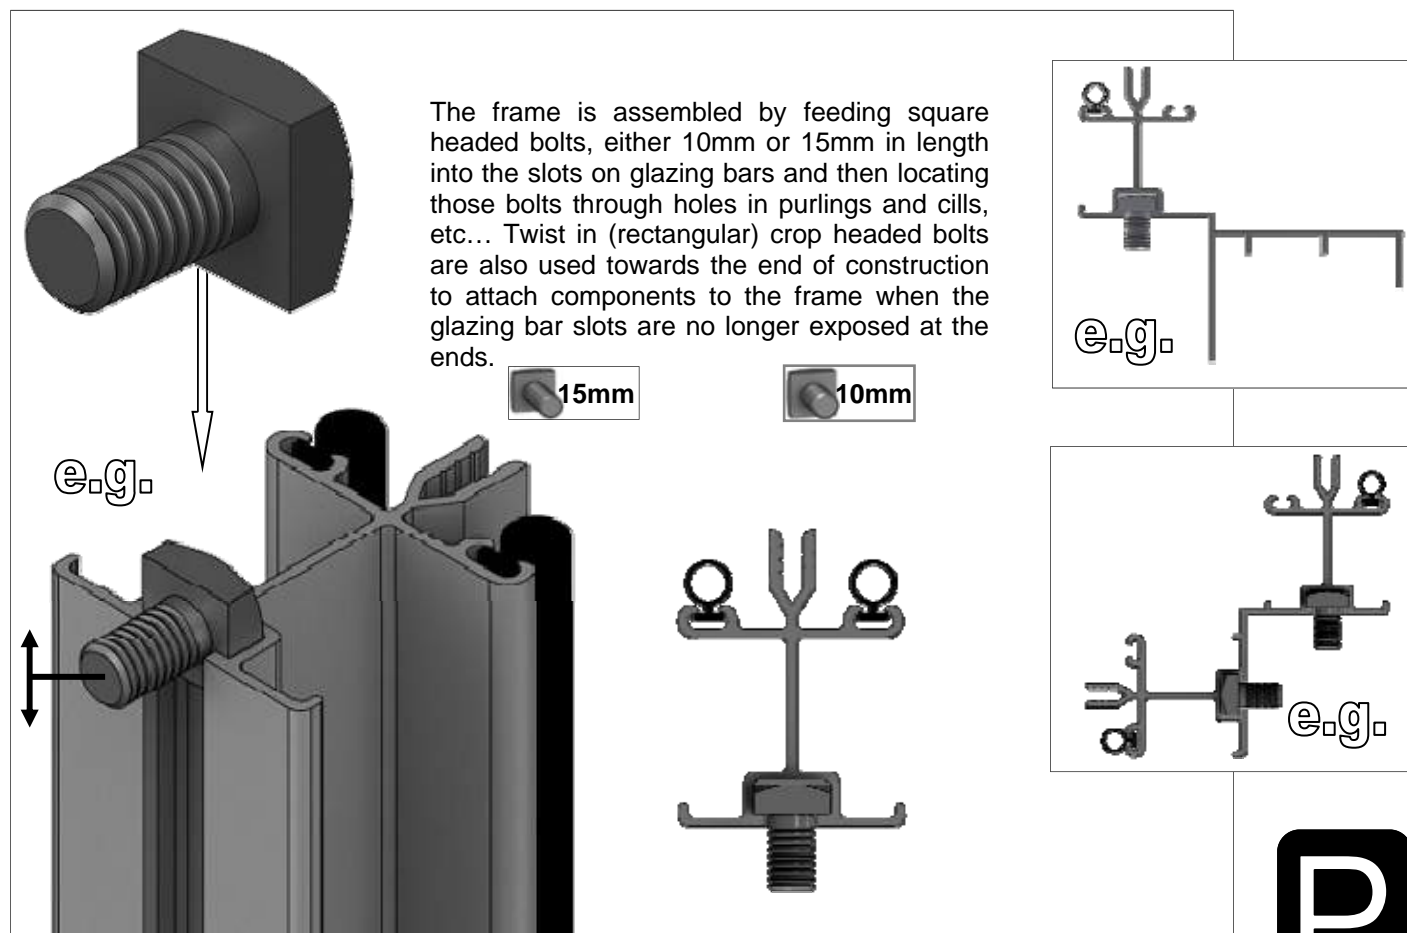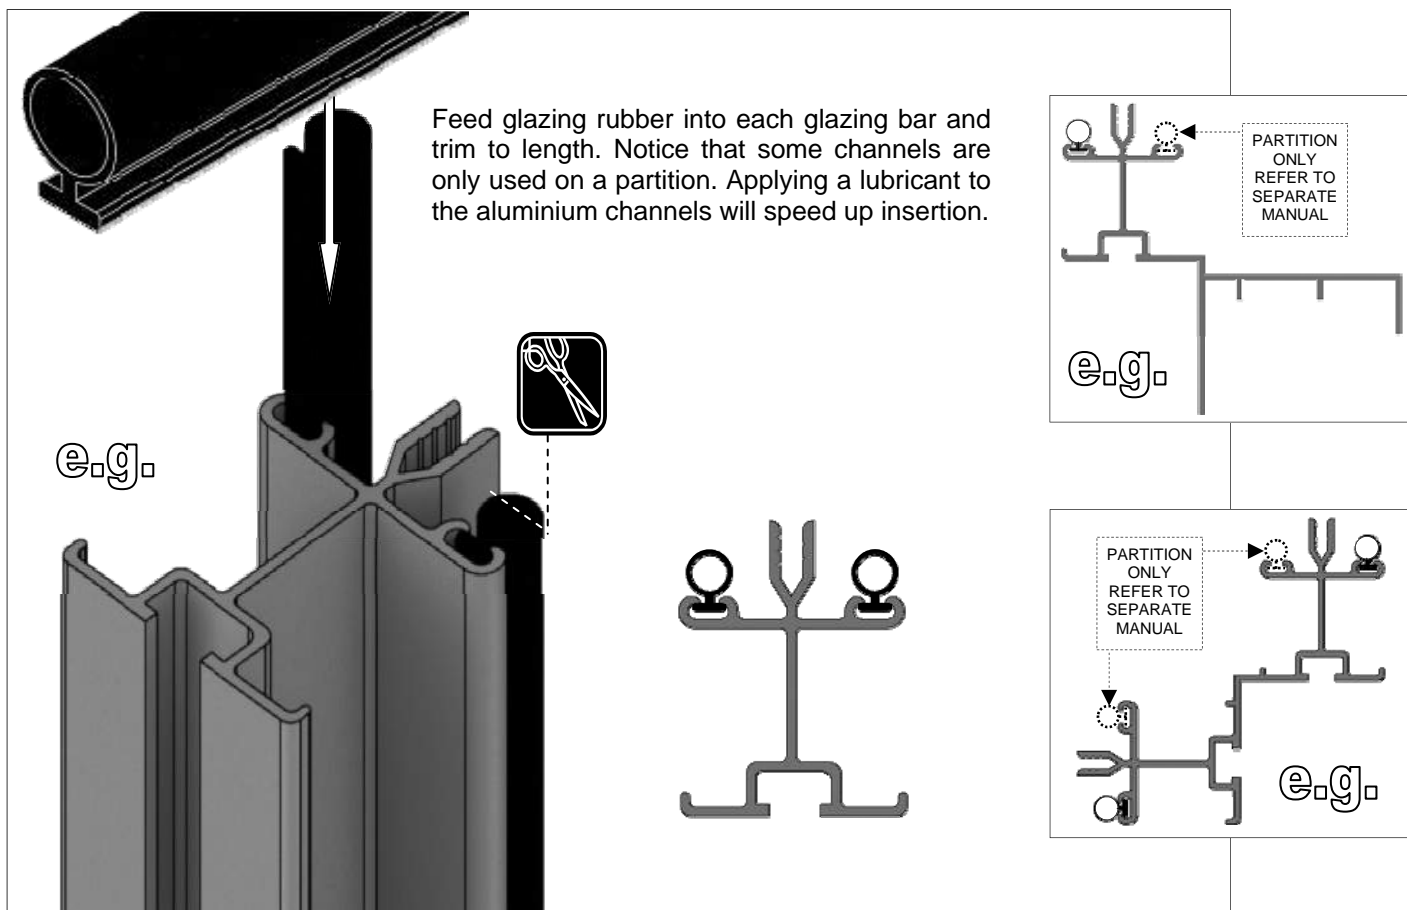Model sizes listed are **nominal**,
use 'mm' measurements.
 i.e.: an 8 x 10 is the model 8'6" x 10' 8"

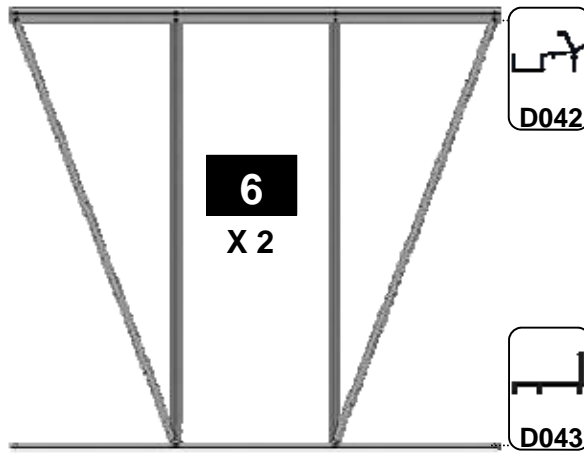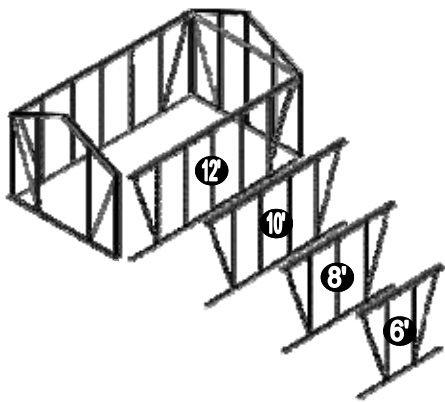
MODEL		A (mm) WIDTH	B (mm) LENGTH	C (mm) DIAGONAL
ROYALE	8 x 6	2584	2012	3275
	8 x 8		2632	3688
	8 x 10		3252	4154
	8 x 12		3872	4655
EXTENSIONS	6ft ext.	-	1860	-
	8ft ext.	-	2480	-
	10ft ext.	-	3100	-
	12ft ext.	-	3720	-







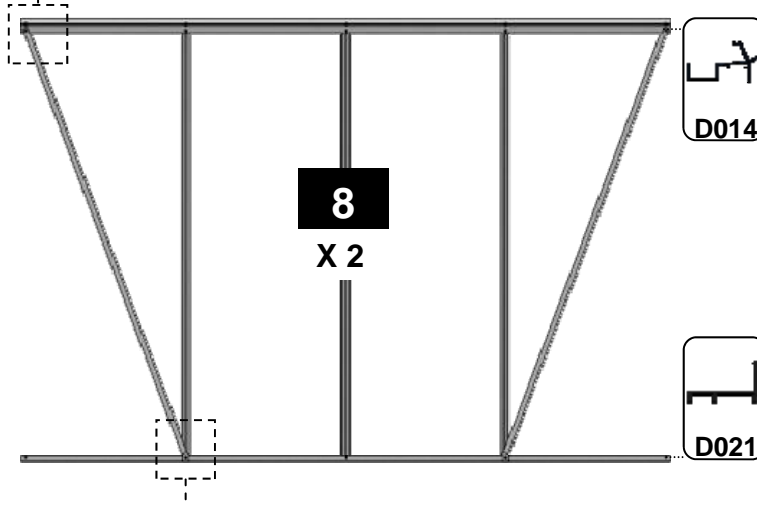


6 X 2		
Part No	mm	Quantity
D042	1897	2
D043	1894	2
D066	1676	4
D103	1787	4
D174		4
M6-10mm		4
M6-15mm		8
M6-NUT		12
Rubber	1000	14





e.g. ①




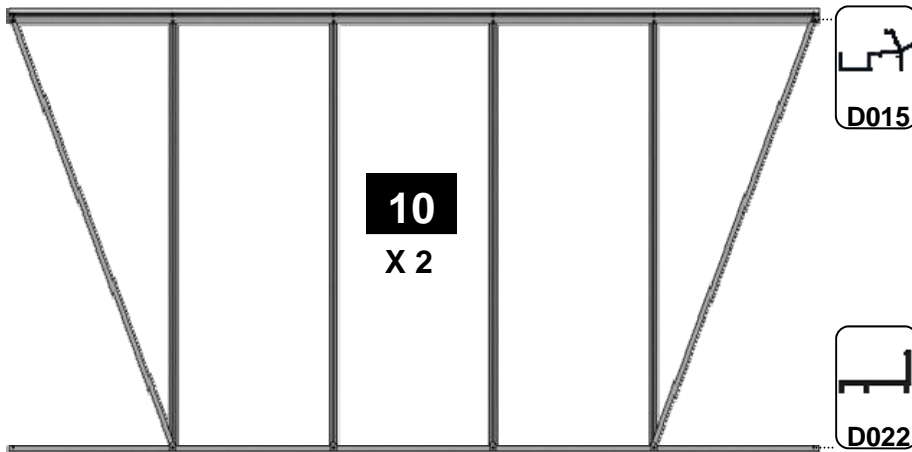



8 X 2		
Part No	mm	Quantity
D014	2517	2
D021	2514	2
D066	1676	6
D103	1787	4
D174		4
M6-10mm		6
M6-15mm		10
M6-NUT		16
Rubber	1000	21


e.g. ②

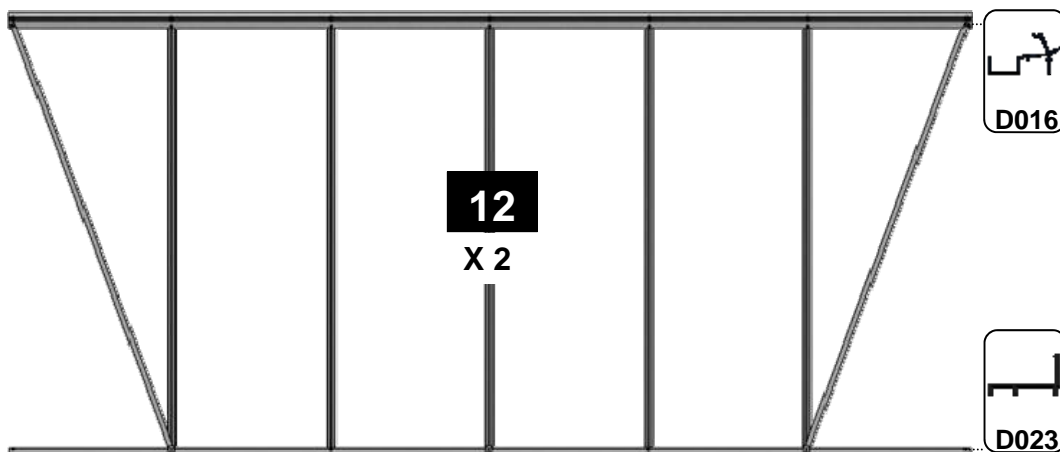

10 X 2		
Part No	mm	Quantity
D015	3137	2
D022	3134	2
D066	1676	8
D103	1787	4
D174		8
M6-10mm		8
M6-15mm		12
M6-NUT		20
Rubber	1000	27




12 X 2		
Part No	mm	Quantity
D016	3757	2
D023	3754	2
D066	1676	10
D103	1787	4
D174		8
M6-10mm		10
M6-15mm		14
M6-NUT		24
Rubber	1000	34





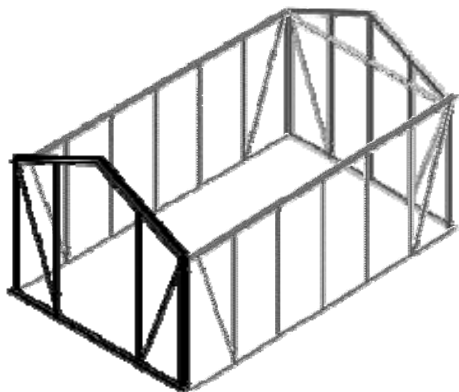



Part No	mm	Quantity
D037A	2596	1
D048	1676	2
D051	1976	2
D103	1787	2
D852L	1395	1
D852R	1395	1

Part No	mm	Quantity
D111		1
D174		4
D227		18m
M6X10		8
M6X15		12
M6NUT		20

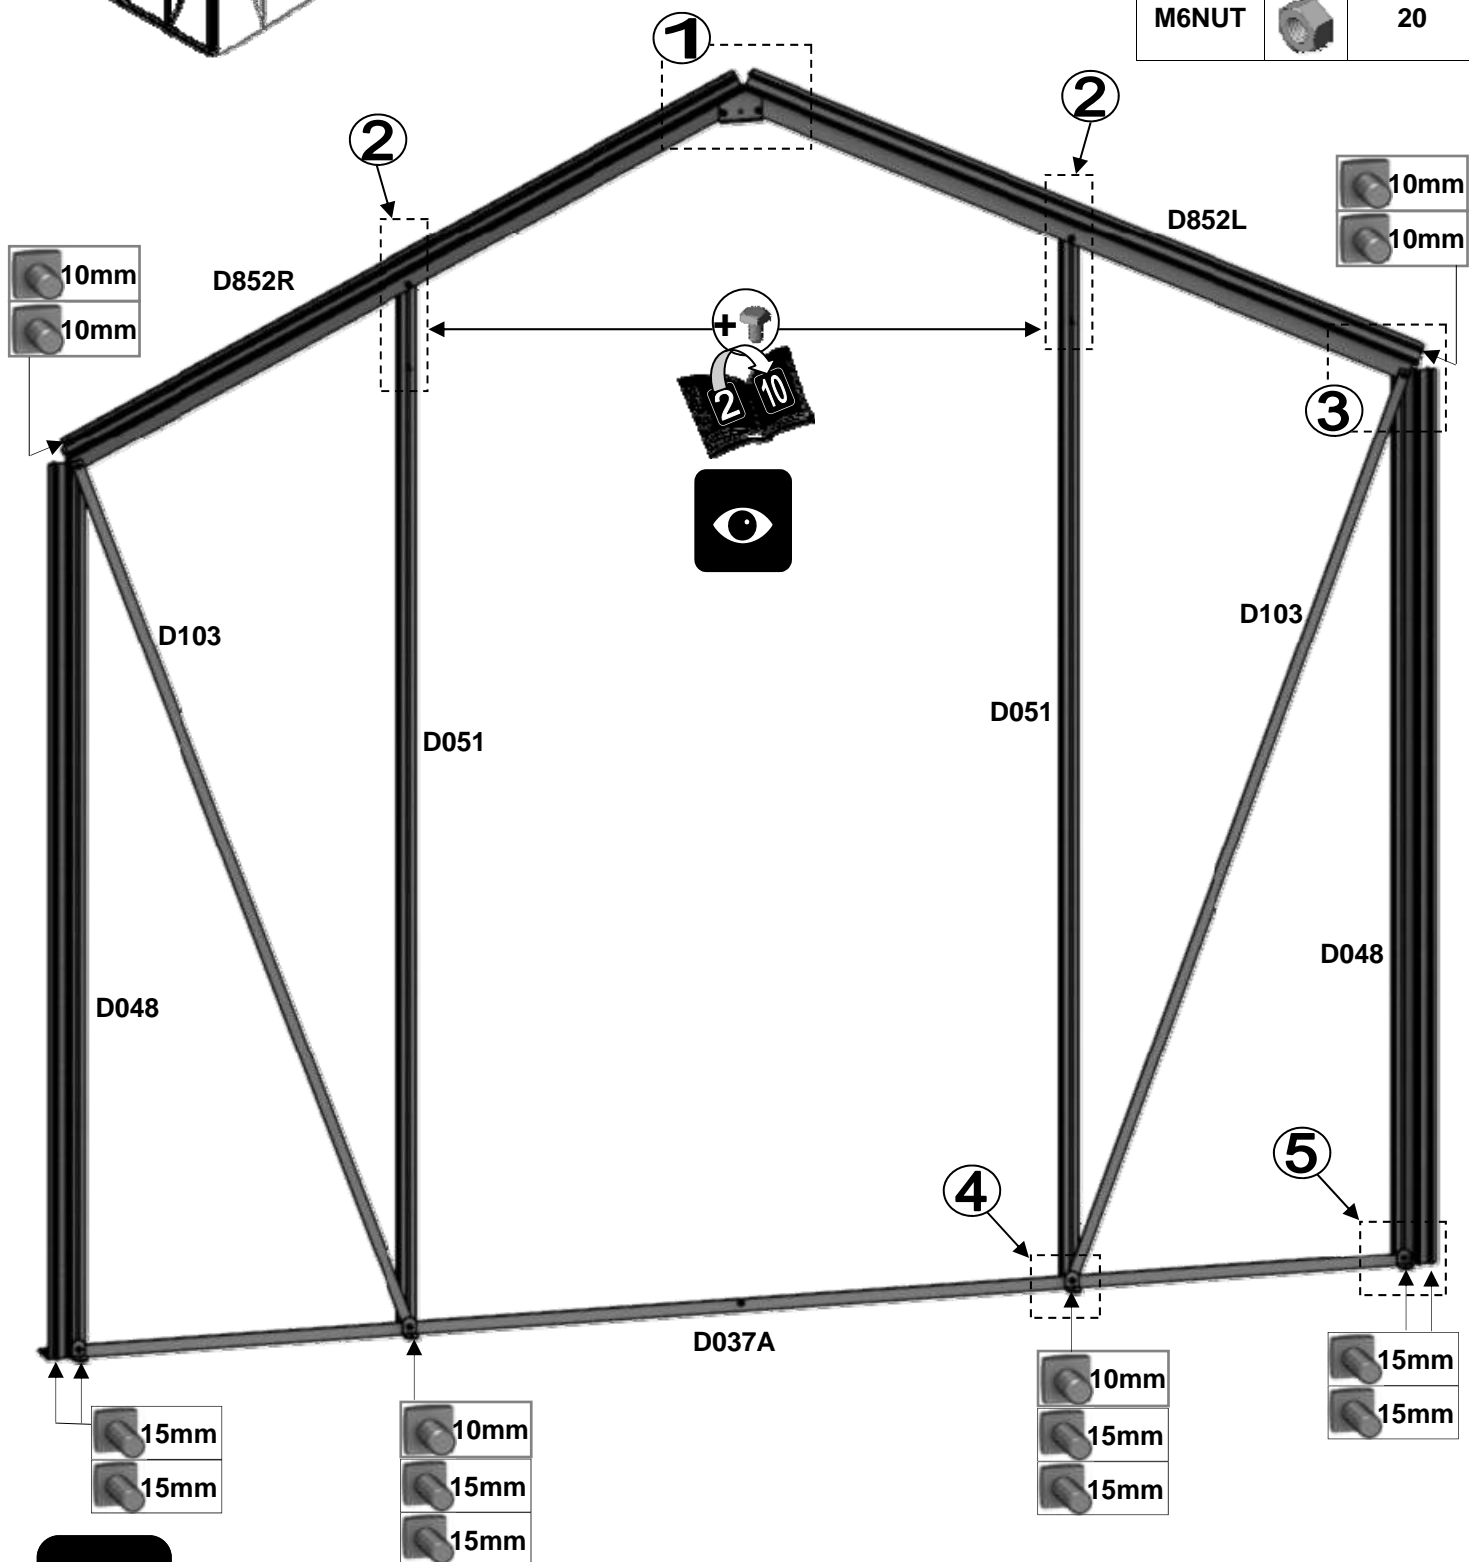



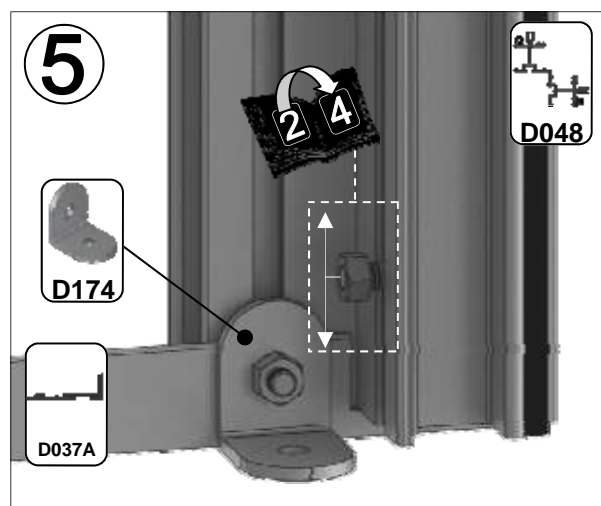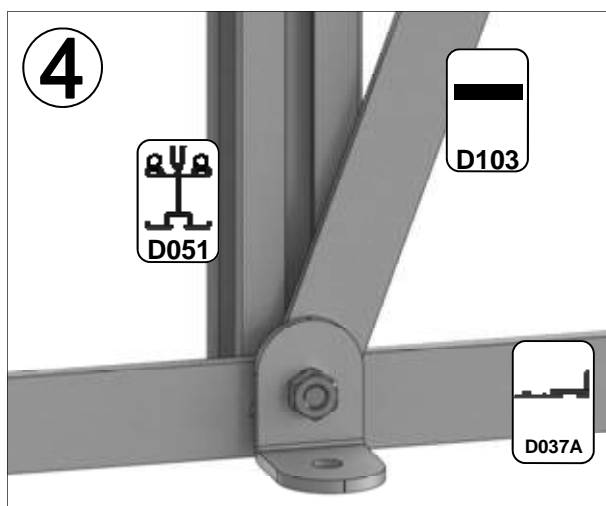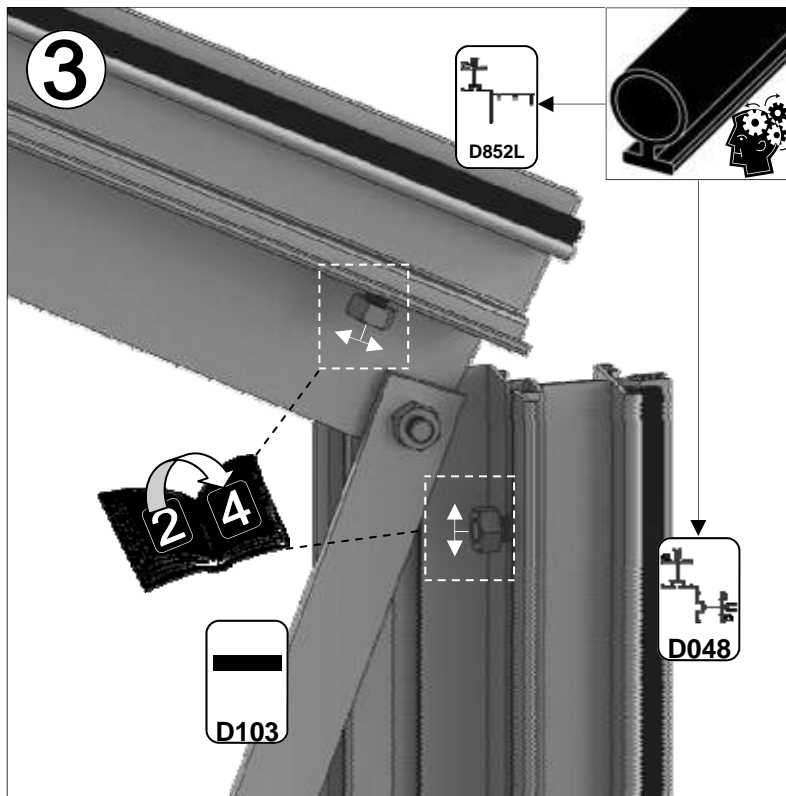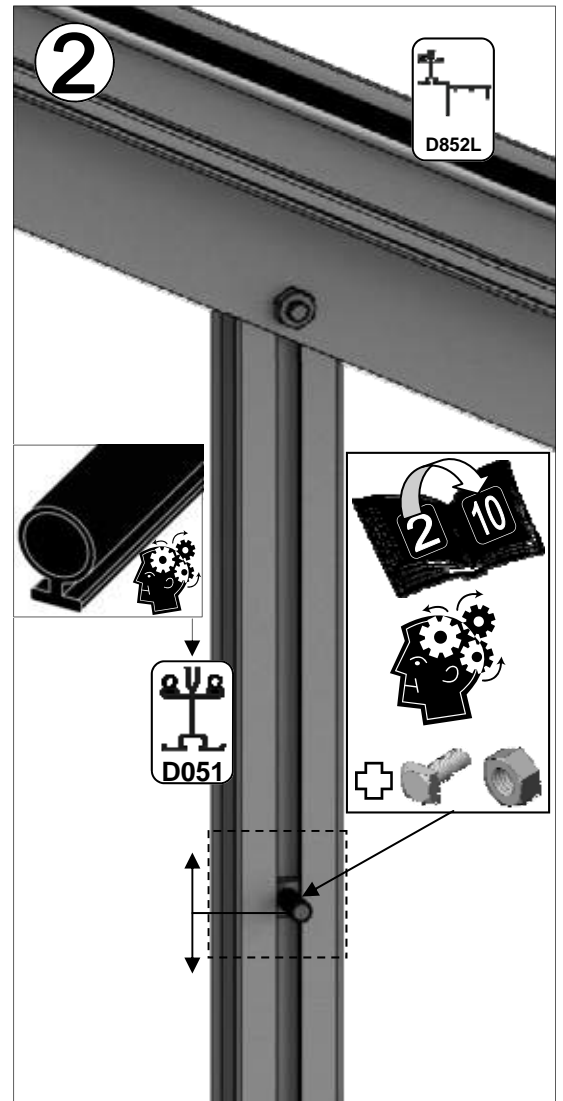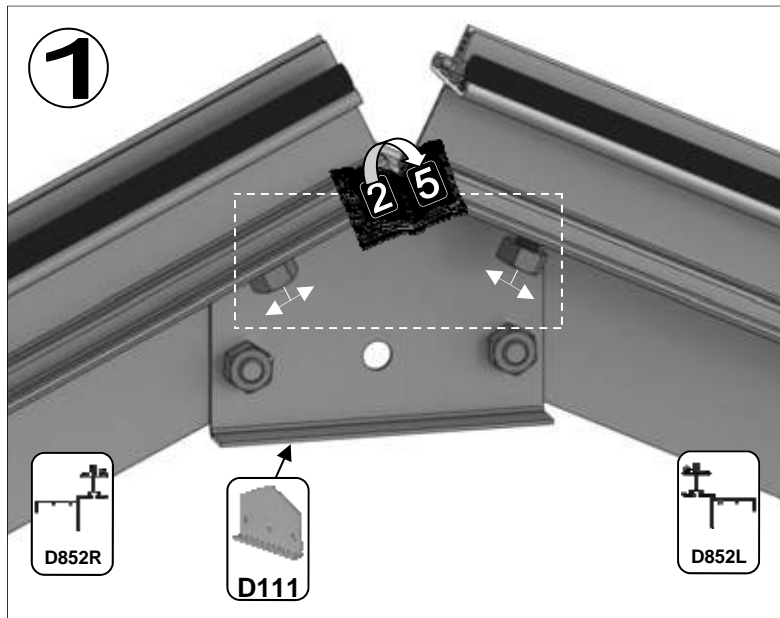

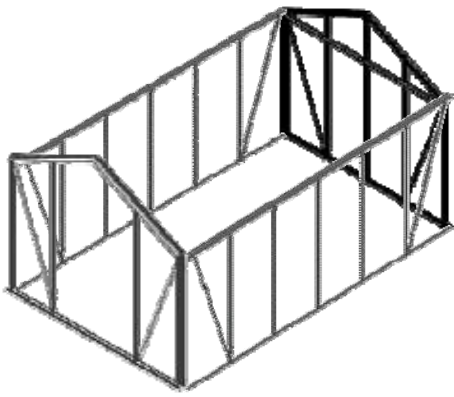


2
















Part No	mm	Quantity
D037A	2596	1
D048	1676	2
D051	1976	2
D053	2272	1
D103	1787	2
D113	2510	1
D852L	1395	1
D852R	1395	1

Part No	mm	Quantity
D111		1
D174		4
D227		22m
M6X10		9
M6X15		14
M6NUT		23

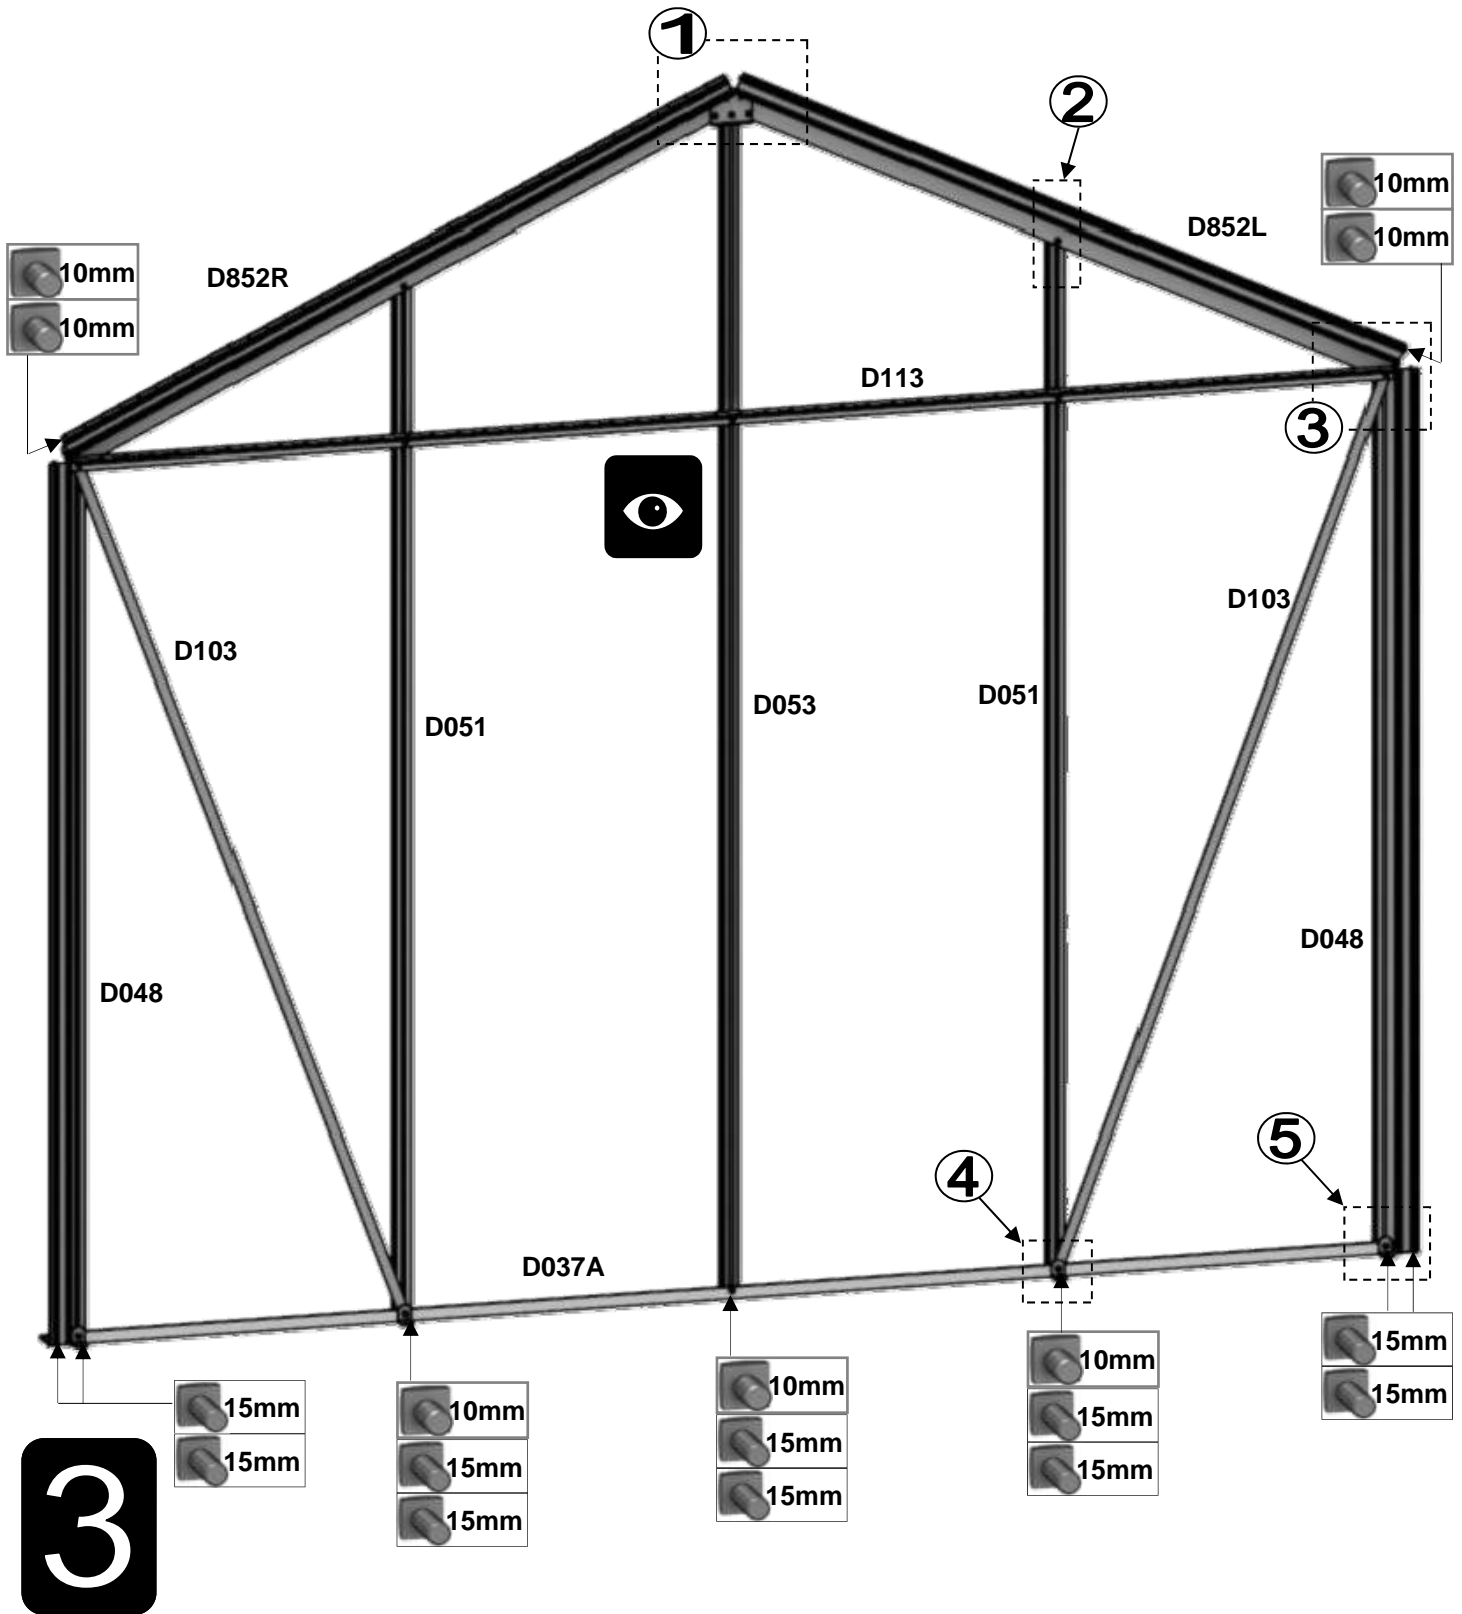

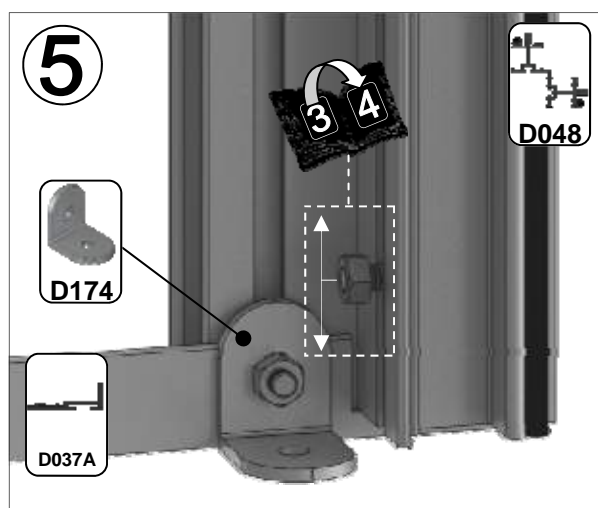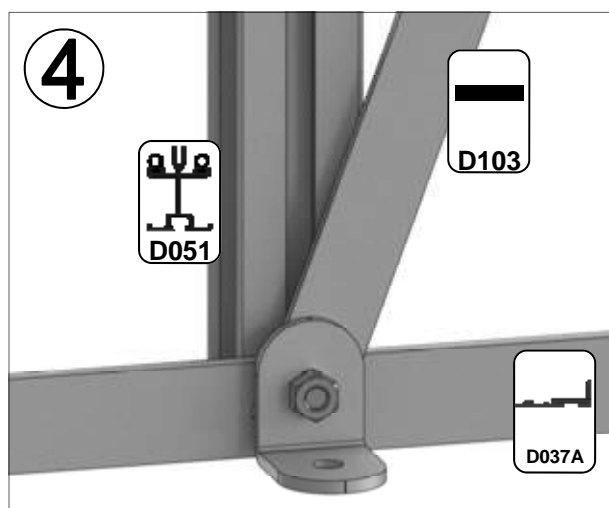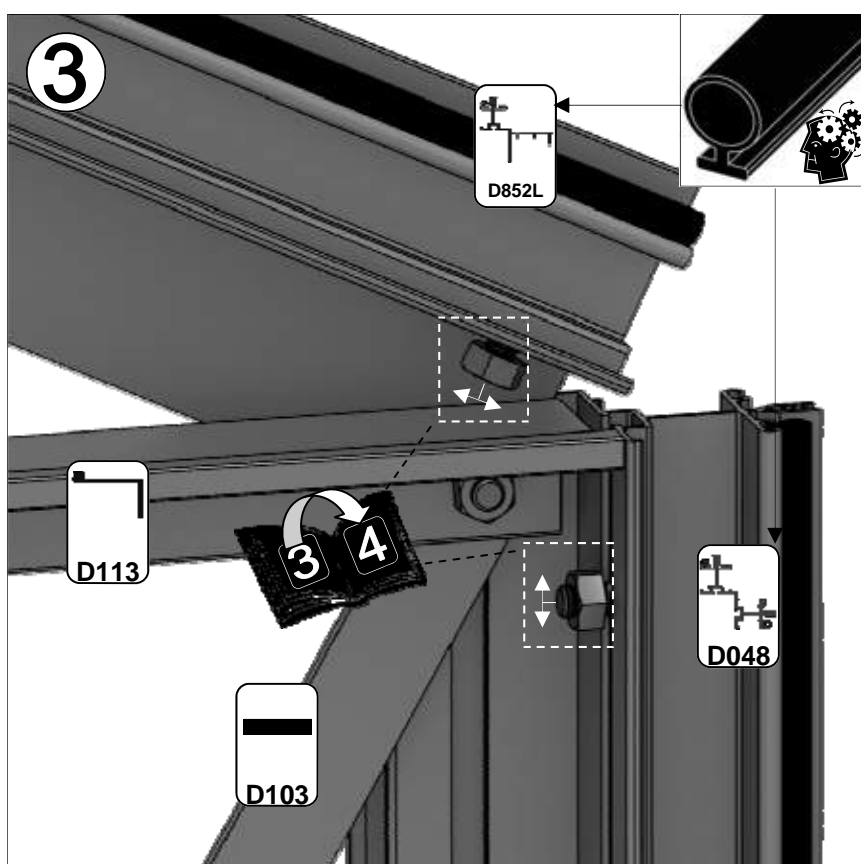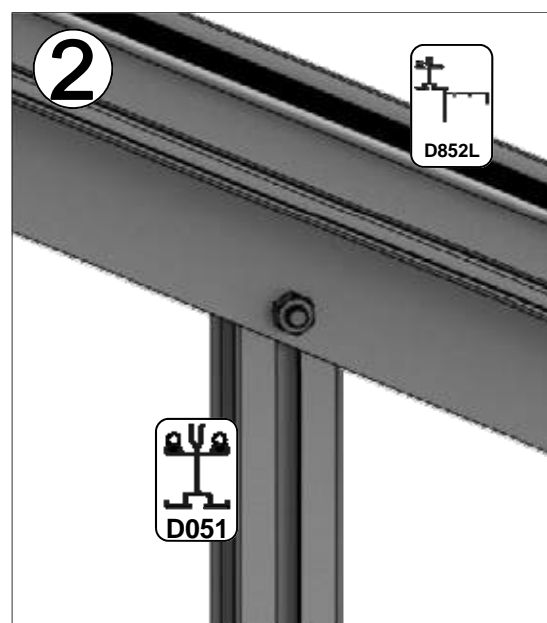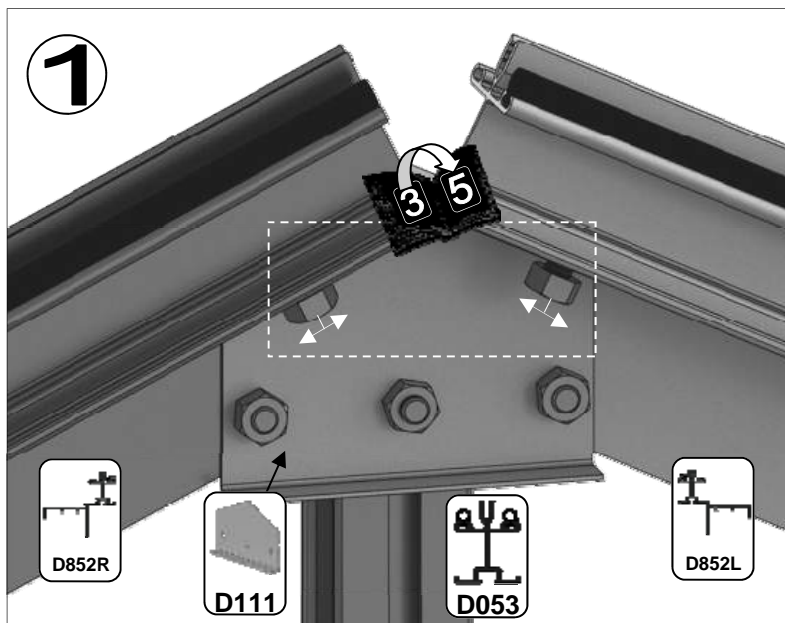

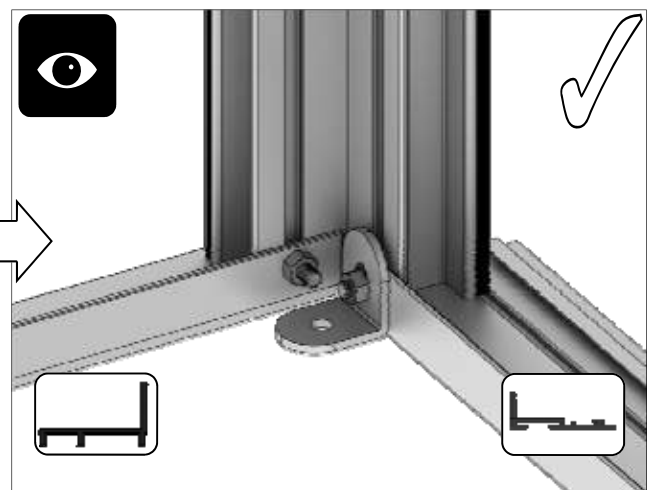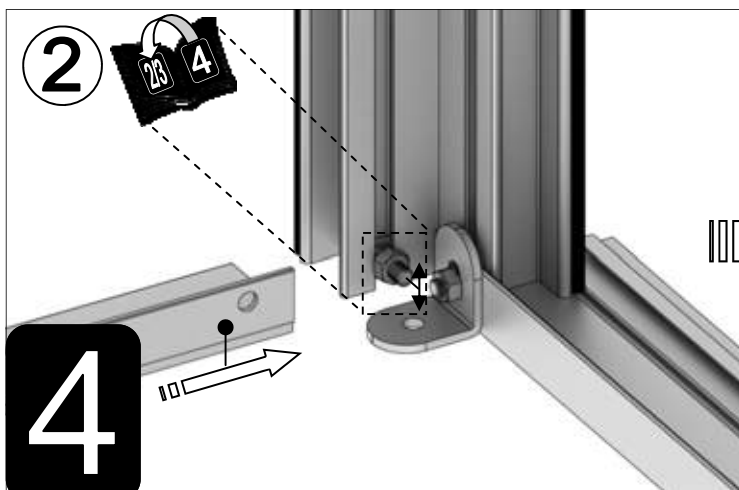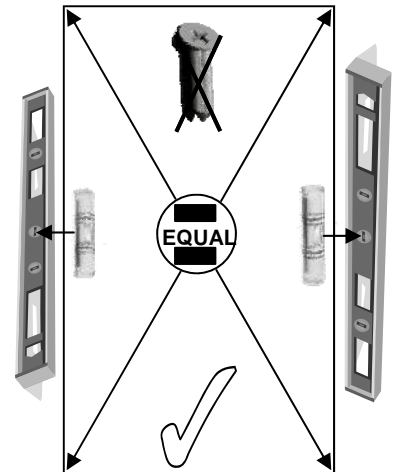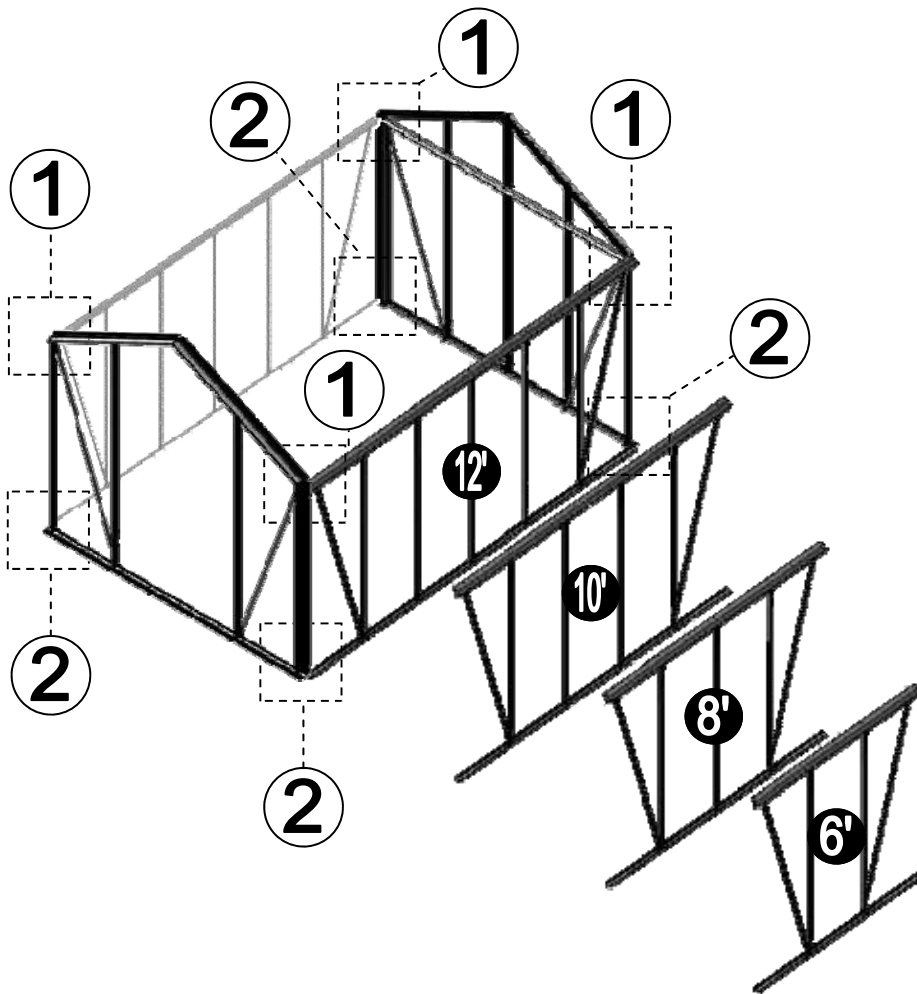
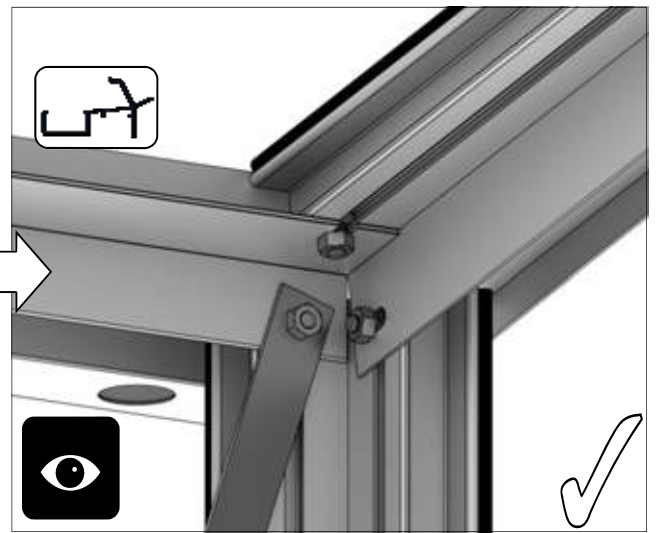
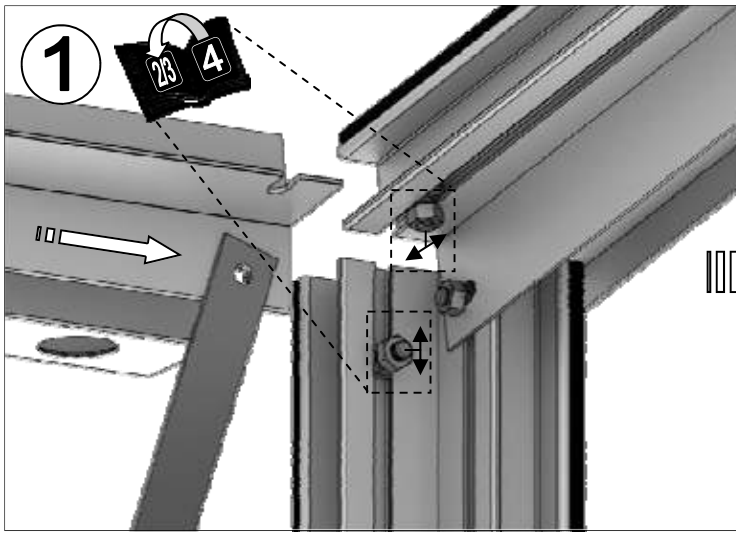




6'		
Part No	mm	Quantity
D044	1897	1
D064	1395	4
D128	1015	0
RUBBER	1000	11.5

8'		
Part No	mm	Quantity
D001	2517	1
D064	1395	6
D128	1015	1
RUBBER	1000	17

10'		
Part No	mm	Quantity
D002	3137	1
D064	1395	8
D128	1015	2
RUBBER	1000	22.5



12'		
Part No	mm	Quantity
D003	3757	1
D064	1395	10
D128	1015	2
RUBBER	1000	28

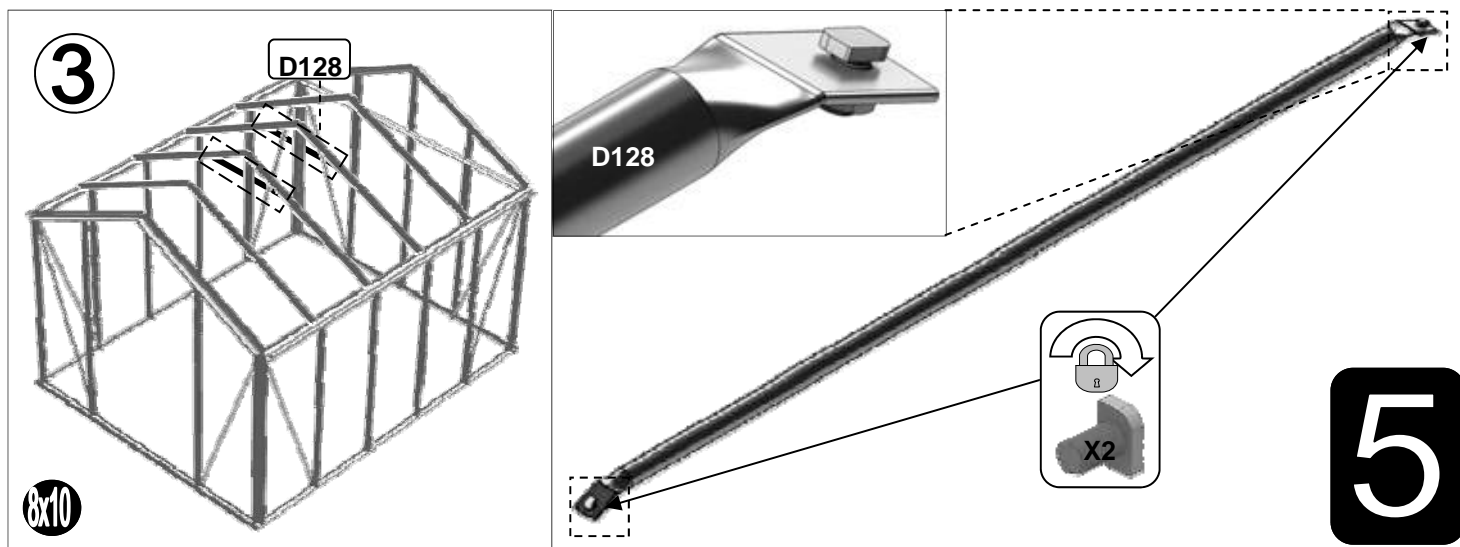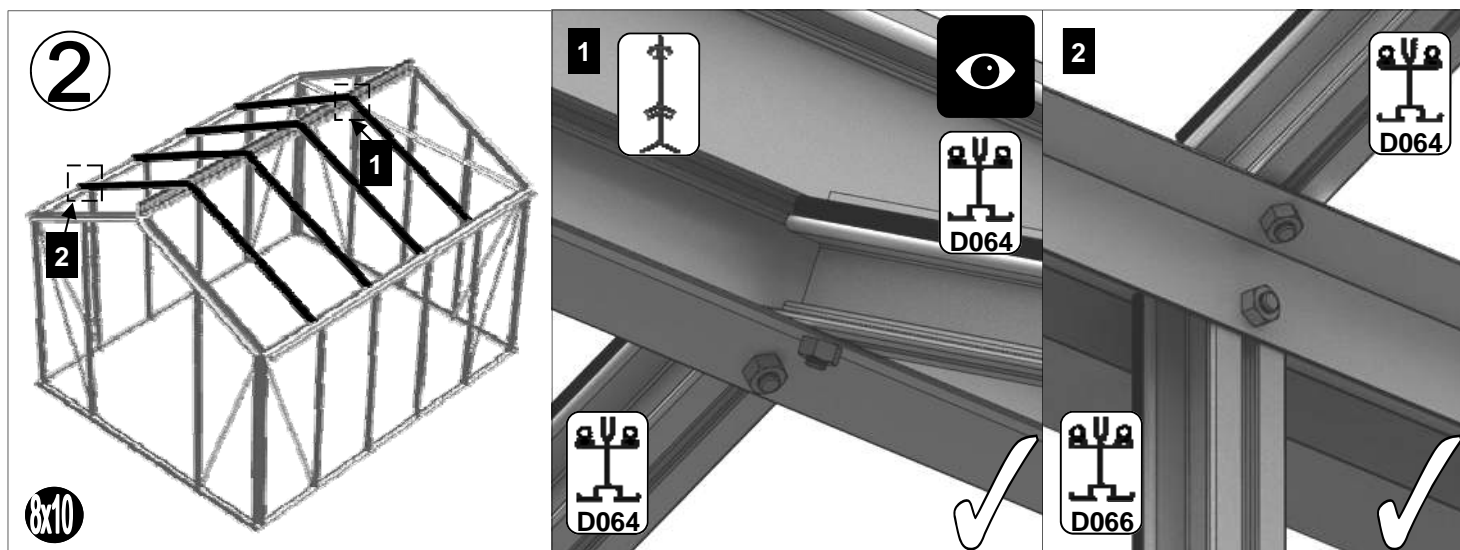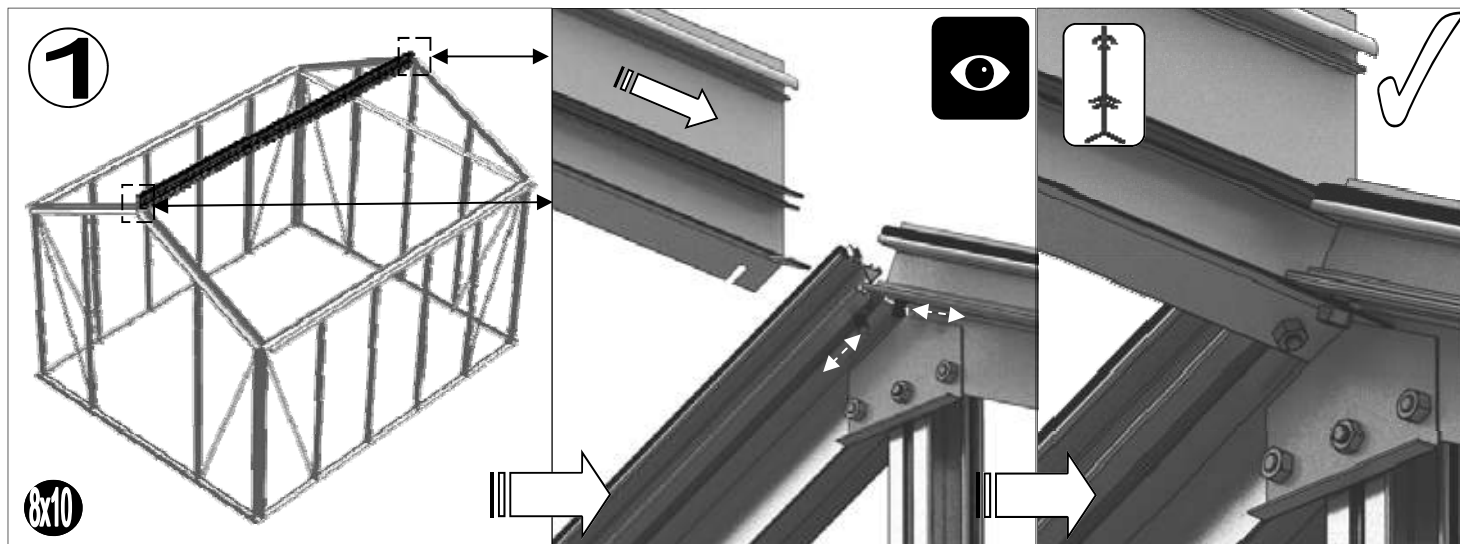

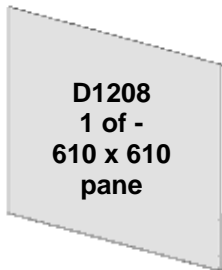
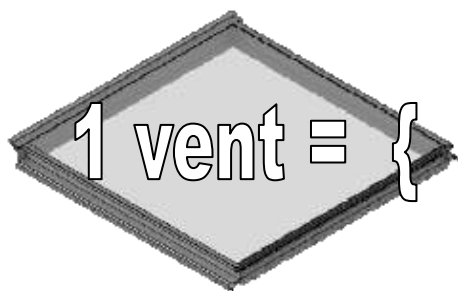


Part No		mm	Quantity
D866		639	1
D863L		613	1
D863R		613	1
D862		593	1


Part No		mm	Quantity
D220 PLUS SCREW		N/A	2
D205		N/A	2
SY-BOLM6X11		10	4
SYNUTM6		M6	4
8 X 12 S/T FS6017		10	2
8 x 19 S/T FS6018		19	2

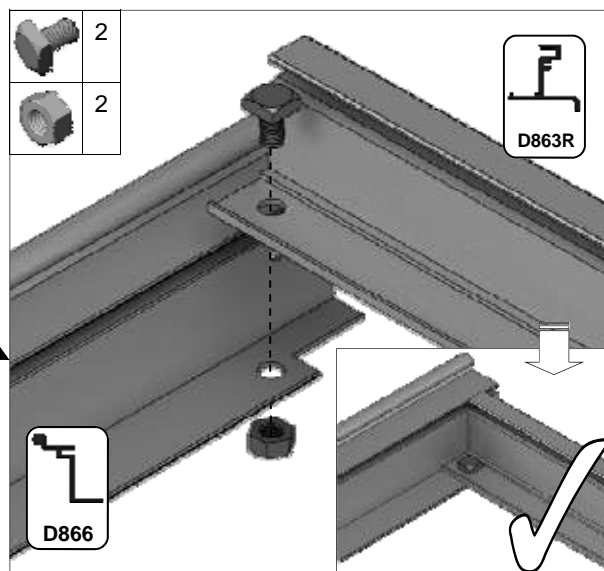
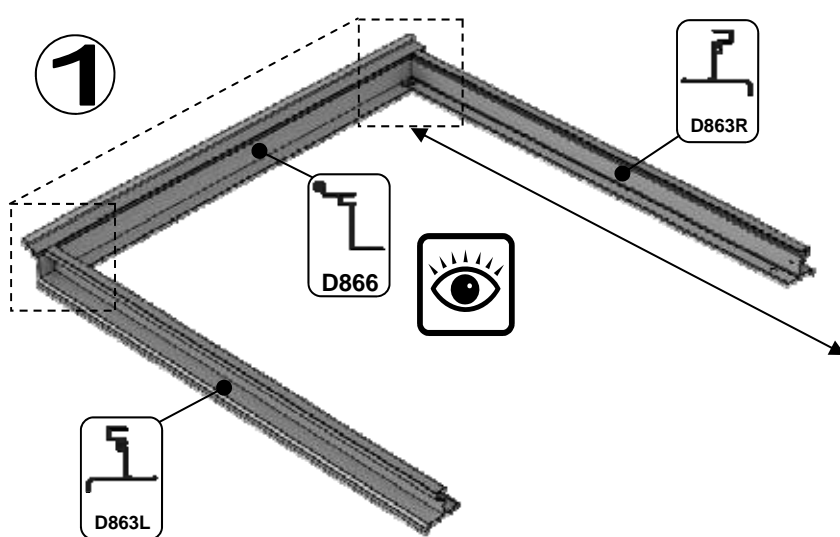


2


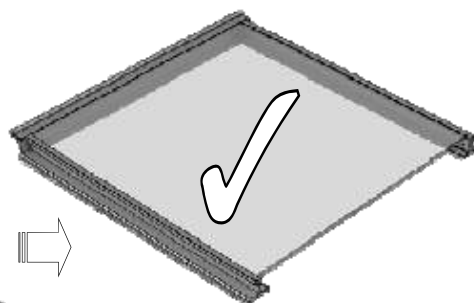
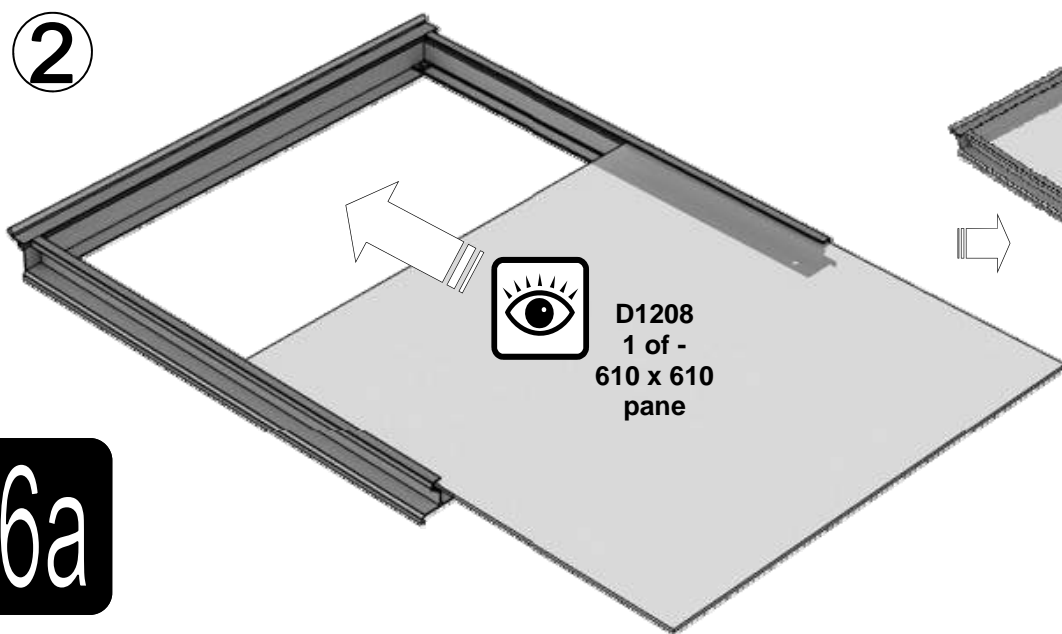


6a



3 

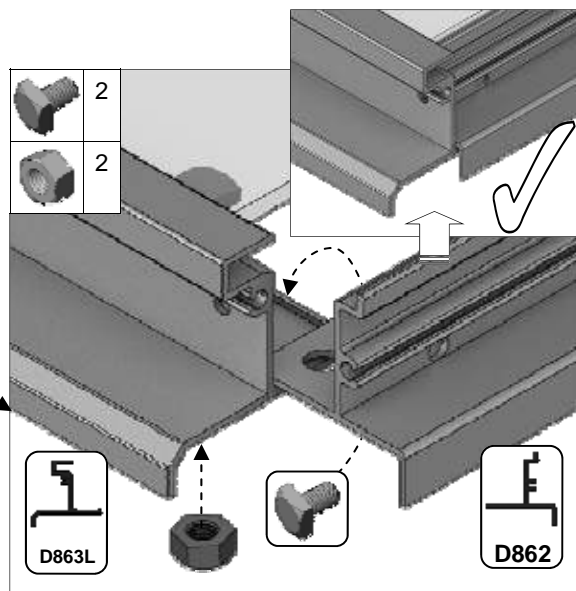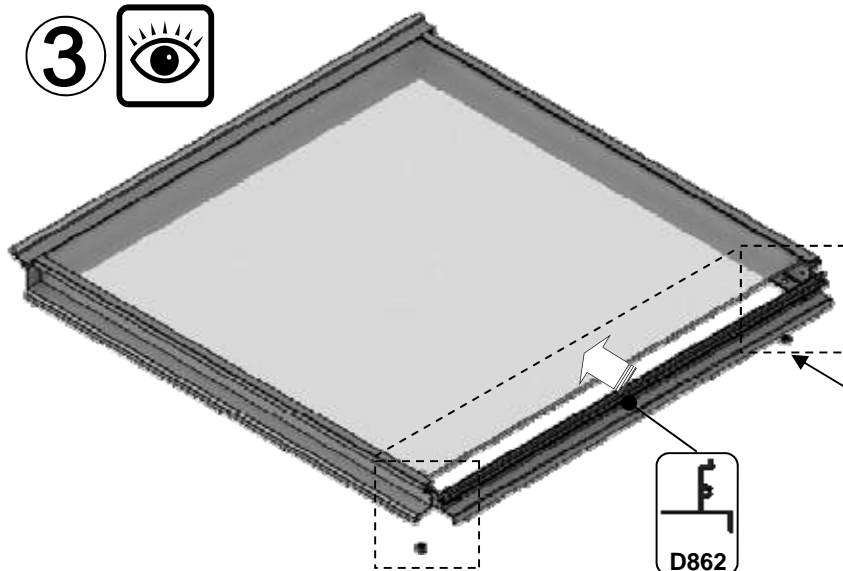

4 

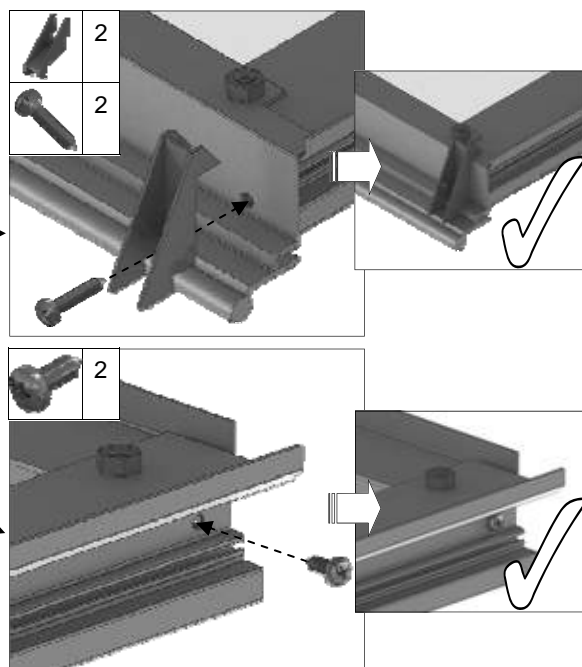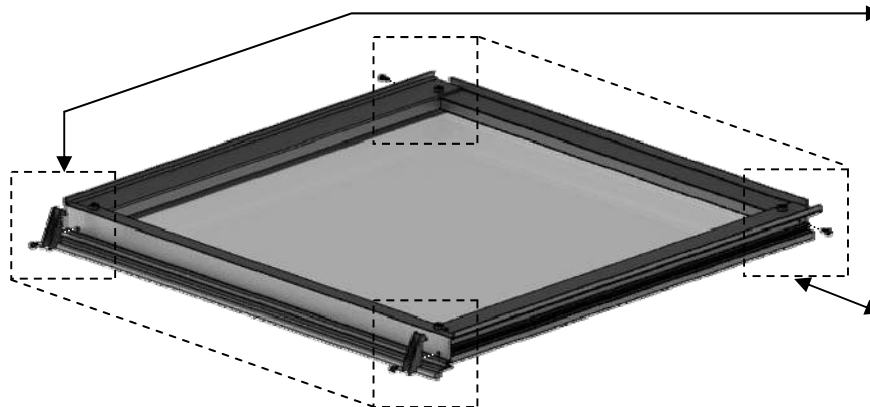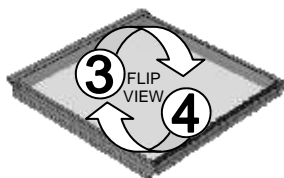



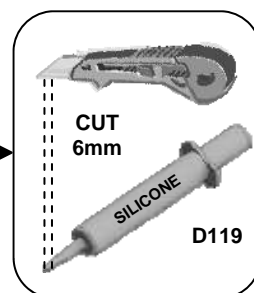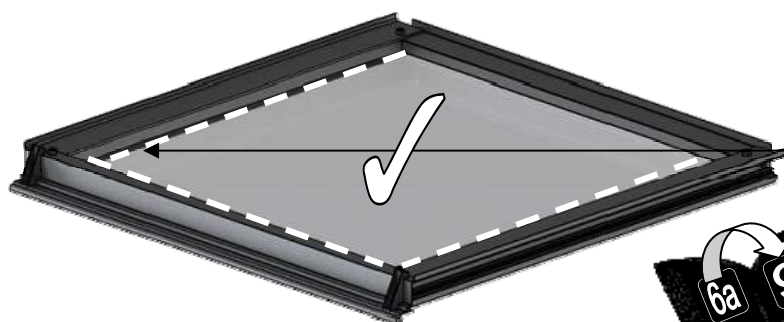



5 




6a

1 vent
slam bar = {





Part No		mm	Quantity
SY-BOLM6X11		10	2
SY-BOLM6X15		15	2
SYBOLM6 X11CROP		10	2
SYNUTM6		N/A	4

Part No		mm	Quantity
D079 PLUS FLUFF		590	1
D114		N/A	2


6

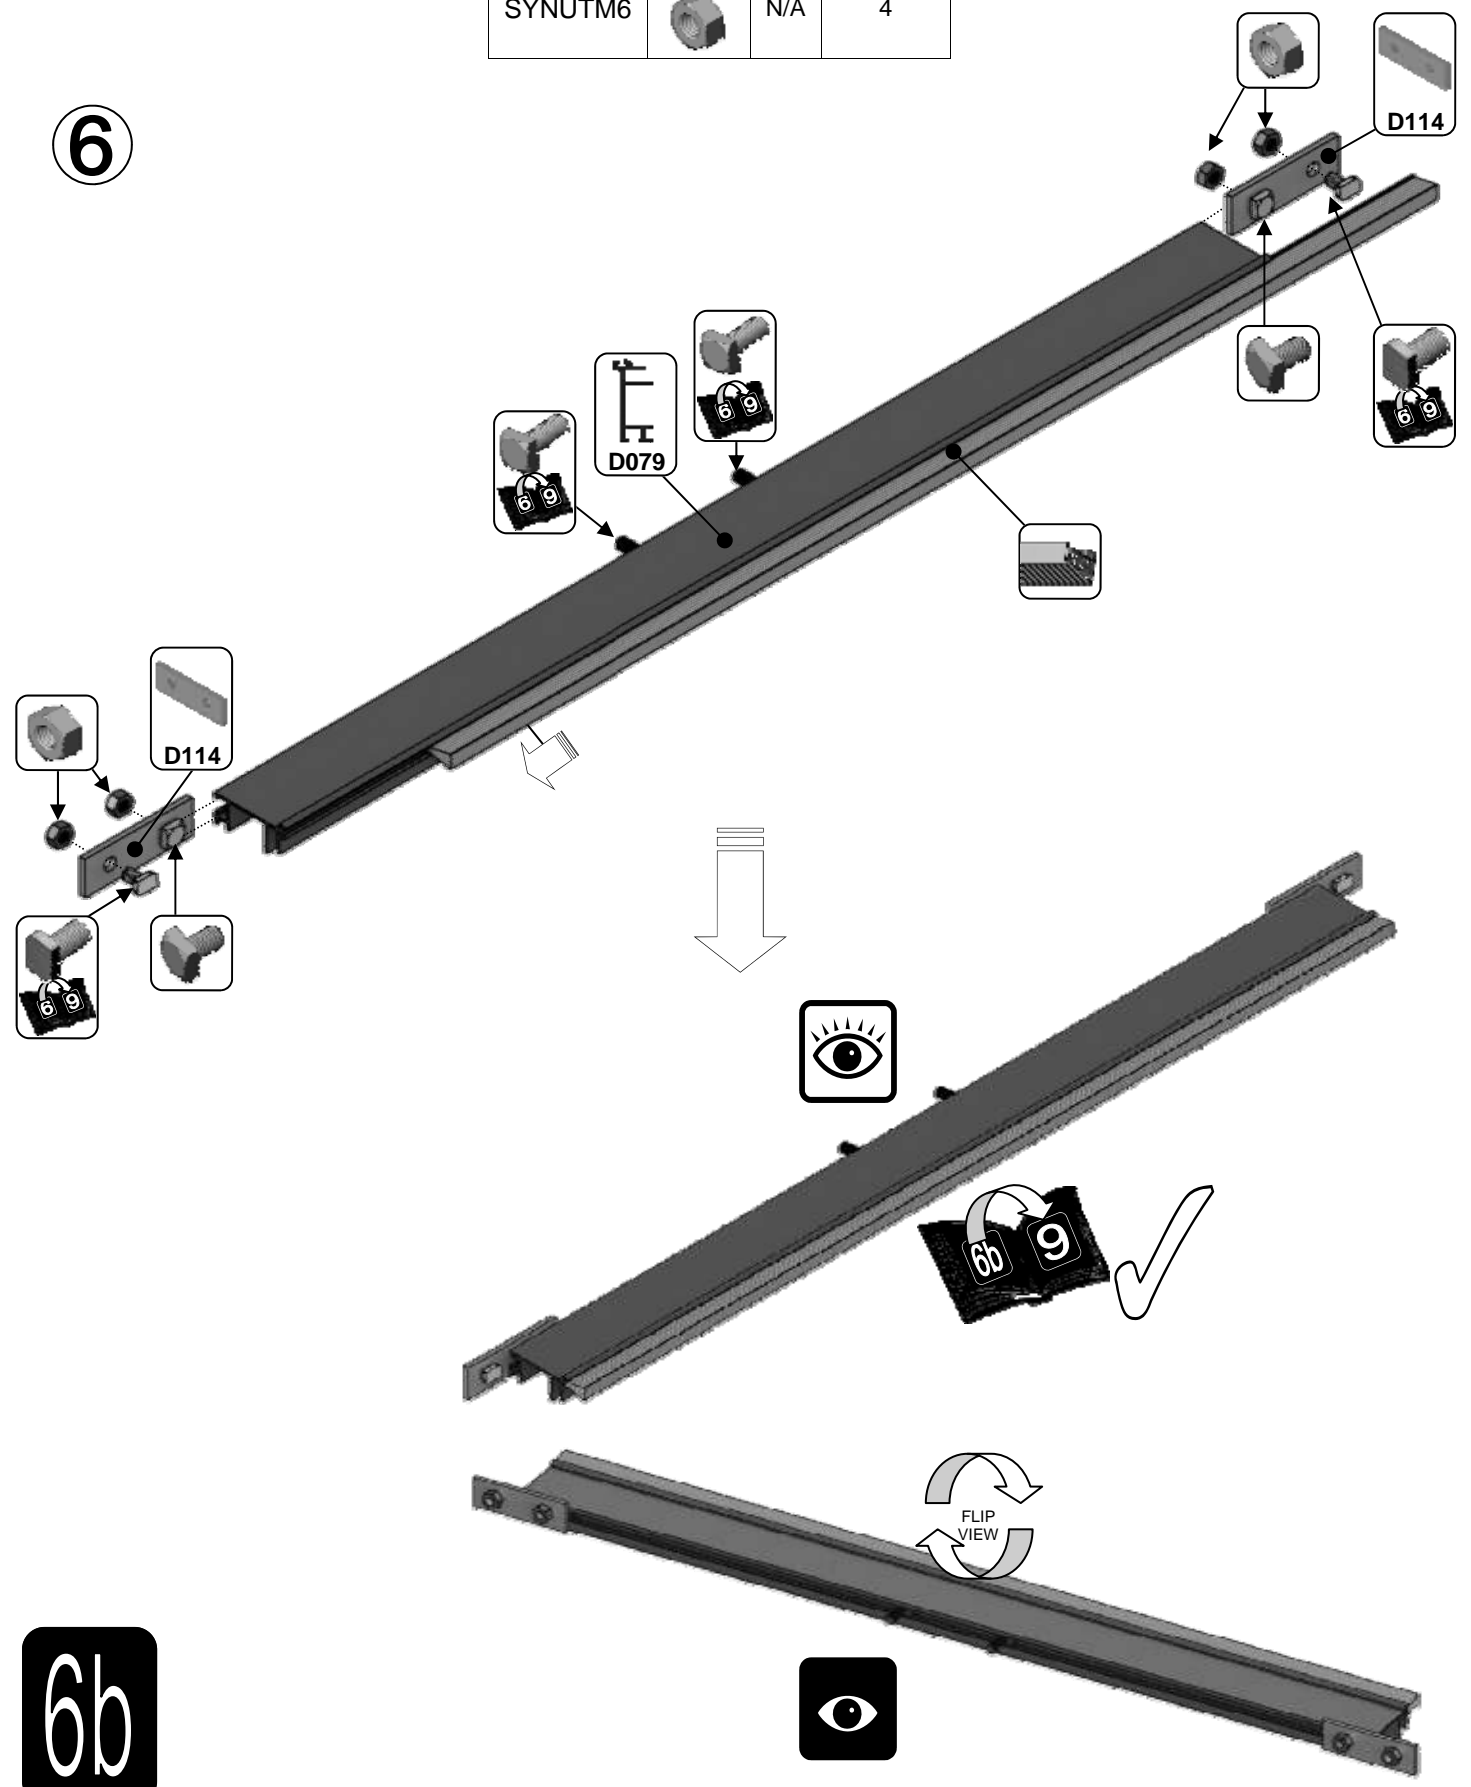

6b

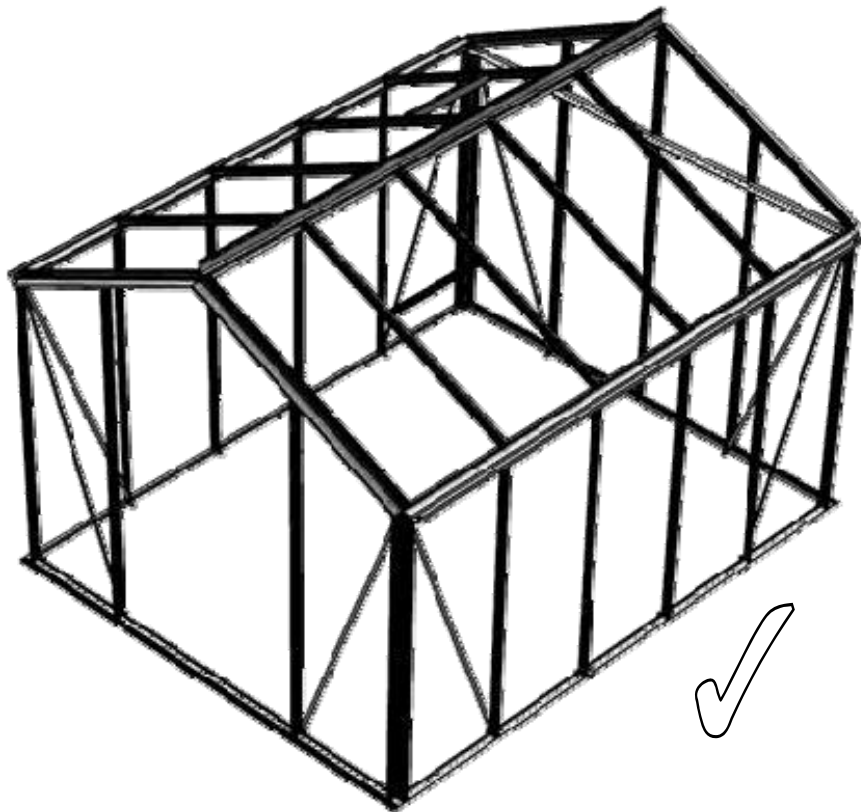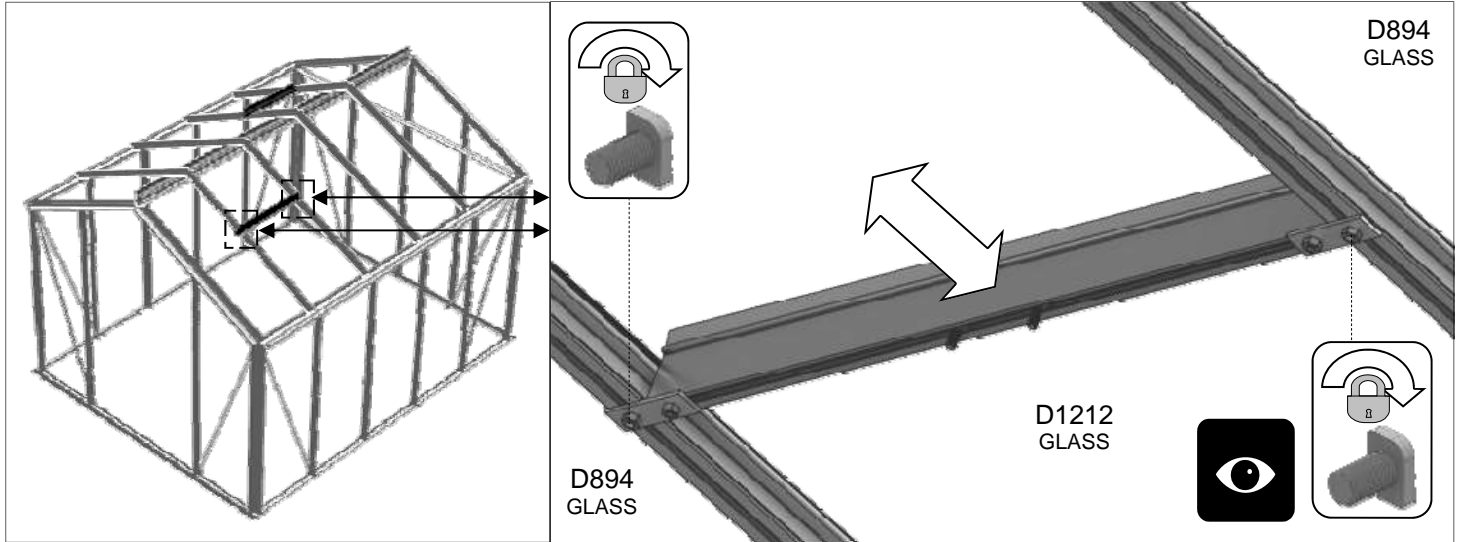
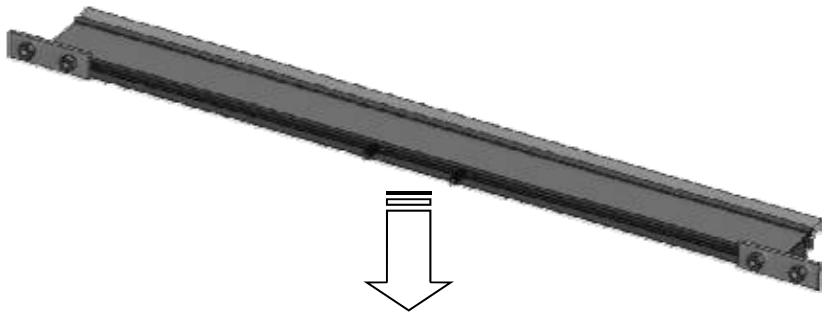










6b

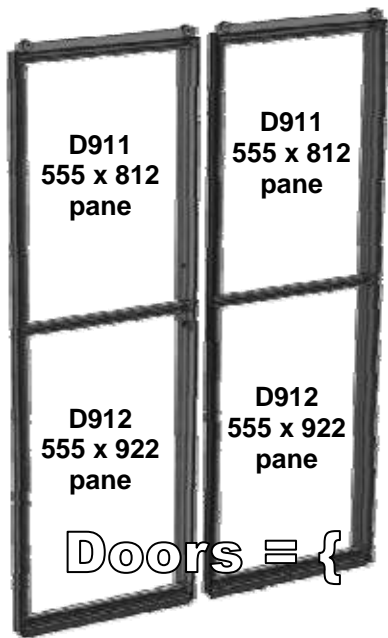






Part No		mm	Q
D094		1824	1
D090 + D347 lock = D301		1824	1
D092 + D156 strike = D303		1824	1
D093		1824	1
D096 + D217 wheel = D307		611	2
D095		611	2
D097		611	2

Part No		mm	Q
D232		905	4
D233		797	4
P053		N/A	2
D225		610	2
D840B		4000	1
D263 PACK x 2		N/A	14
		N/A	14
D261 PACK		N/A	24

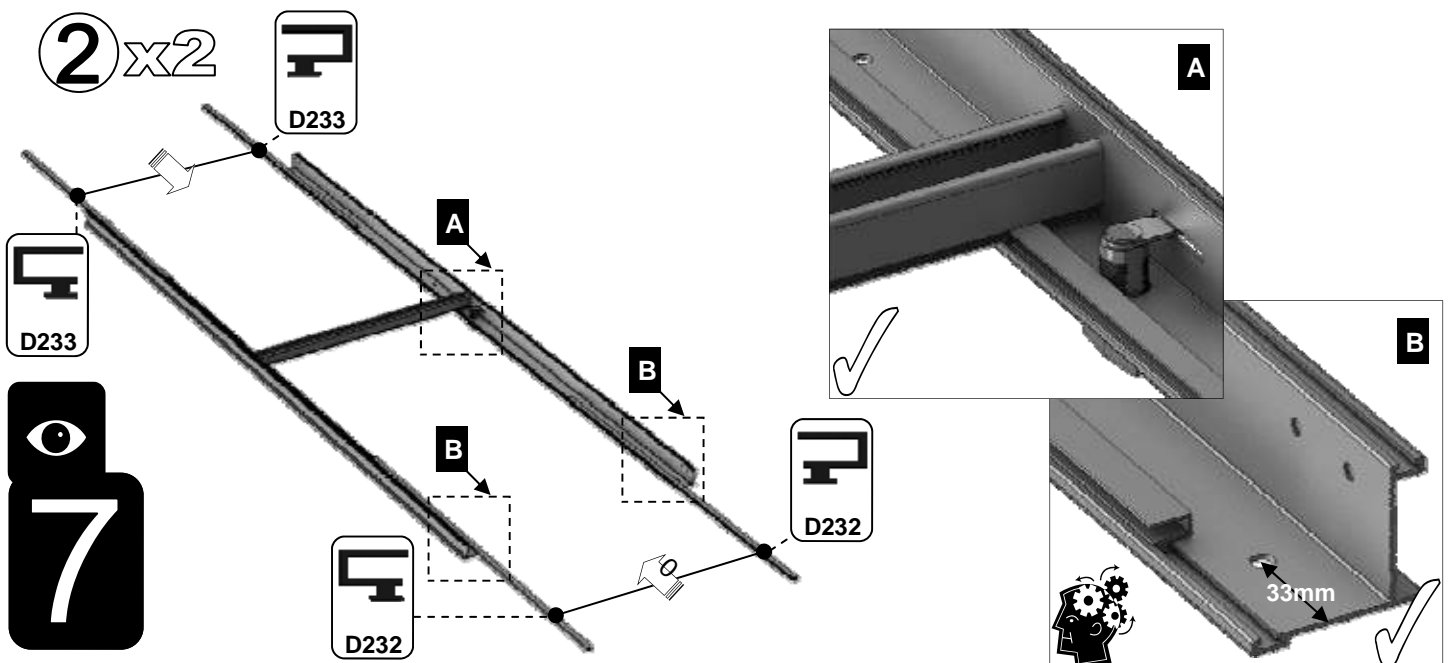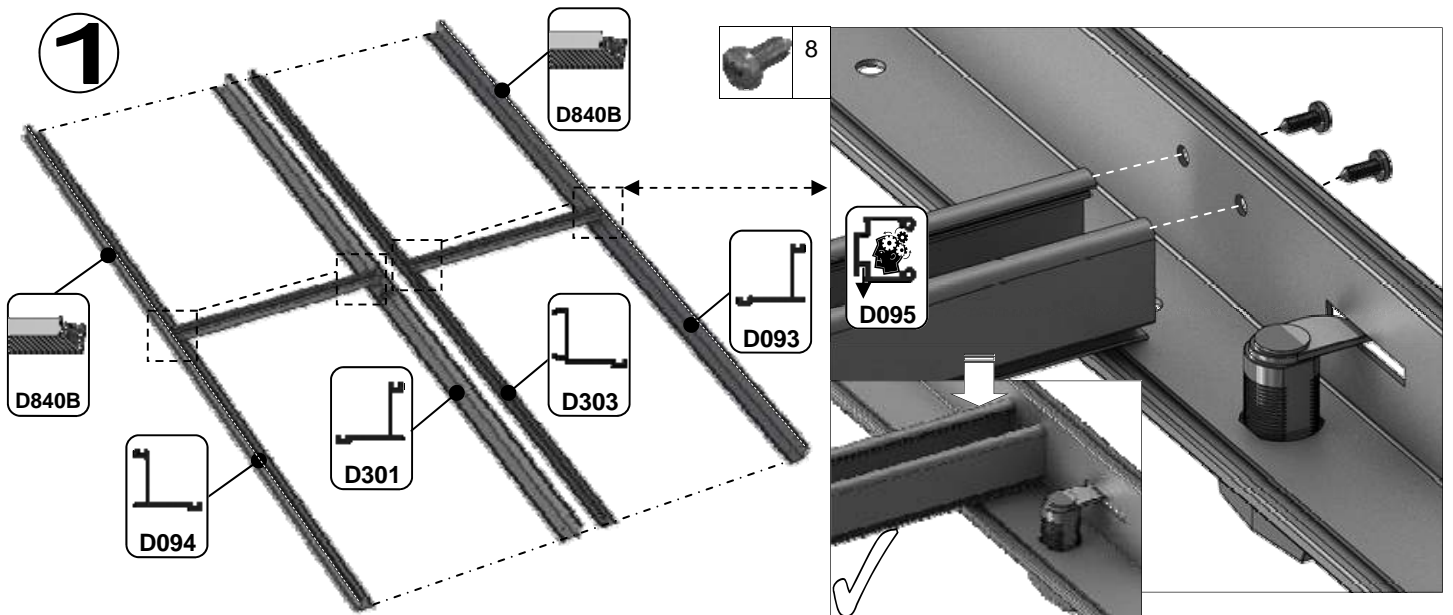

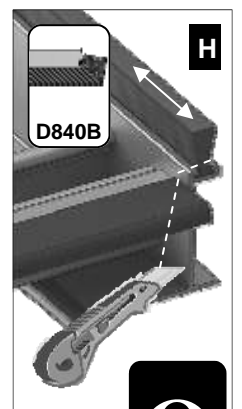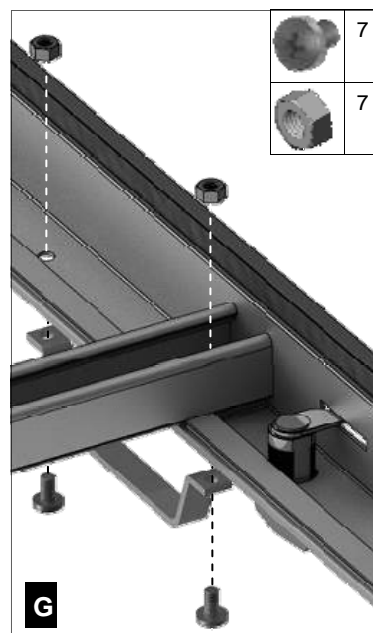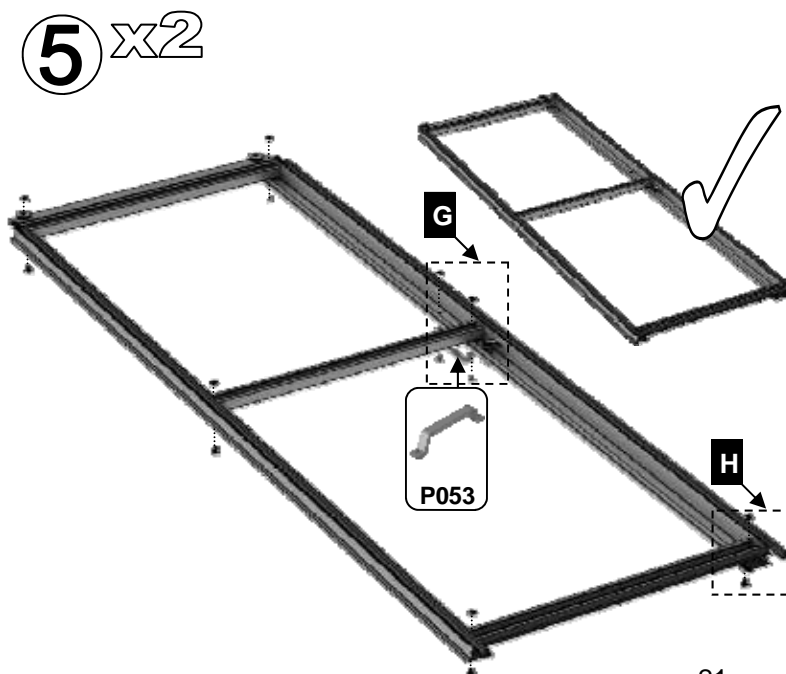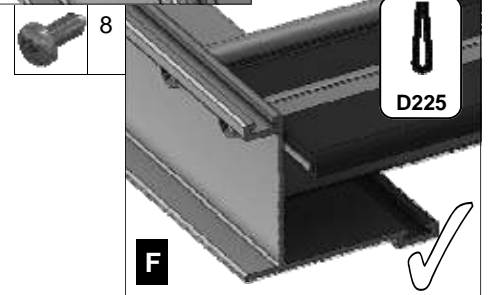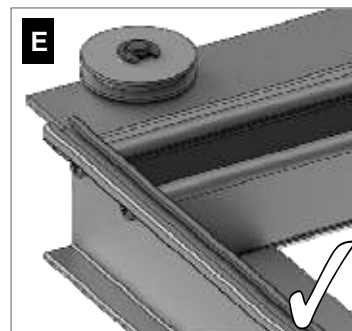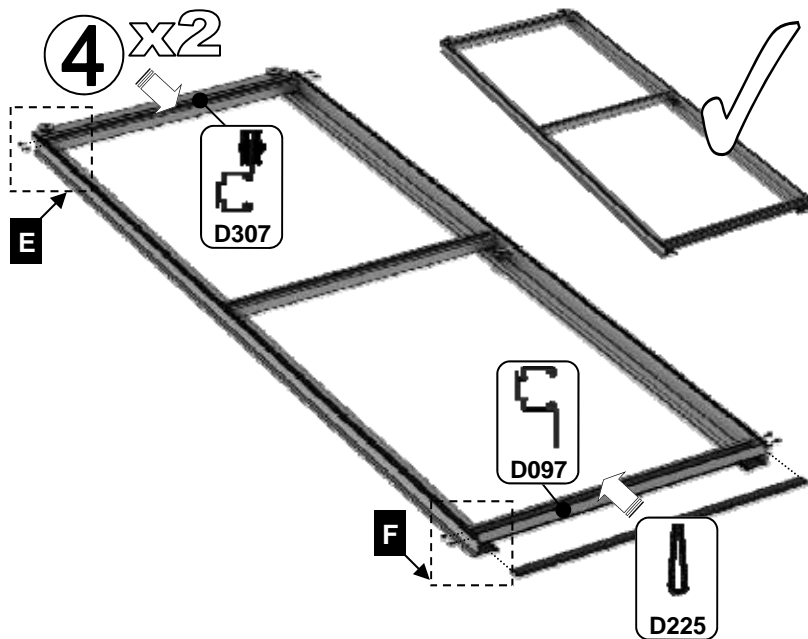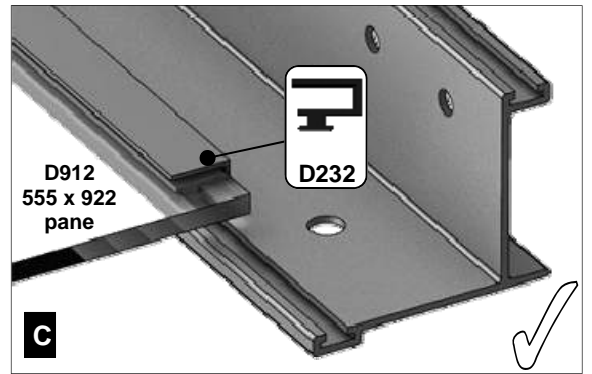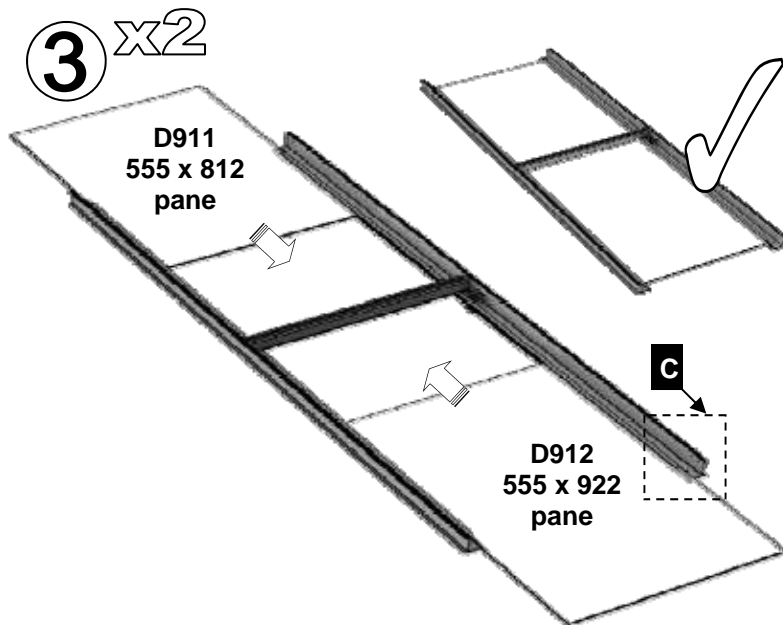





PART No	Section	Size (mm)
D812		1660
D816		1976
D817		77
D820		2272
D821		366
D896		1406
D813		1675
D814		1883
D834		1660
D897		1406
D810		1405
D825		1660
D826		1677
D828		1978
D830		2274
D831		368
D836		1883
D837		79

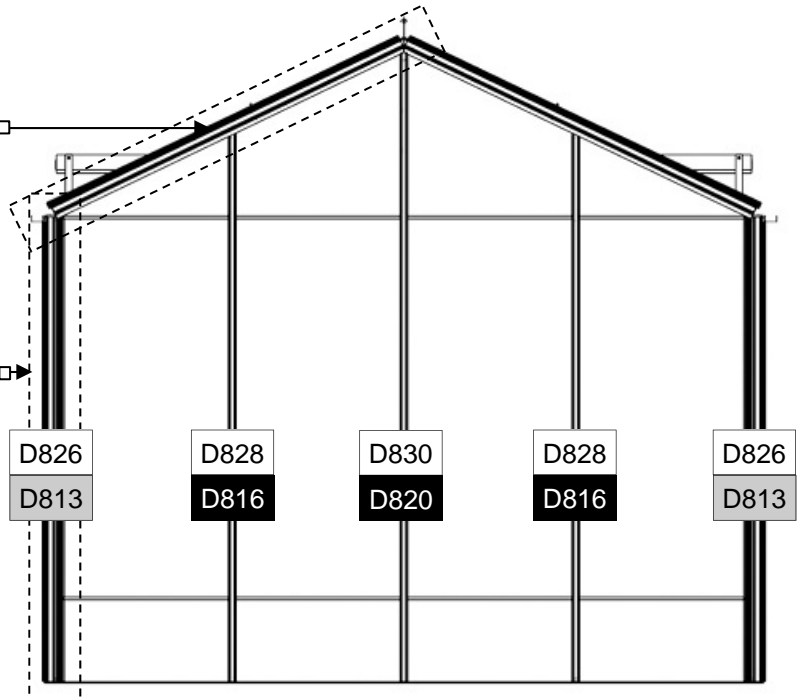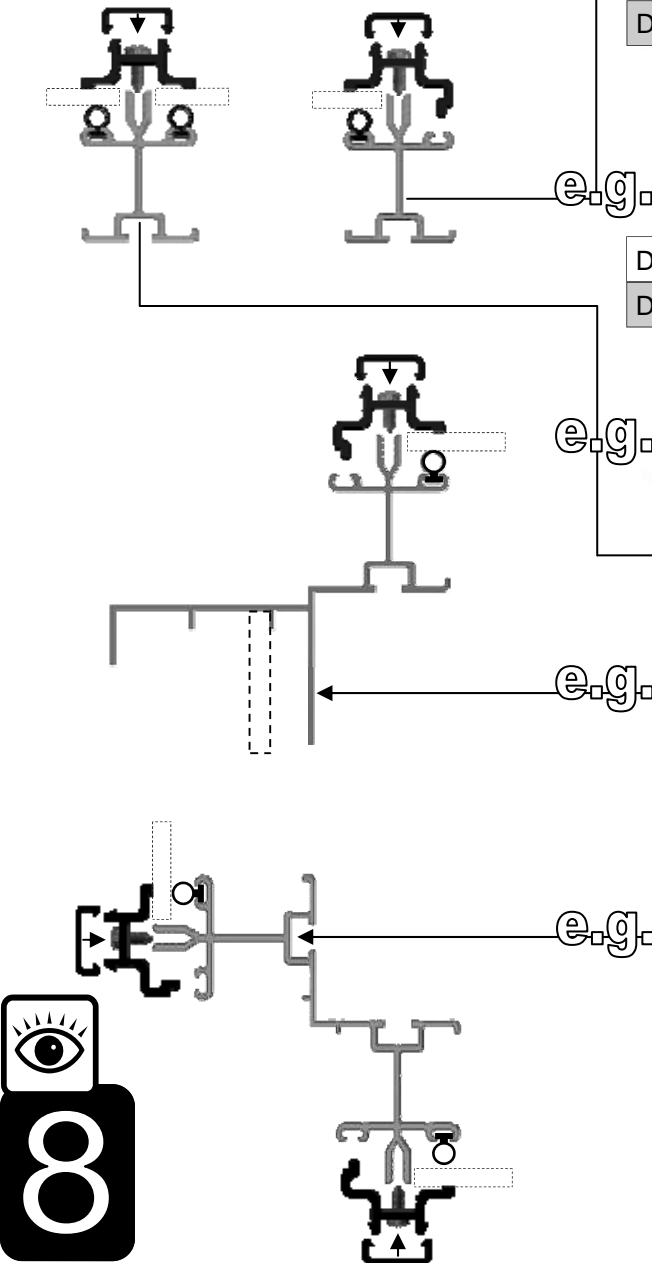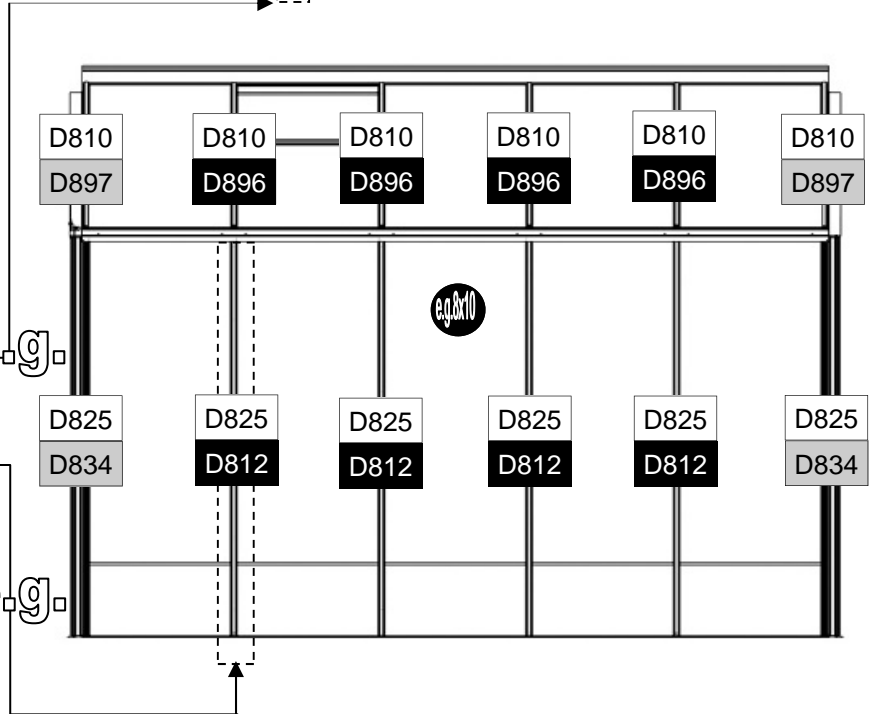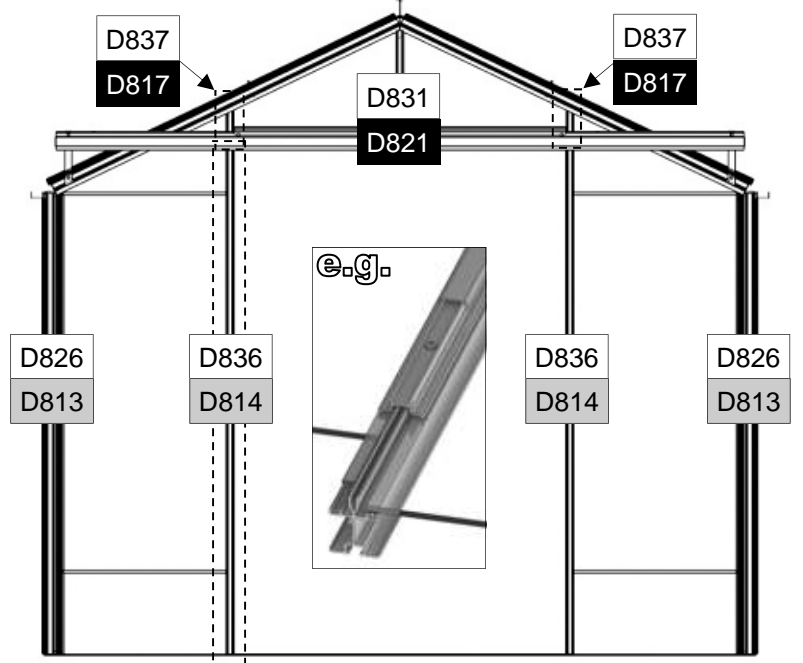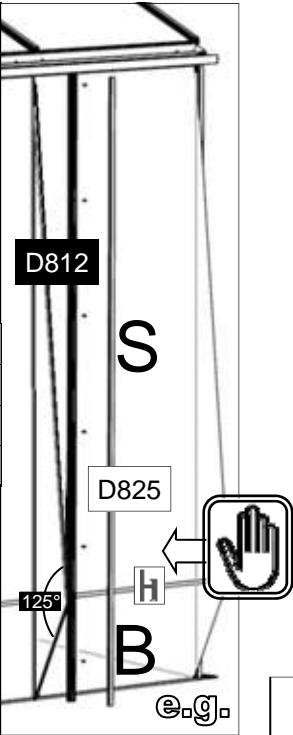



ROYALE TOUGHENED GLASS





e.g. 8x10

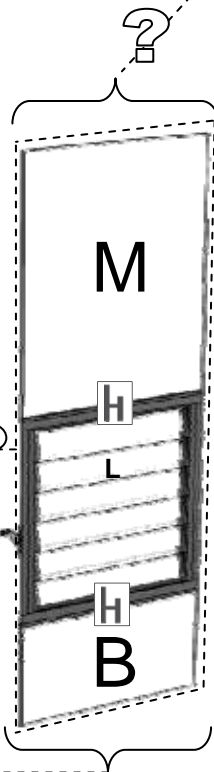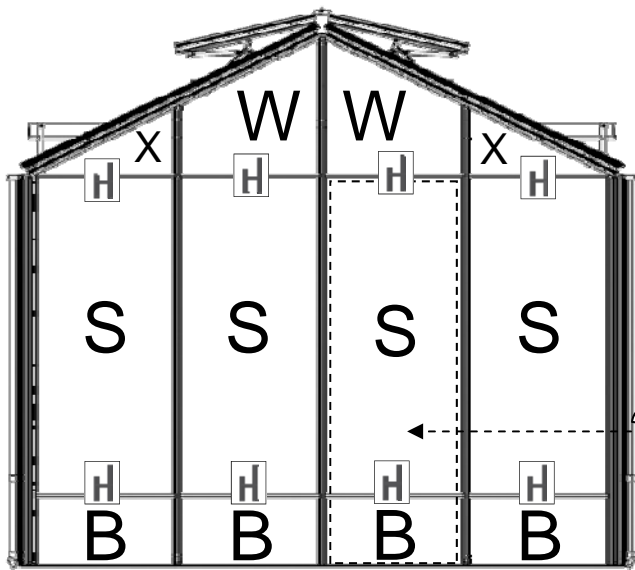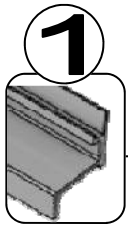
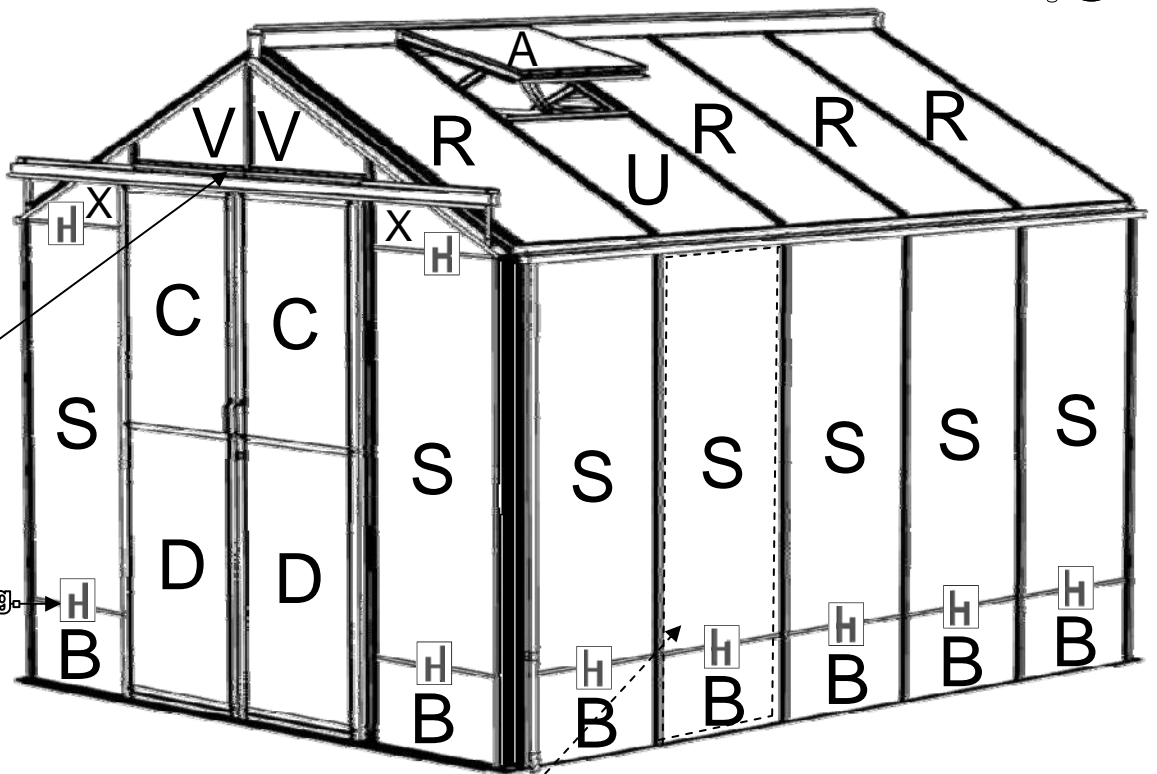






PART No		Size (mm)	6'	8'	10'	12'
D1206	S	610 X 1374	12	14	16	18
D894	R	610 X 1413	5	6	8	9
D1212	U	610 X 812	1	2	2	3
D1208	A	610 X 610	1	2	2	3
D1254	B	610 X 305	12	14	16	18
D911	C	555 X 812	2			
D912	D	555 X 922	2			
D900	X	ANGLE	4			
D1230	V	ANGLE	2			
D908	W	ANGLE	2			
D223/B		1210	1			
D236/B	H	610 long	18	20	22	24



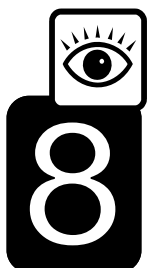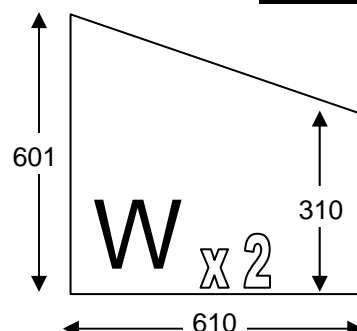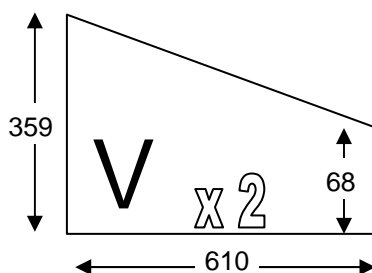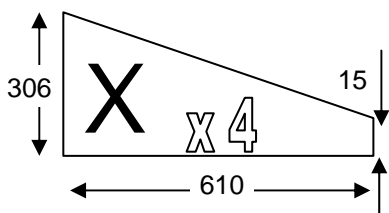


D906	M	610 X 762	1
D729	L	525X 100	6
D236/B	H	610 long	1


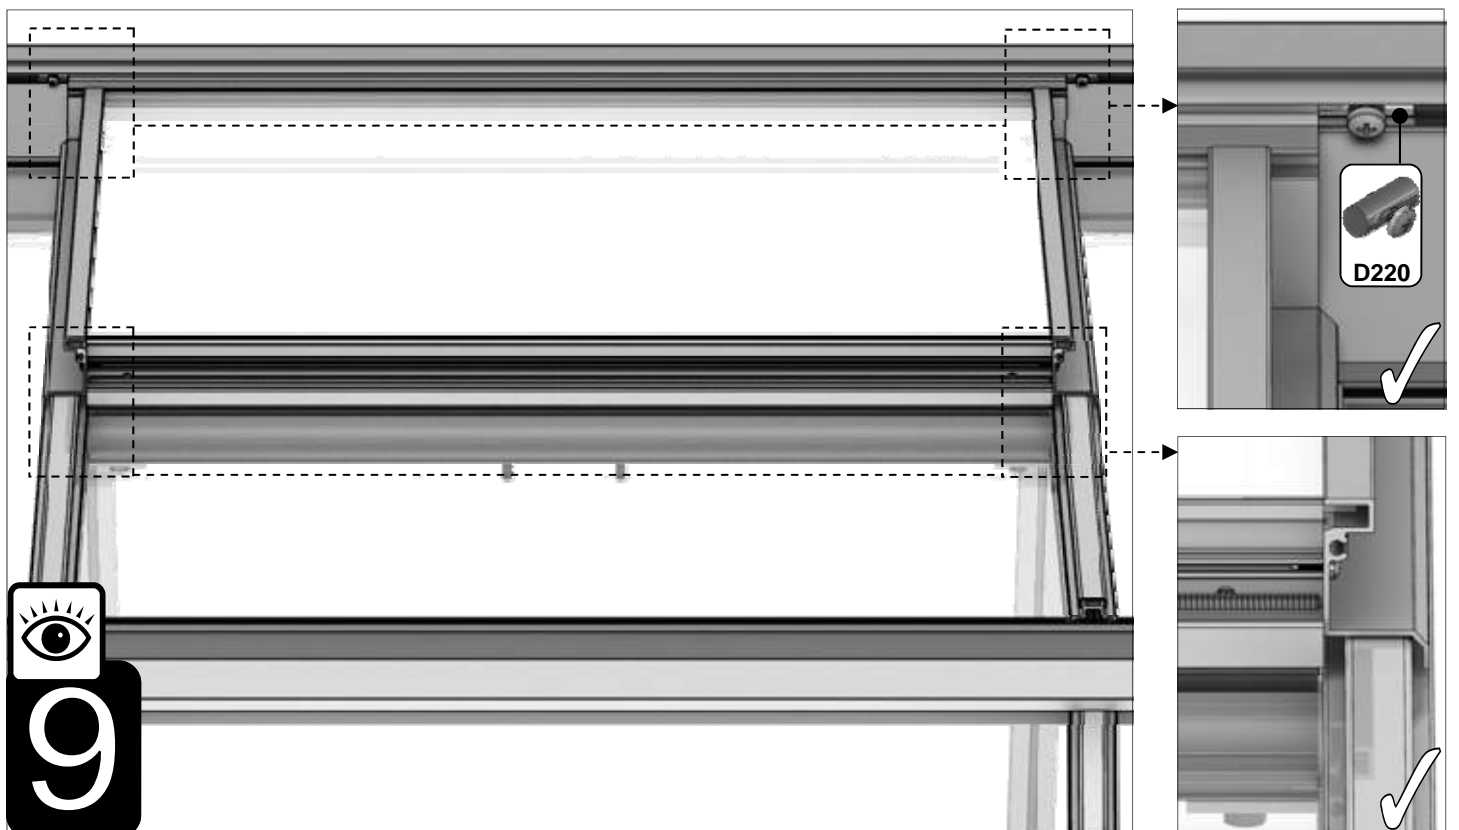
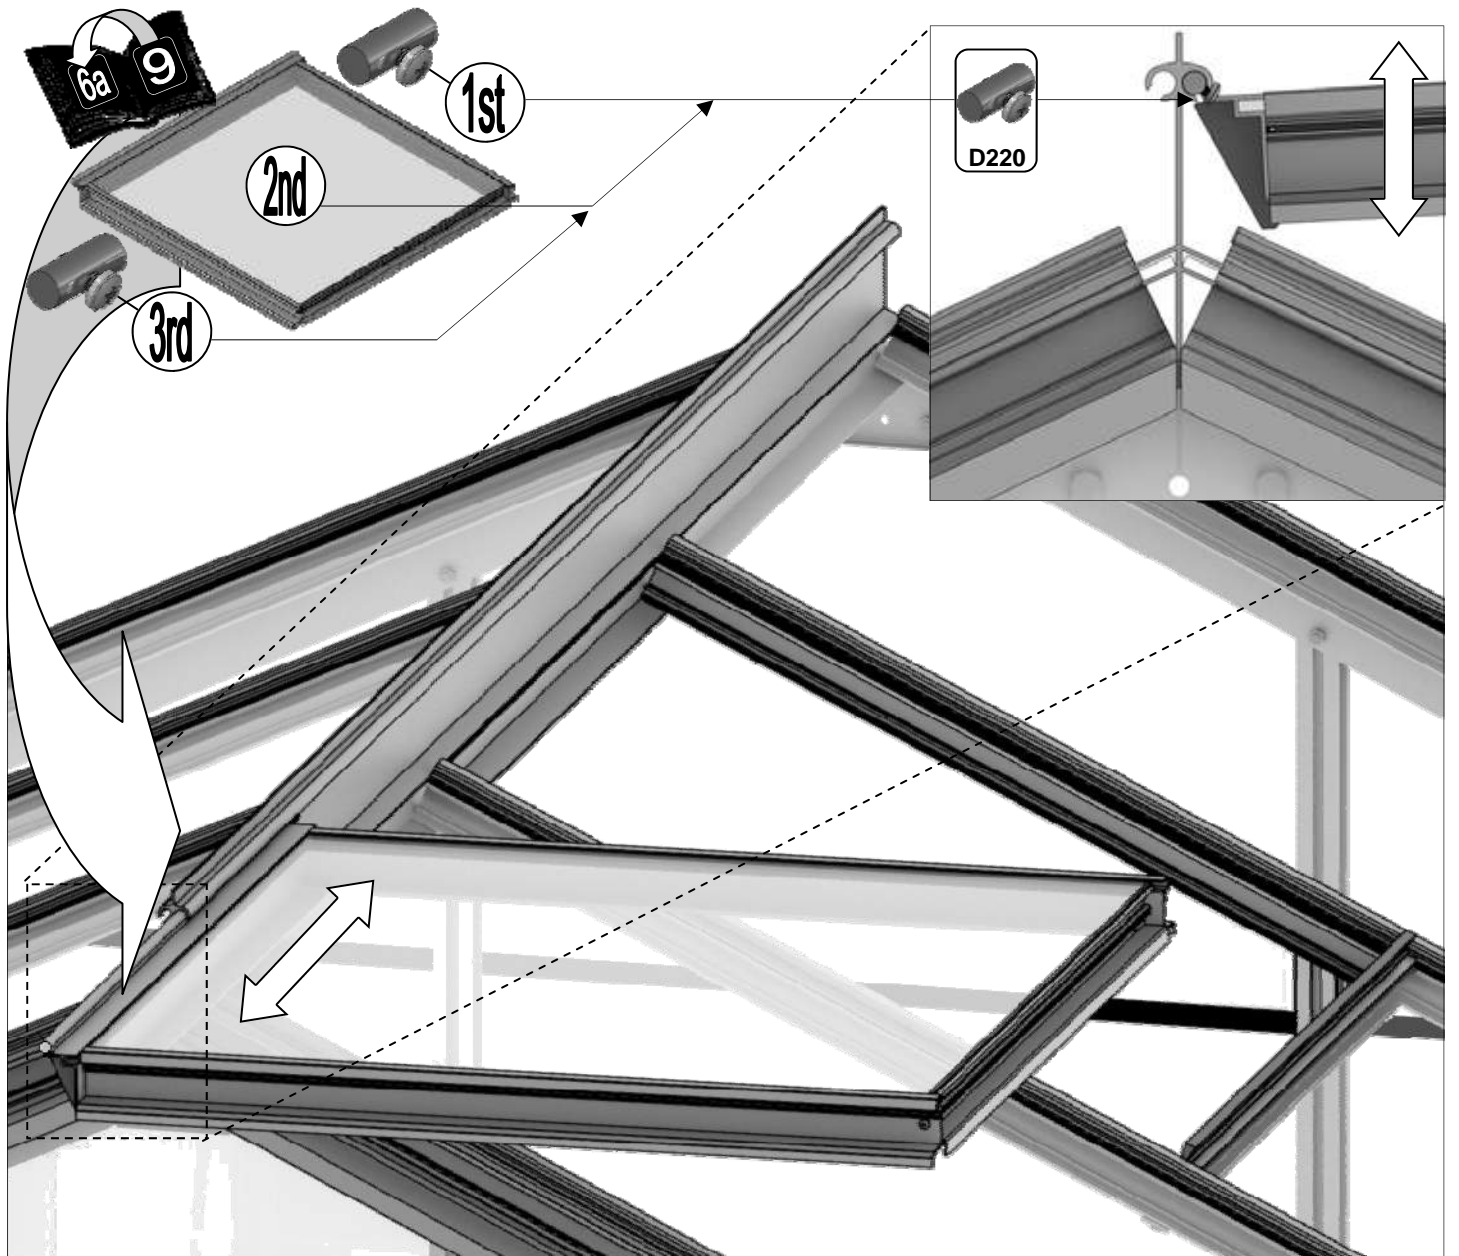


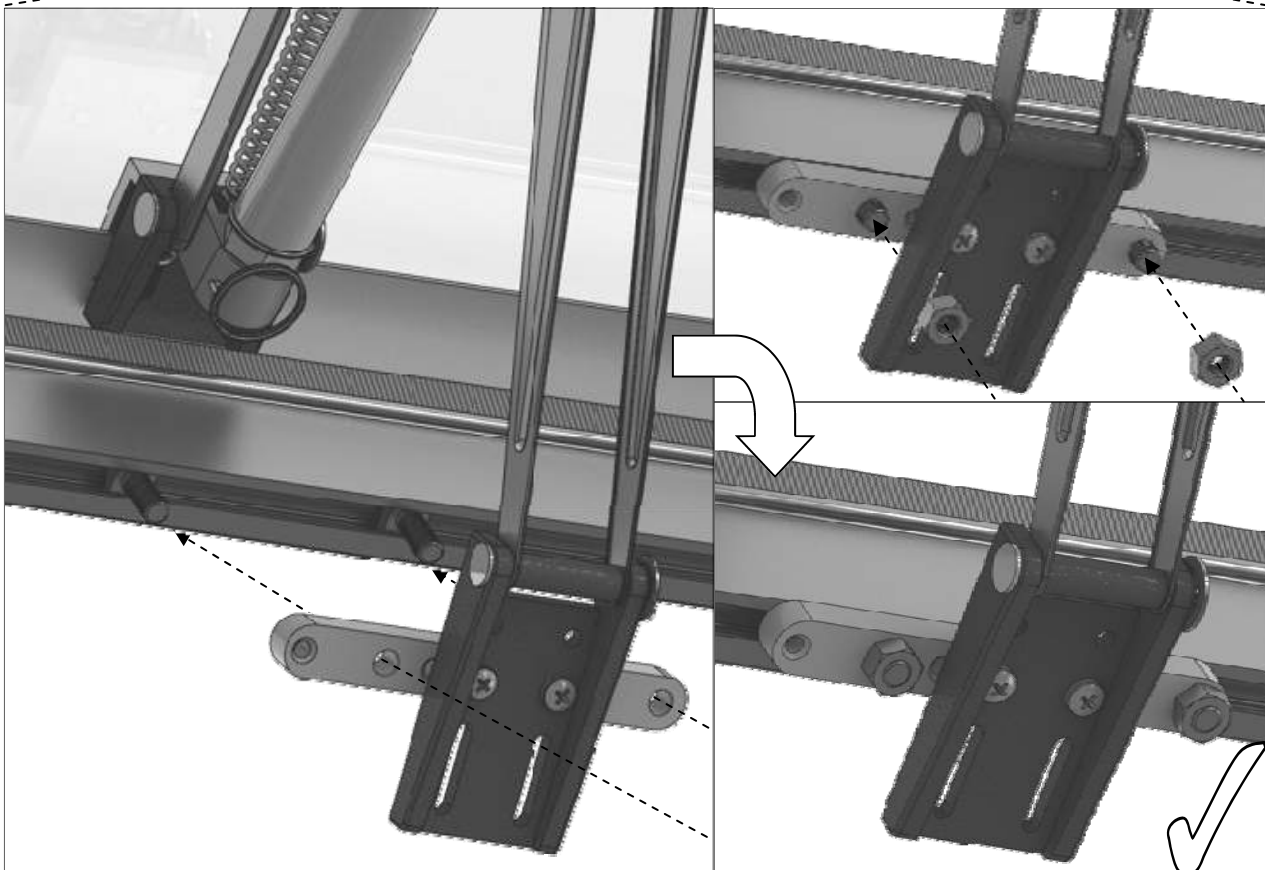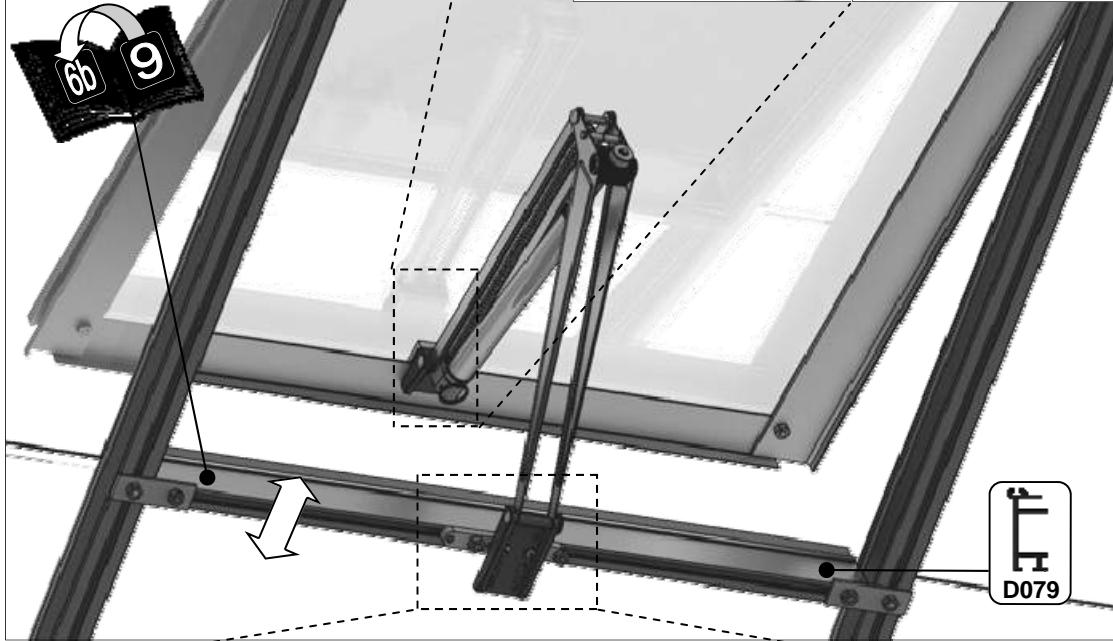
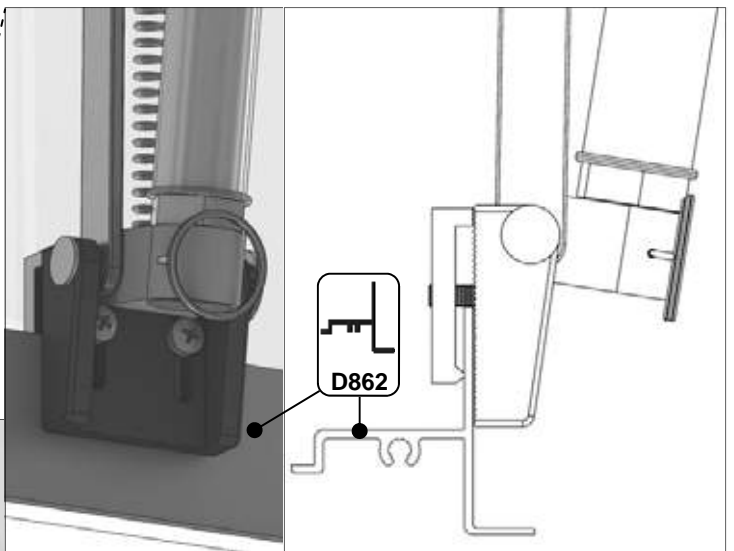
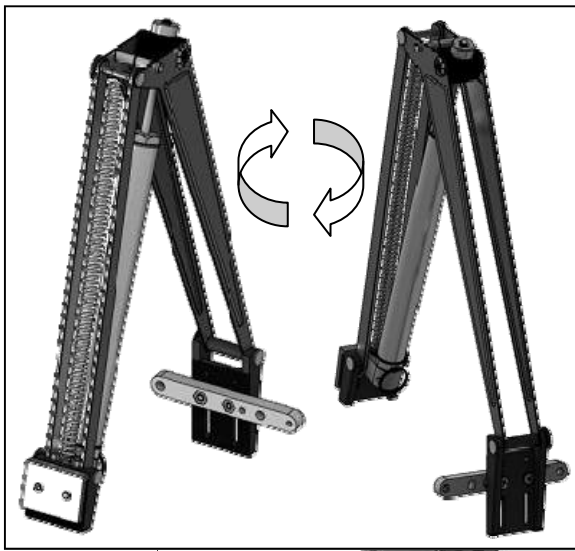






Part No		mm	Q
D865		1210	1
D086		2510	1
D085		2510	1

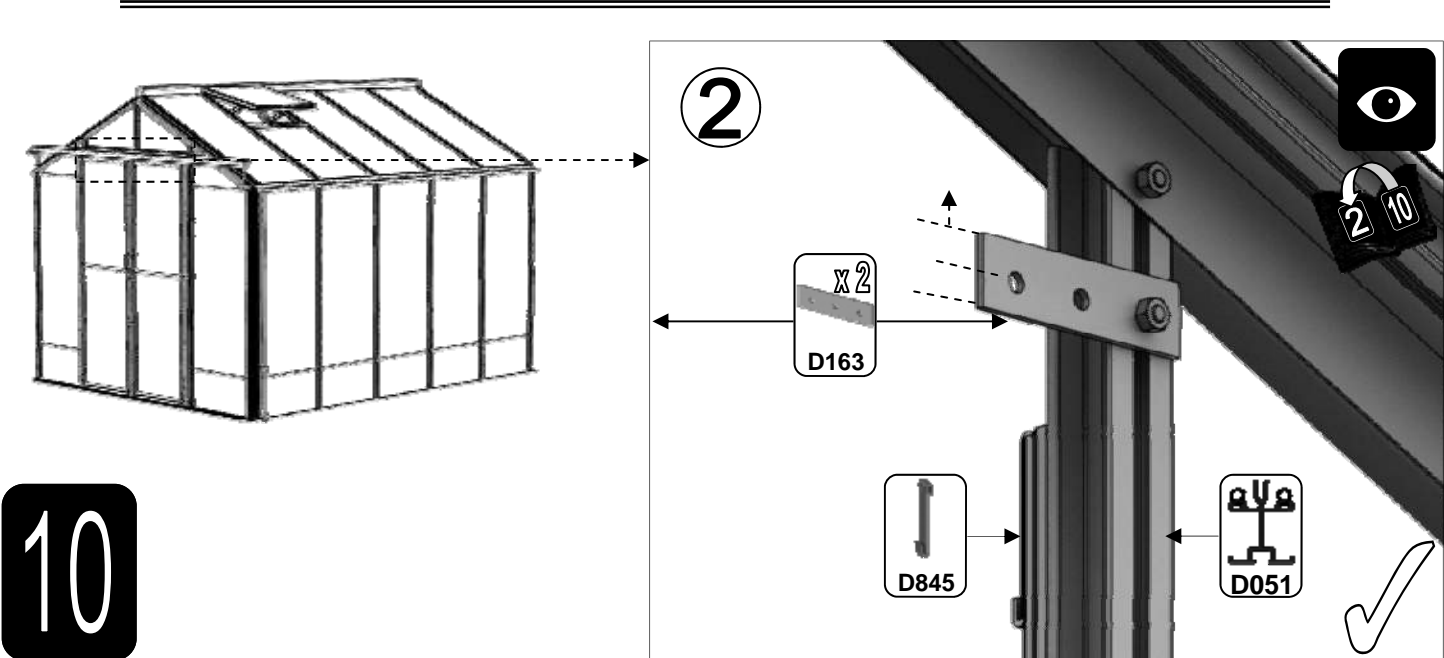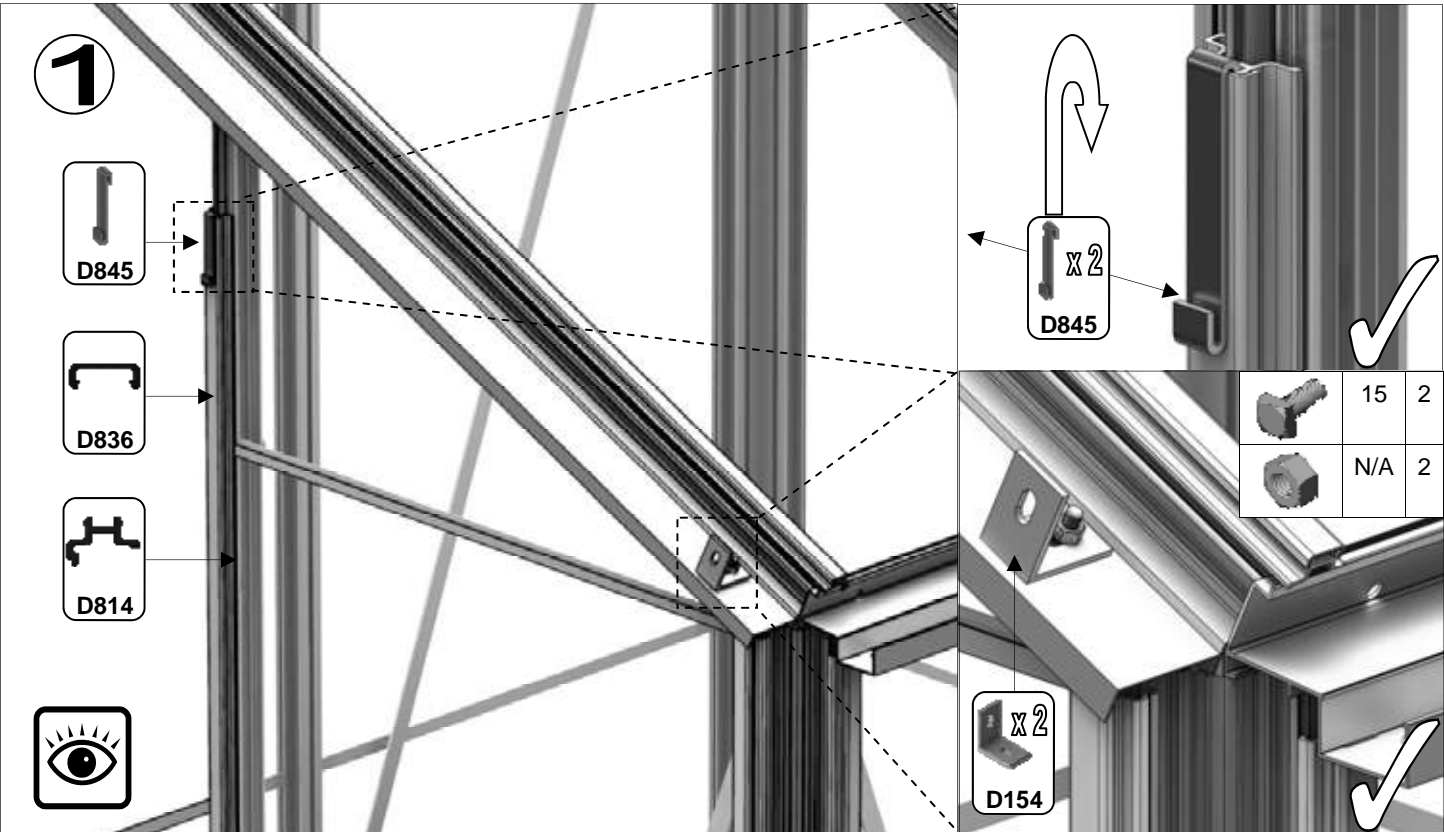
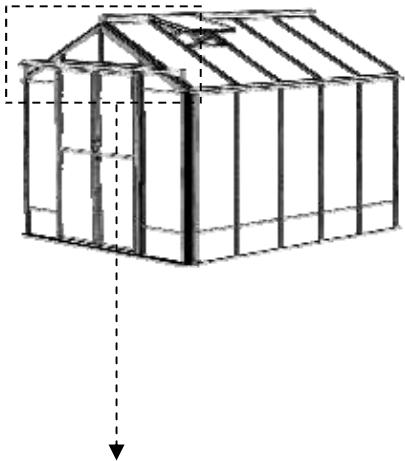
Part No		mm	Q
D153		198	2
D163		90	2
D150			1
D154			2
D845			2
SY-BOLM6X15			15
SYNUTM6			15

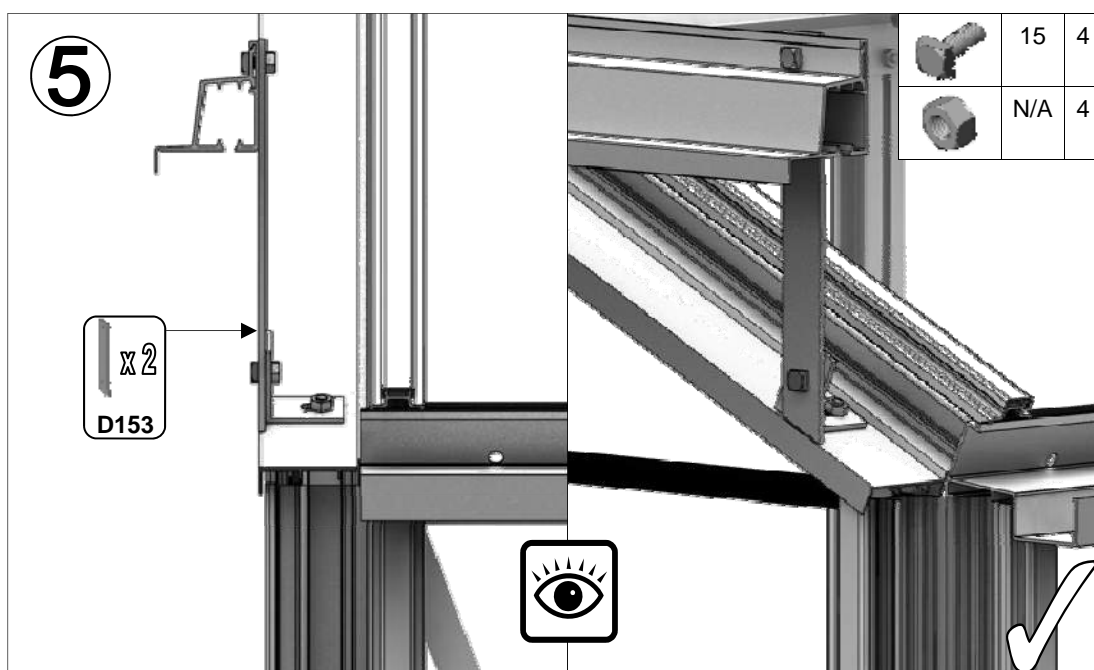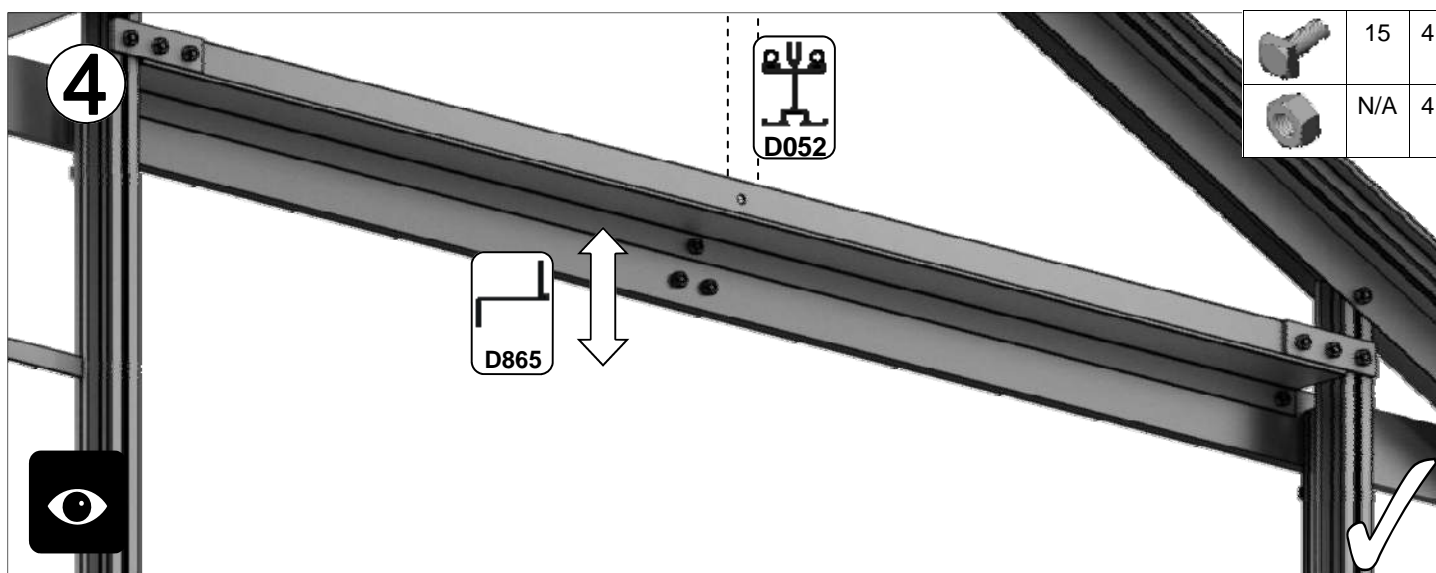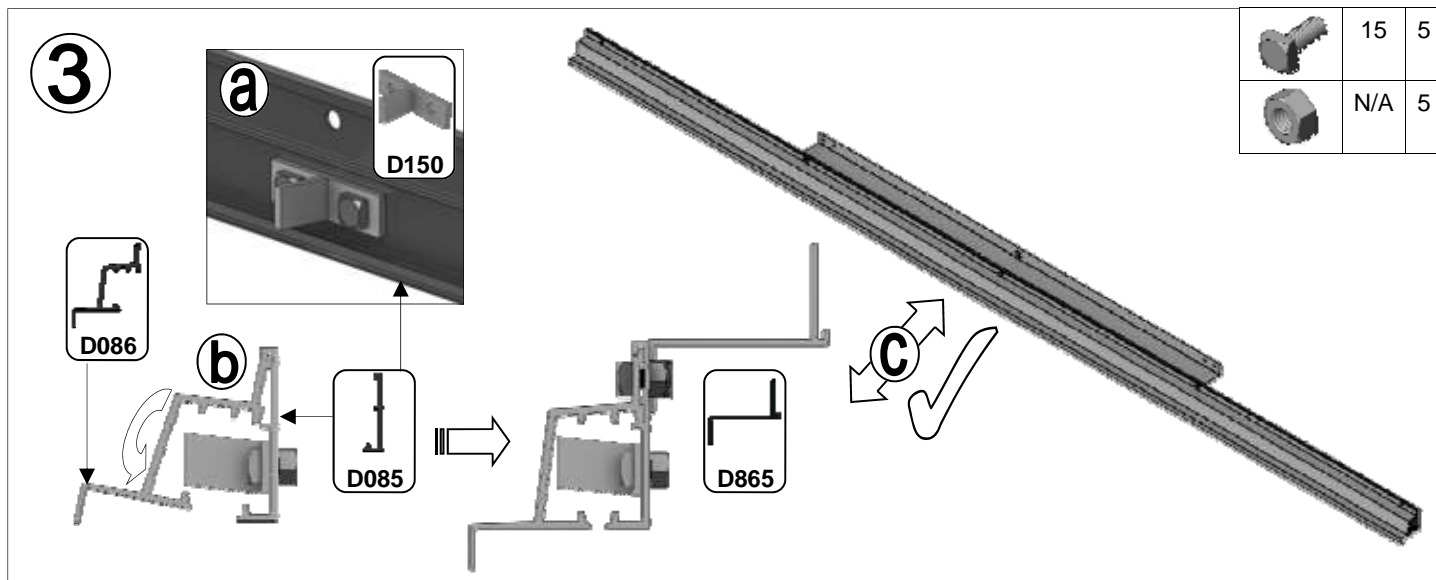






10



Part No		Q
D861		1
D088		1

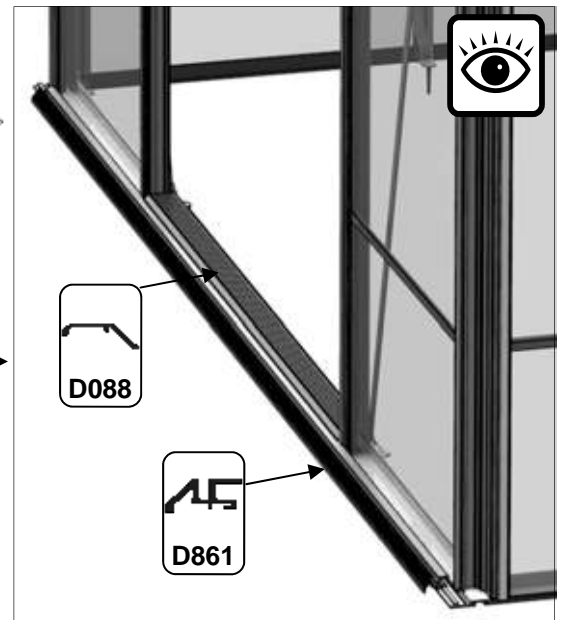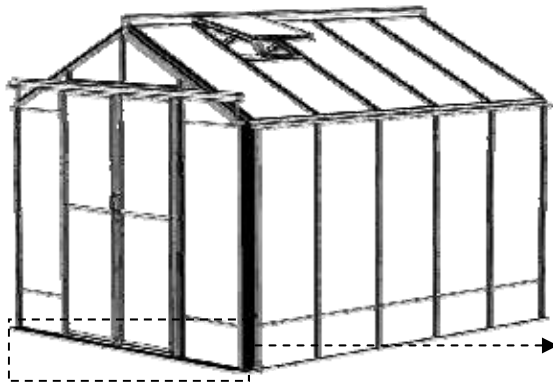


6

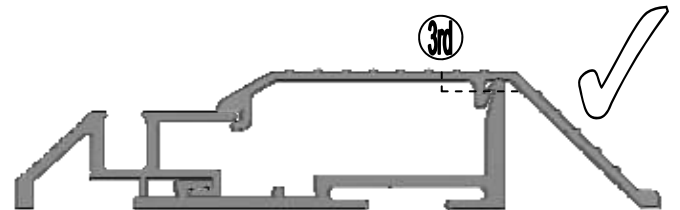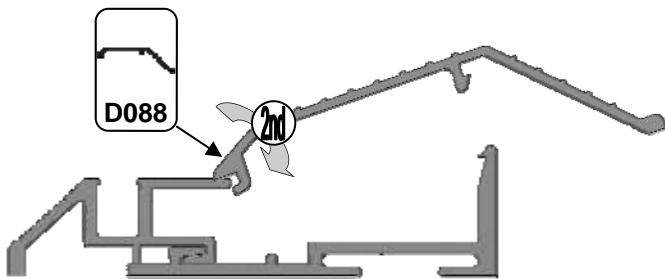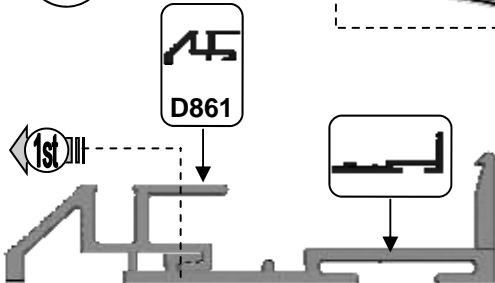

7

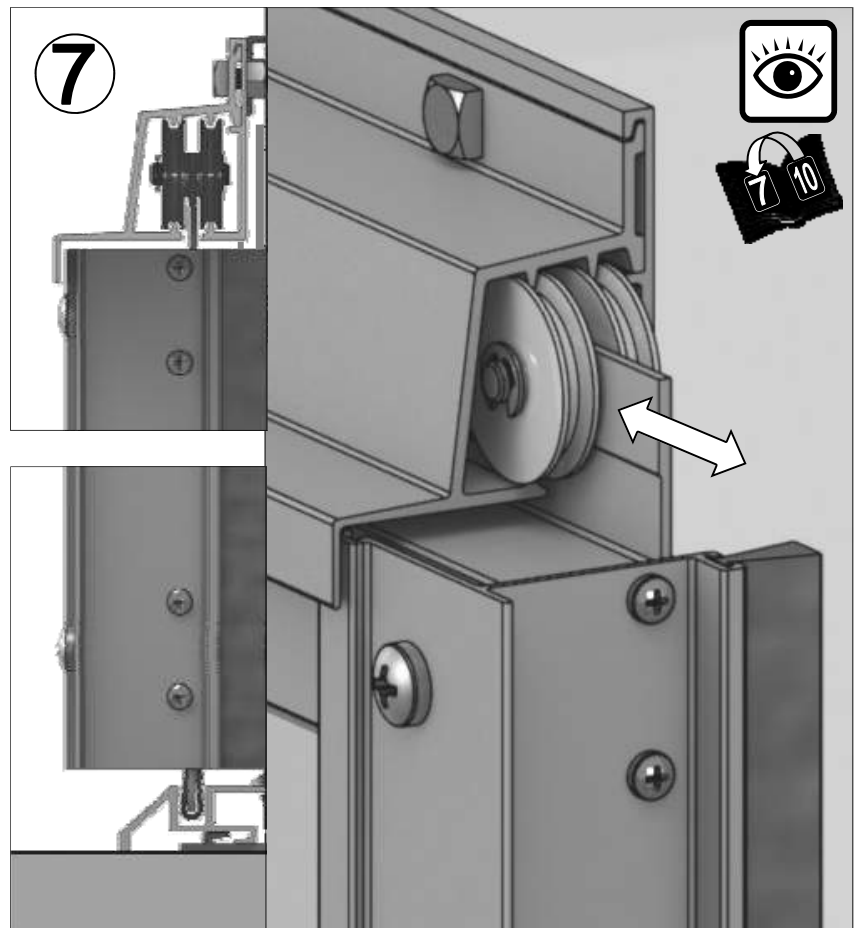
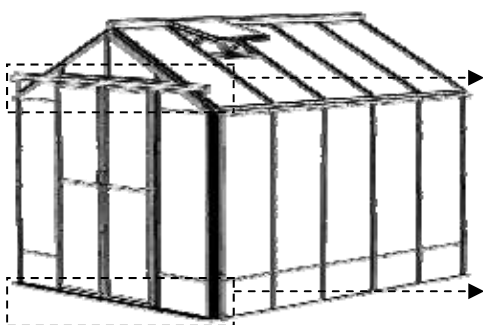


10

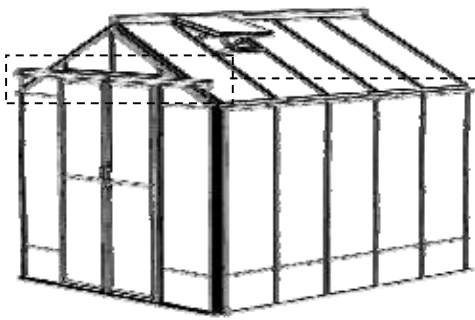


Part No		Q
D312		2
D204L /B		1
D204R /B		1

8

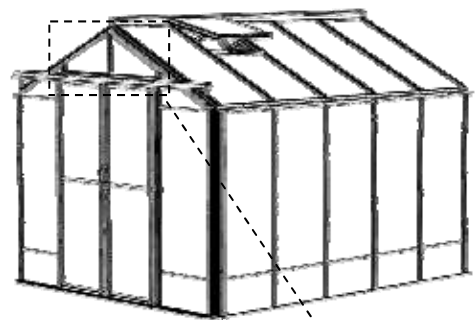
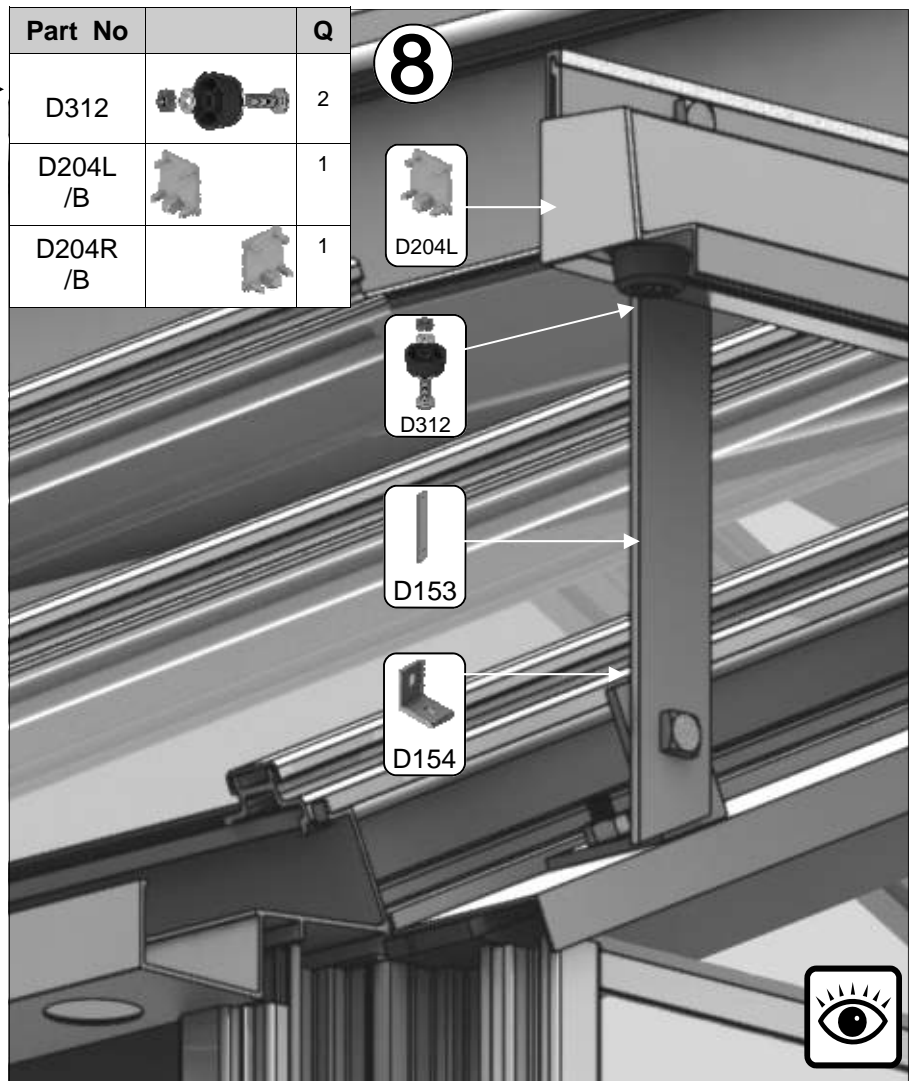


Part No		Q
D052		1
D223/B		1
D817		2
D821		1
D837		2
D831		1


9

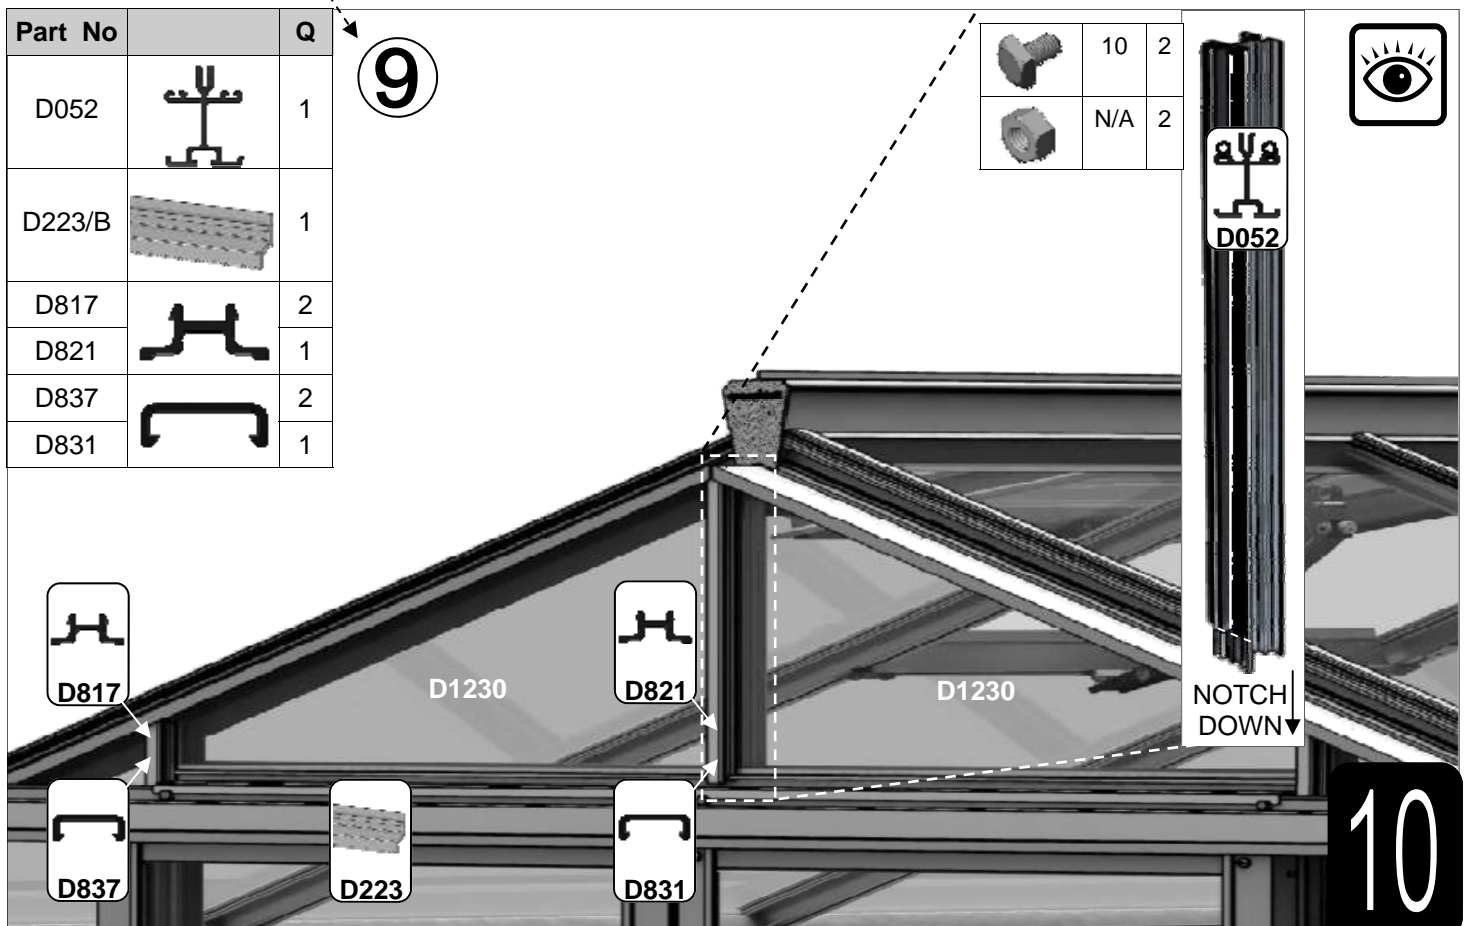

10

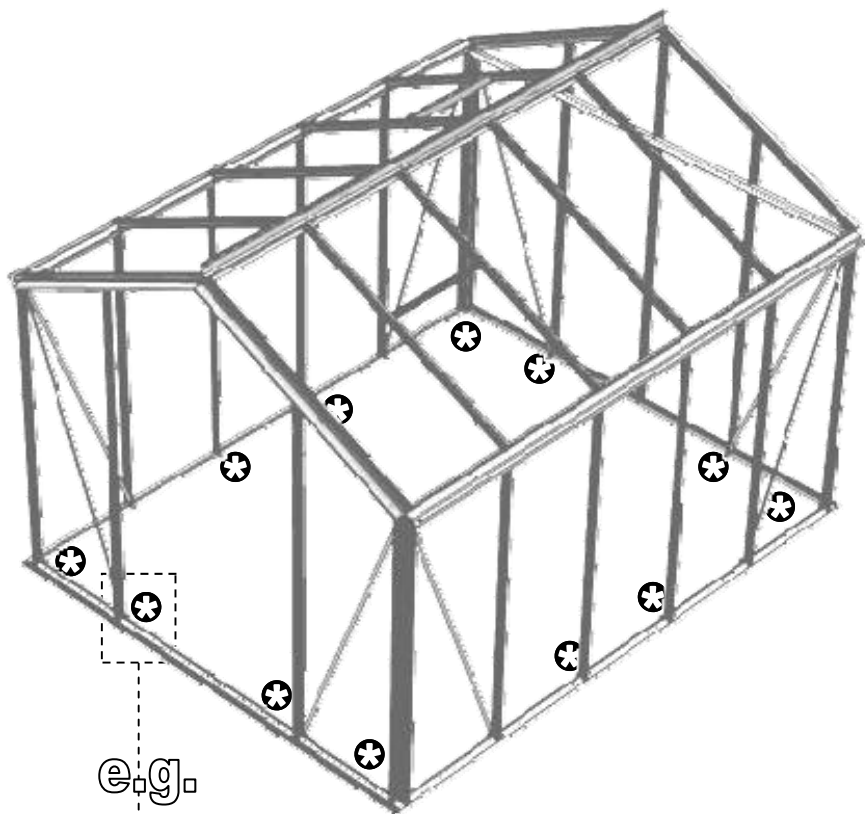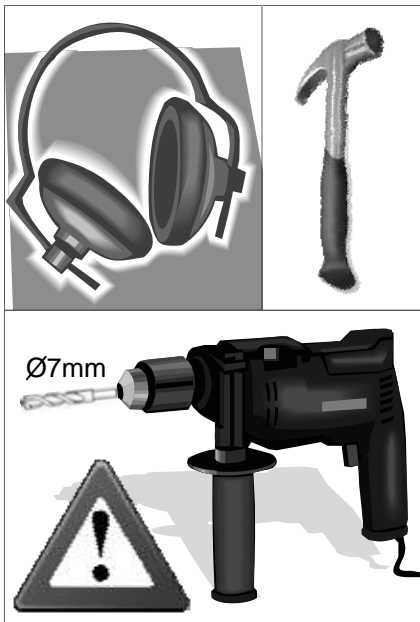


e.g.

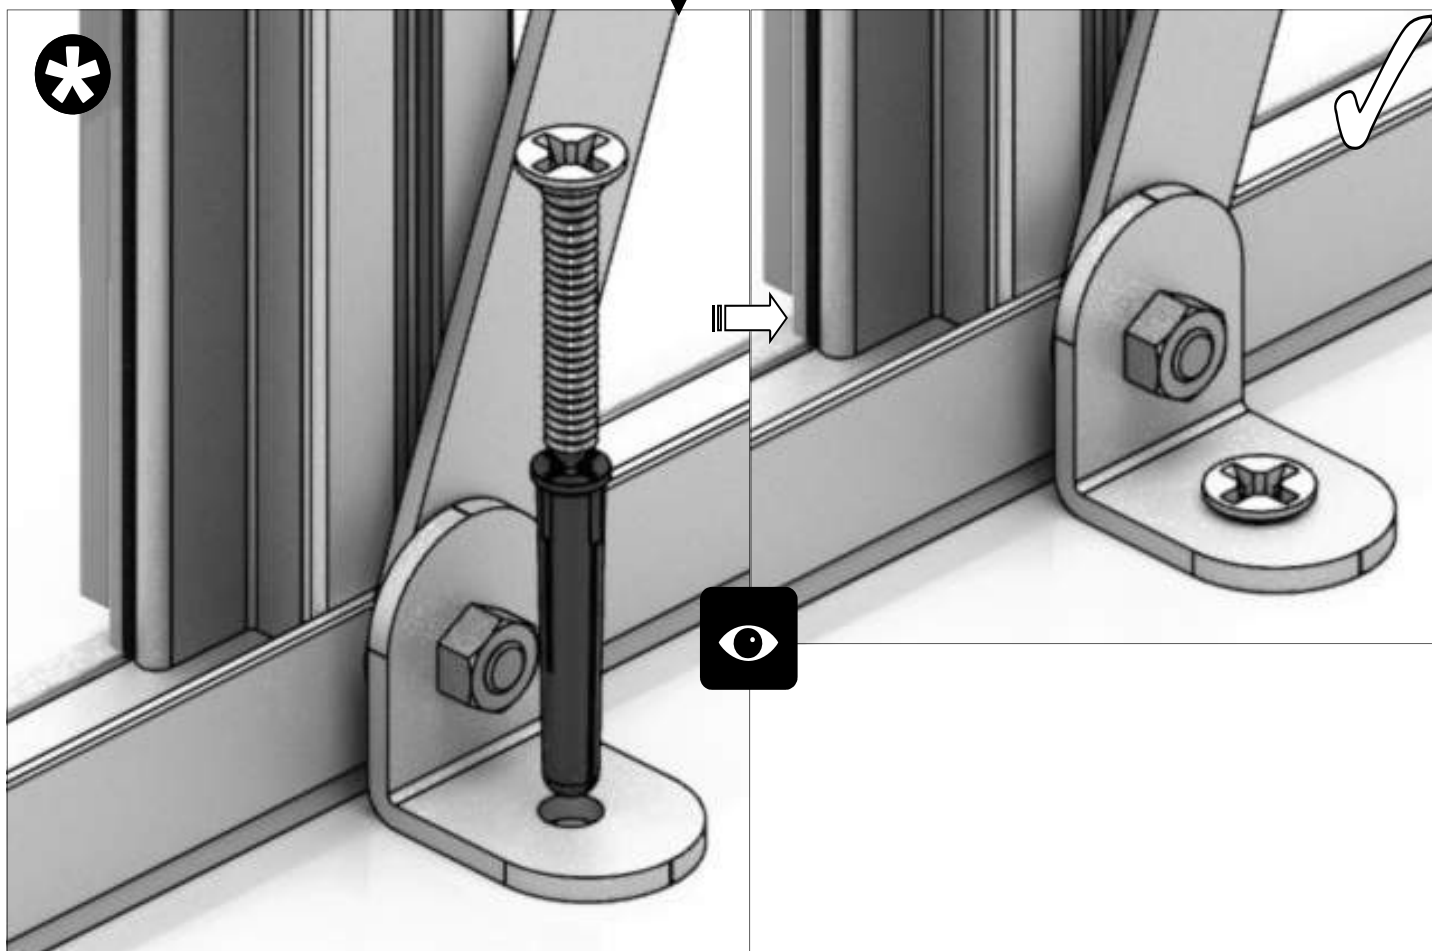




11









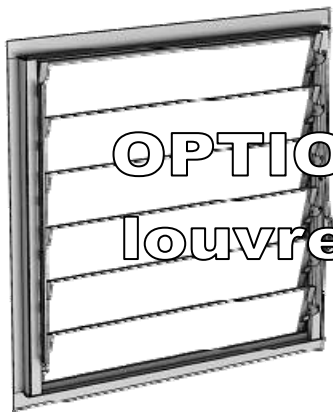


OPTIONAL
louvre = {

Part No		mm	Quantity
D168L		552	1
D168R (handle)		552	1
D165		612	2
D166		552	2
FS6013		12	4

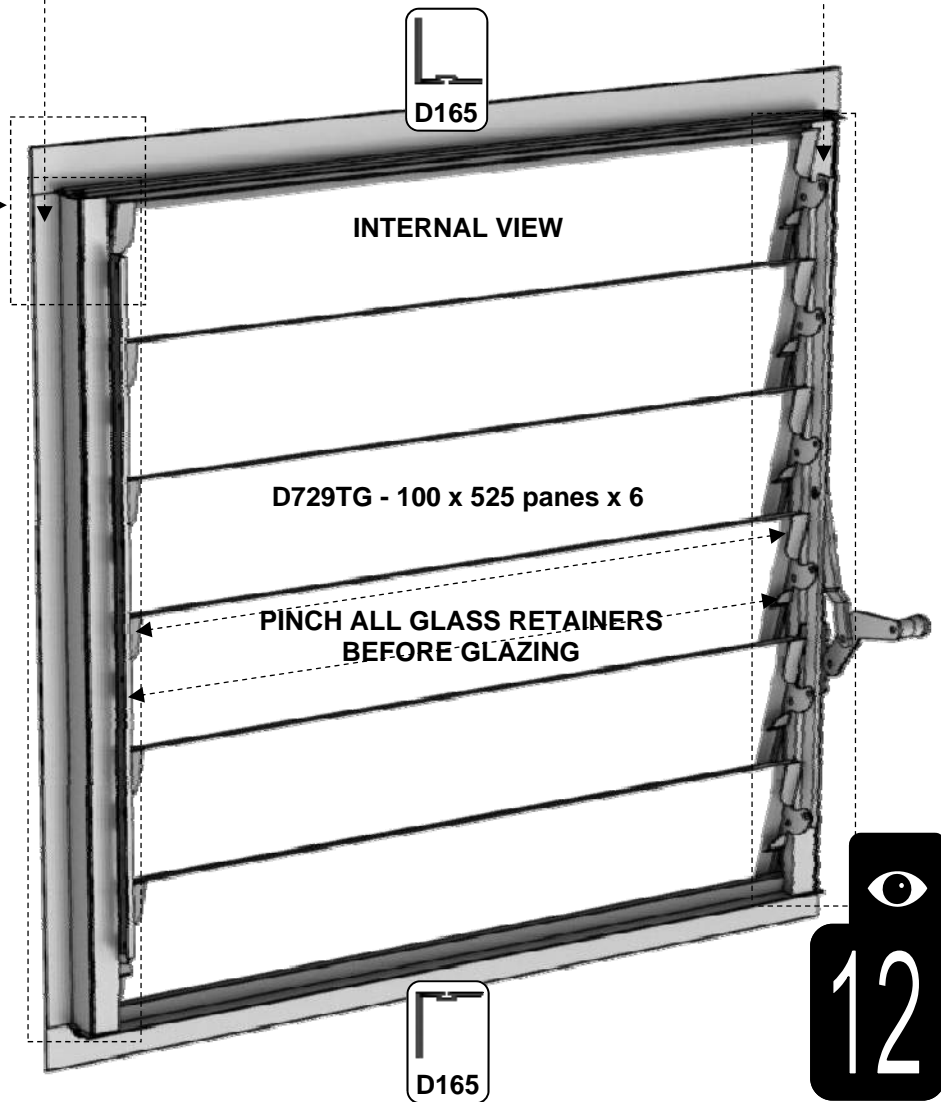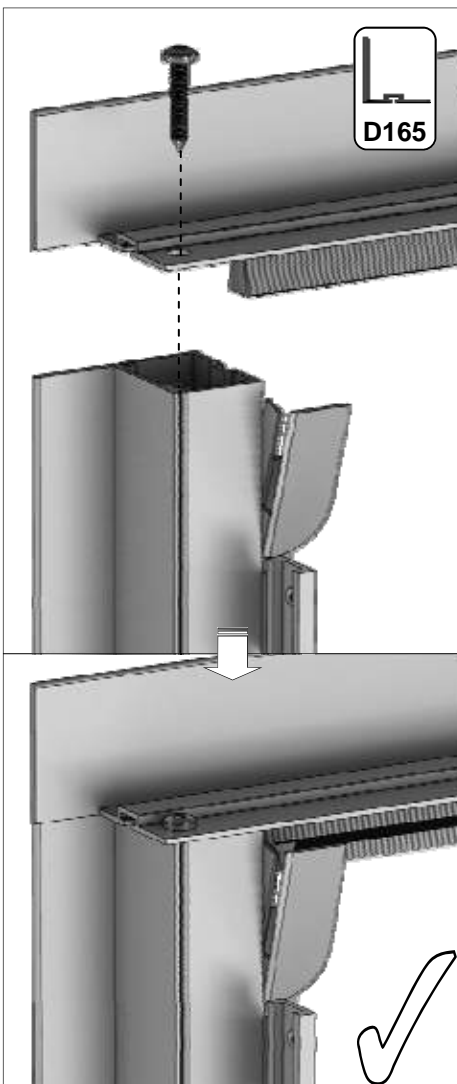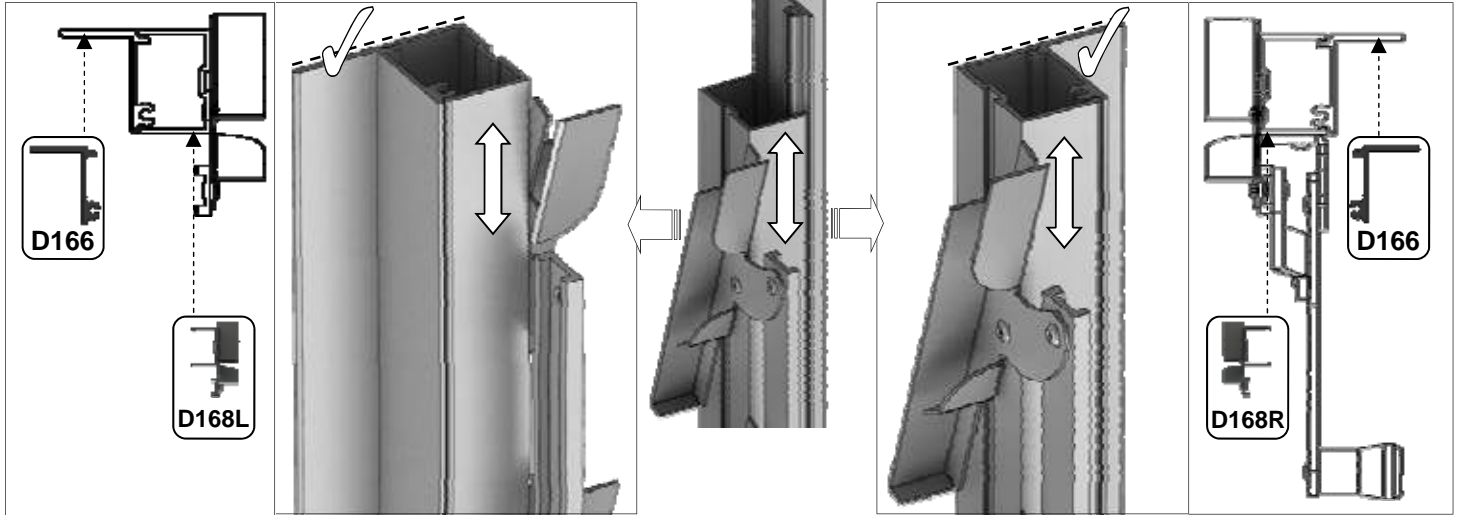


Example: 2x 4' 3 slat shelves 'ST0304' = 8' run

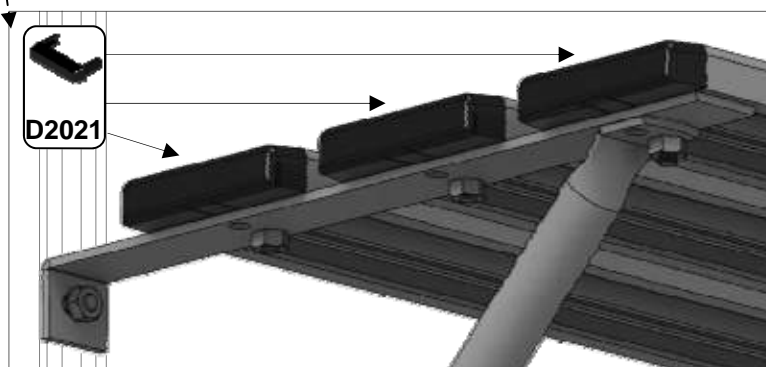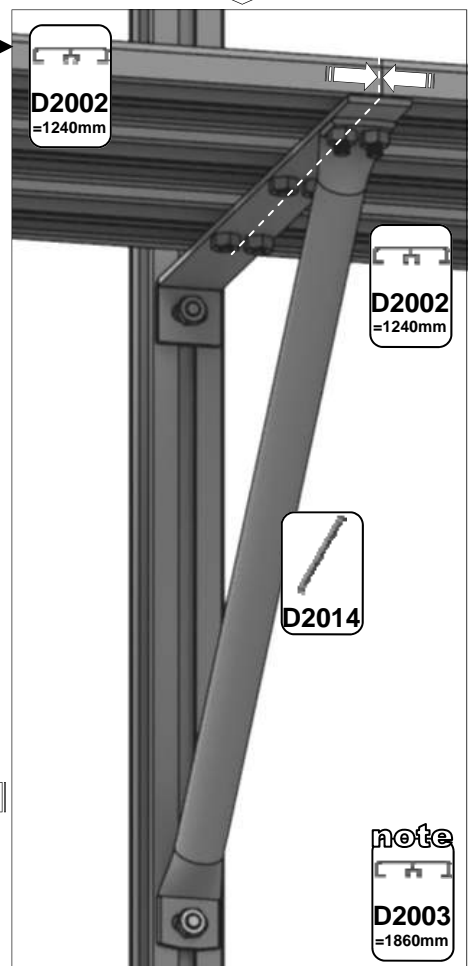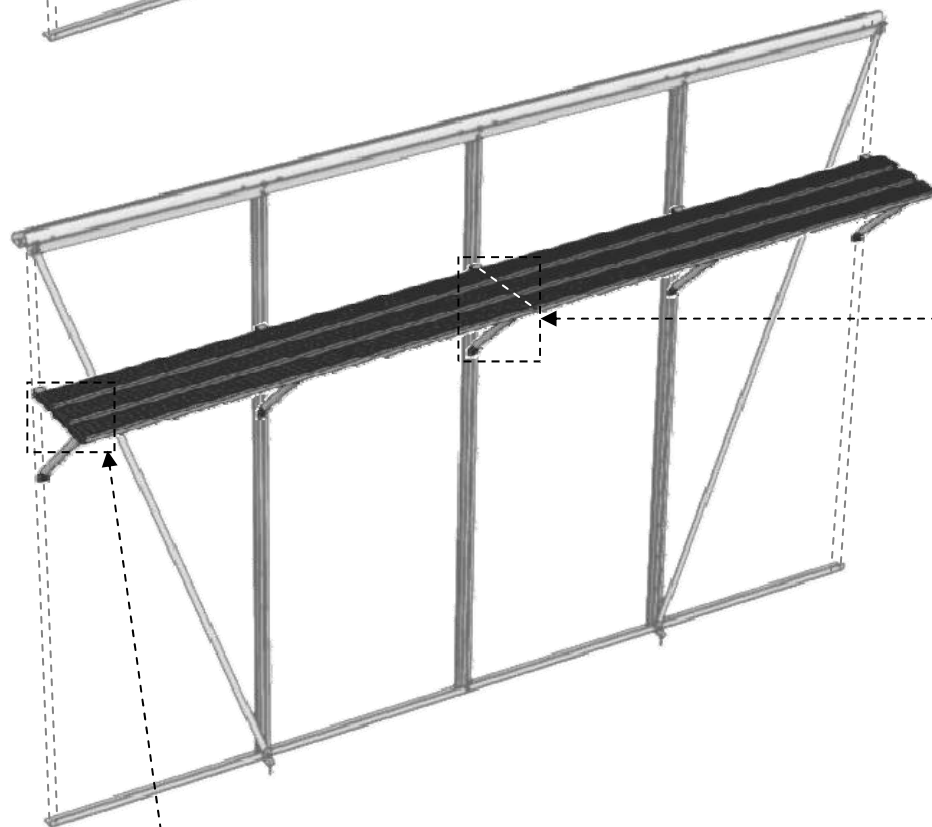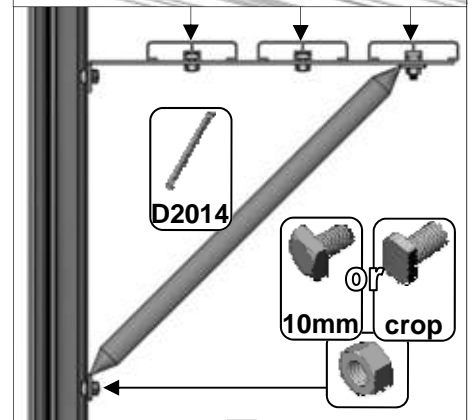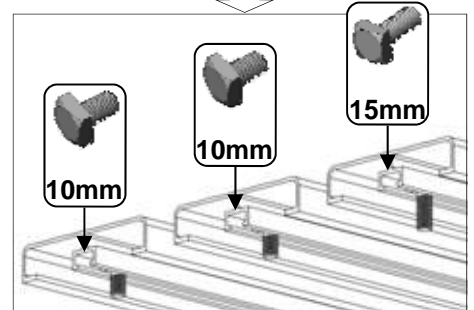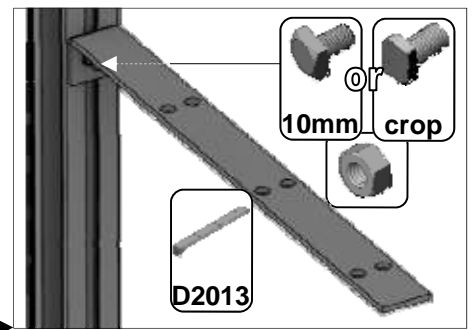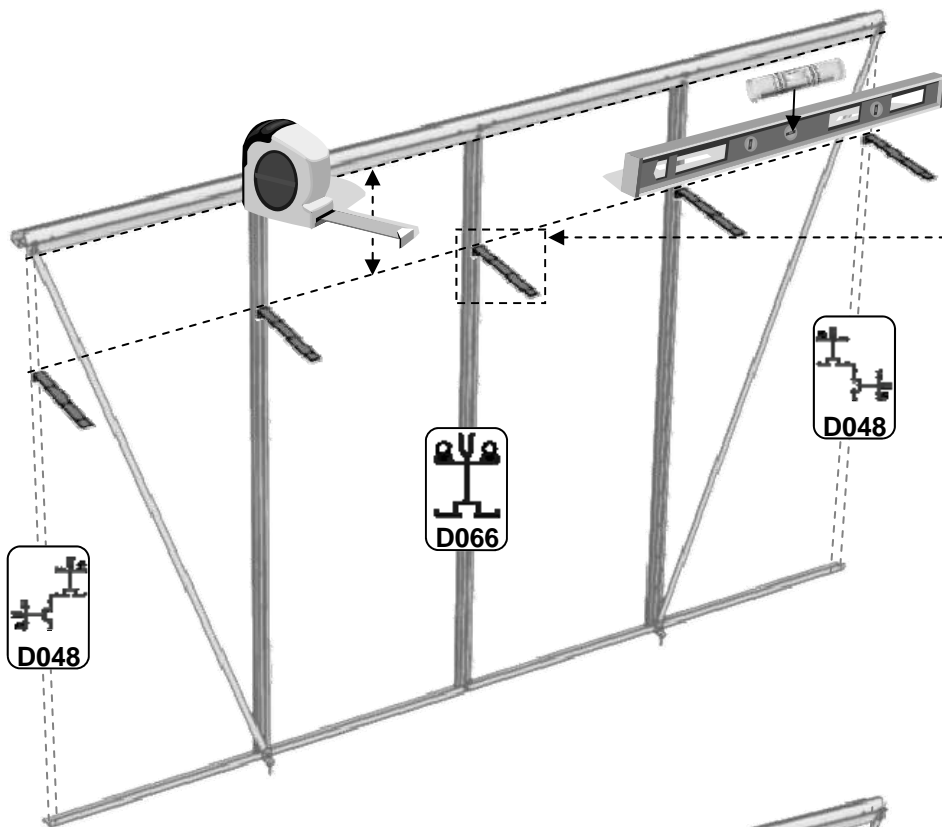






13

Example: 2x 4' **7** slat staging 'ST0704' = 8' run




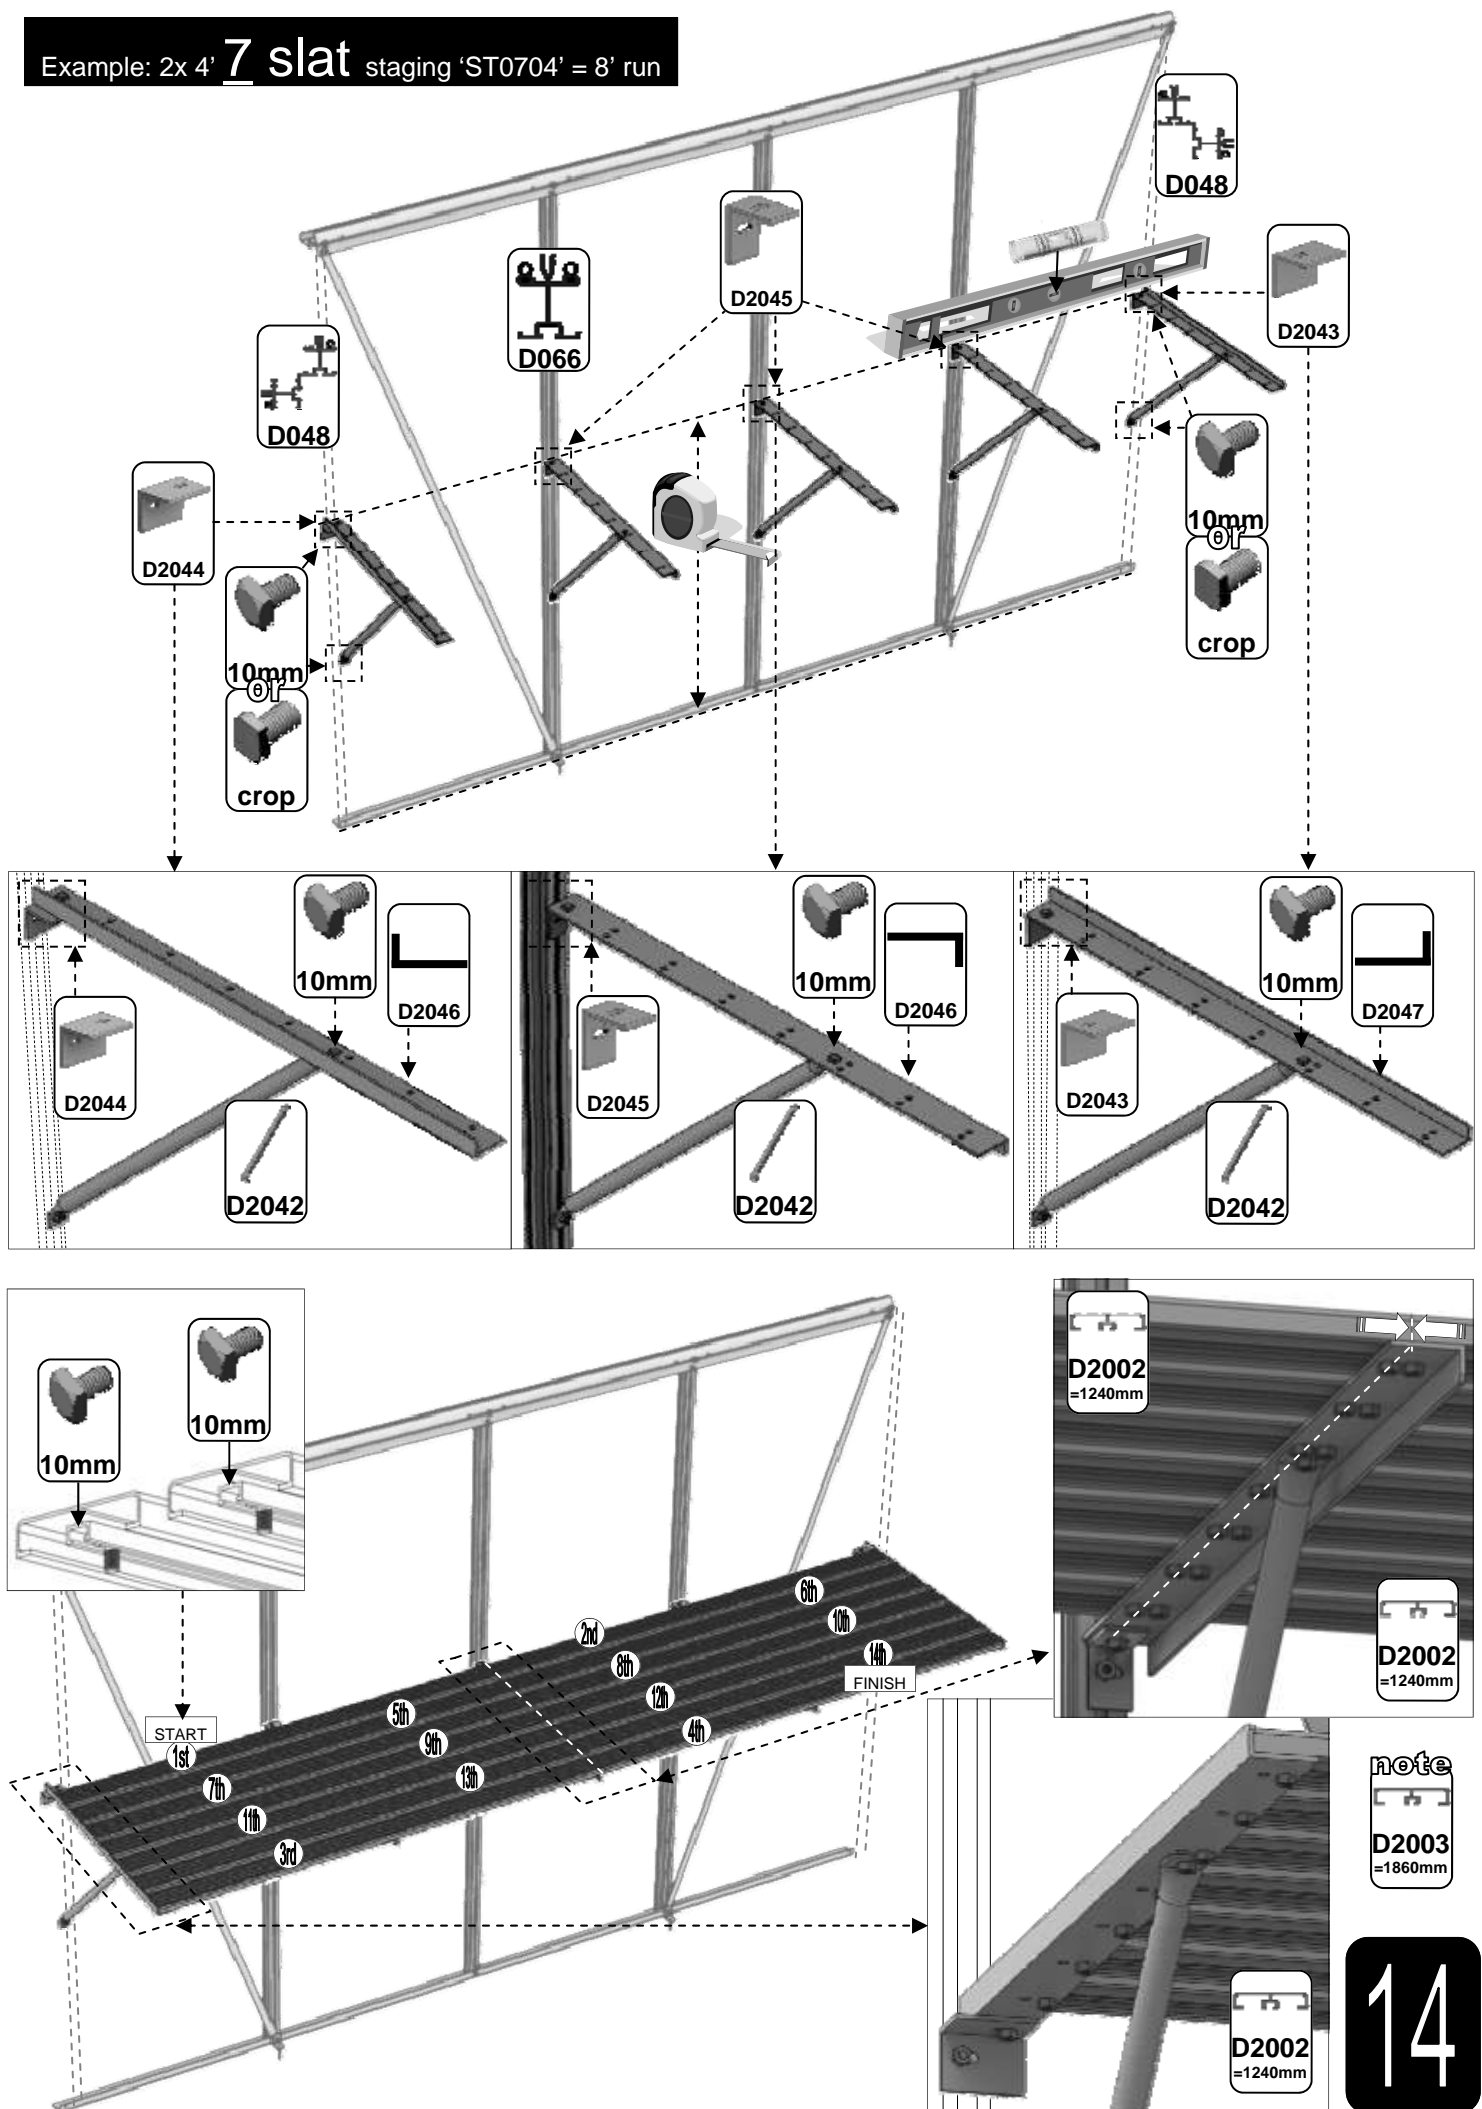


Example: 2x 4' **10** slat staging 'ST01004' = 8' run

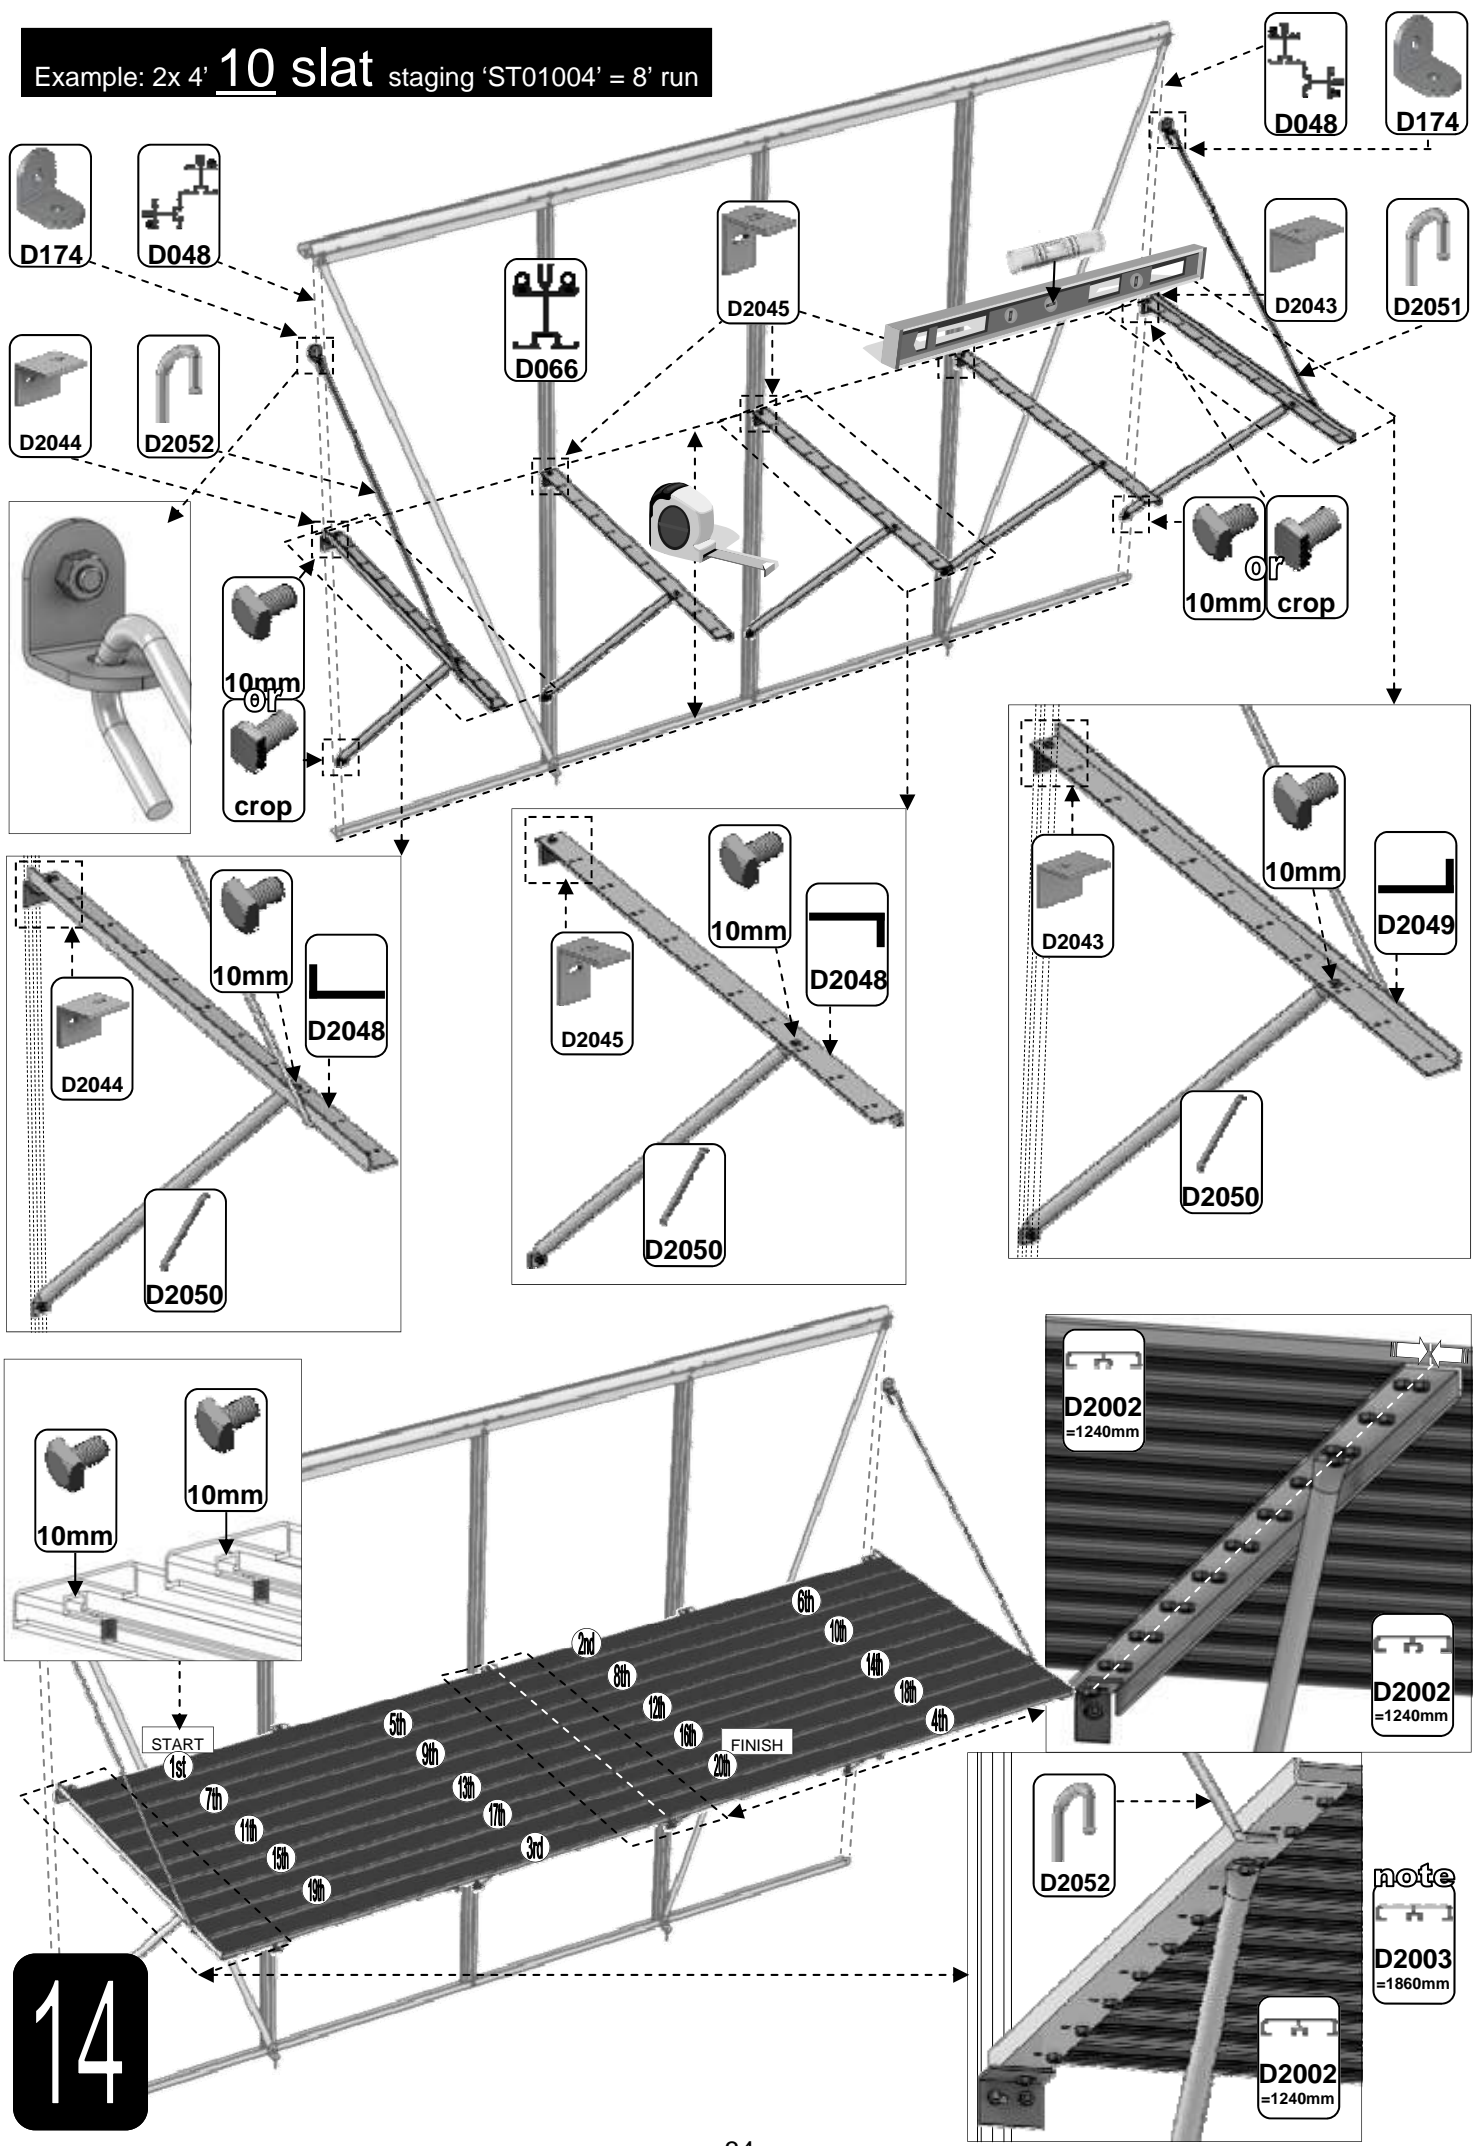

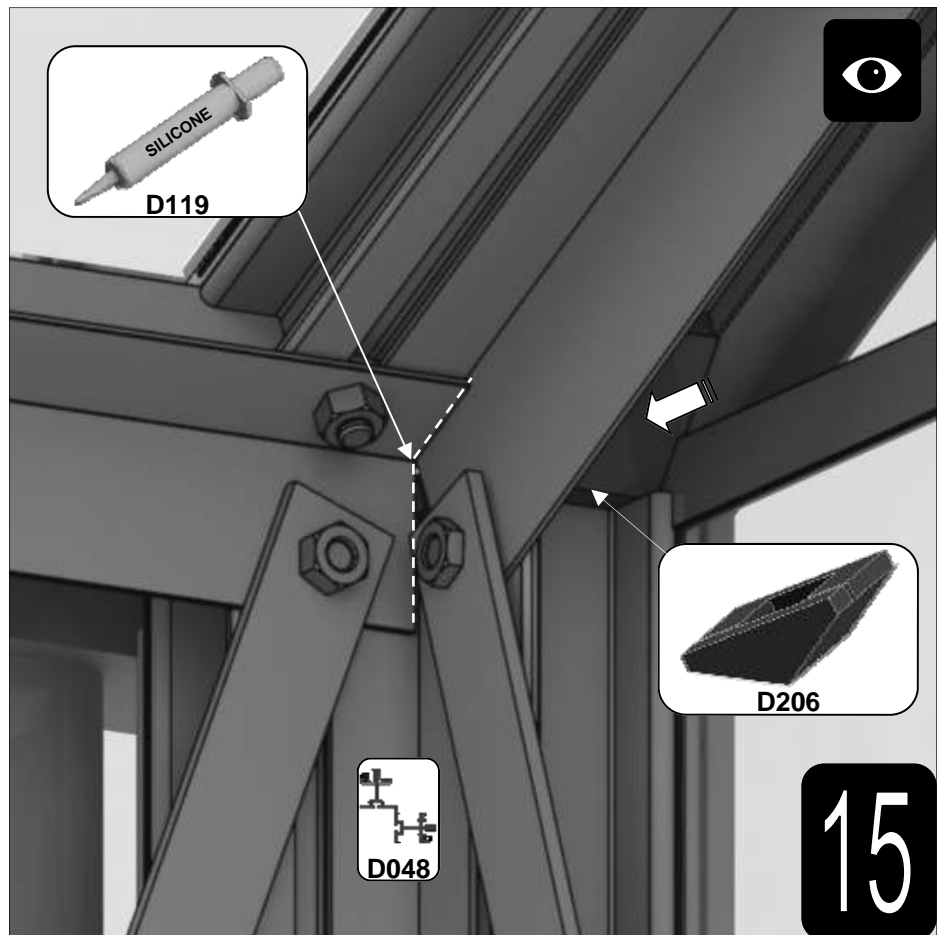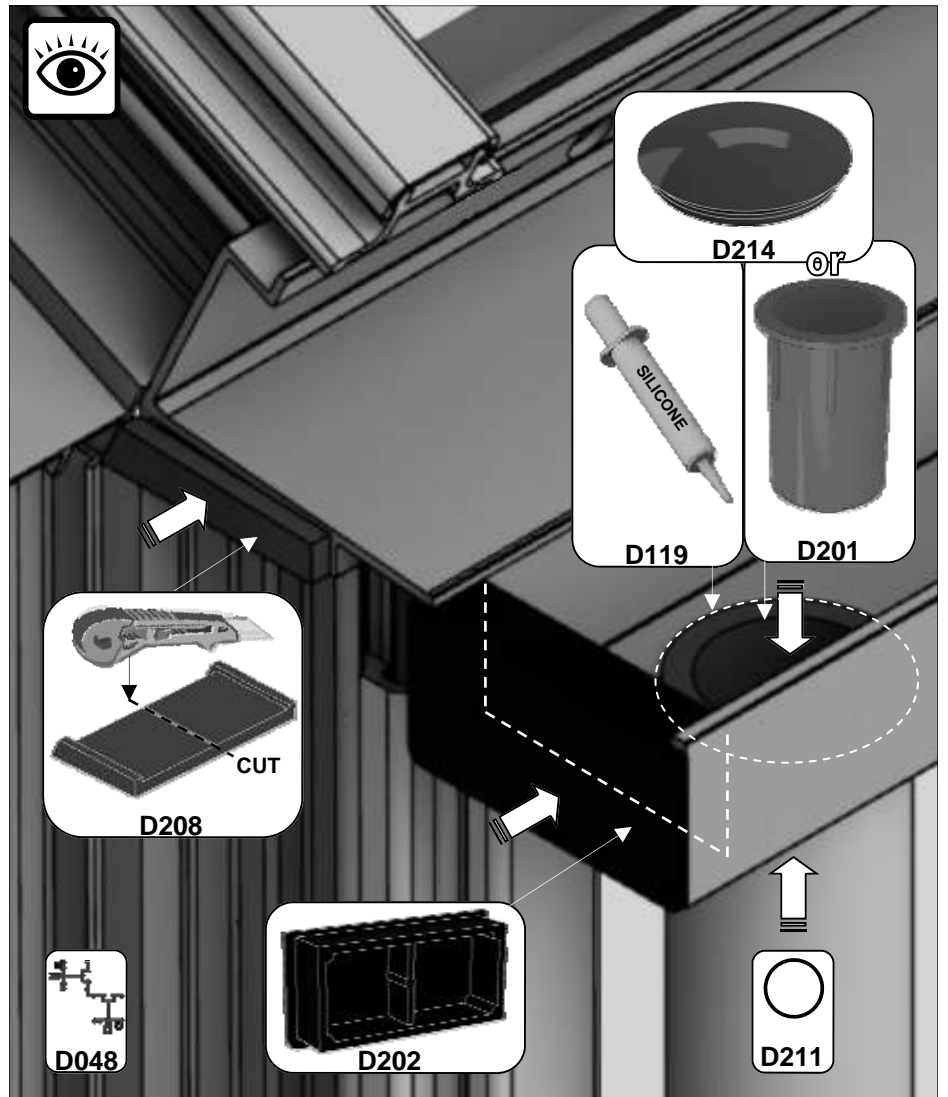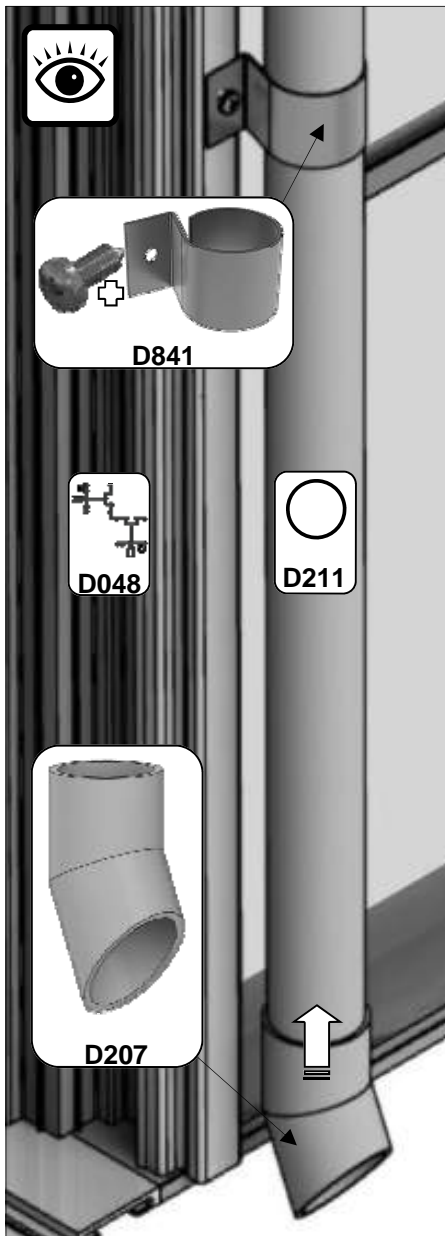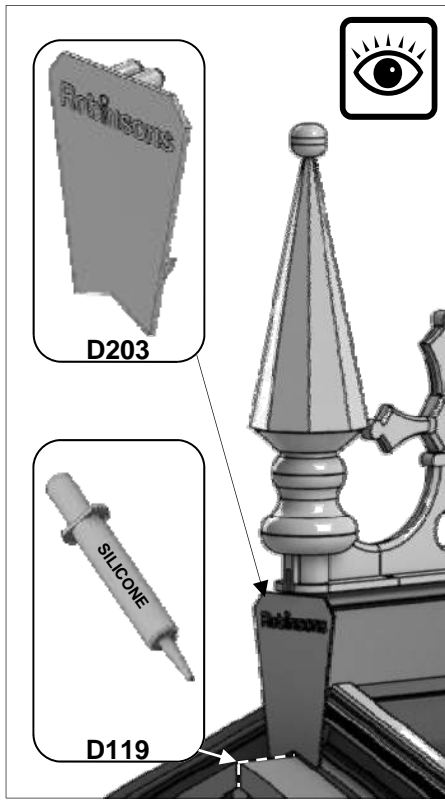



OPTIONAL crestring = {

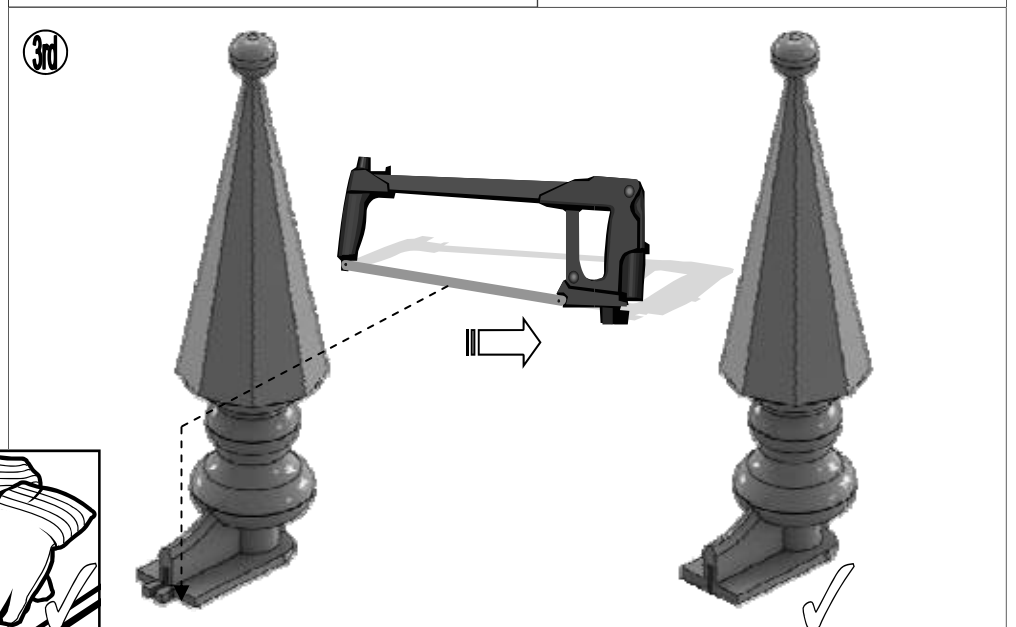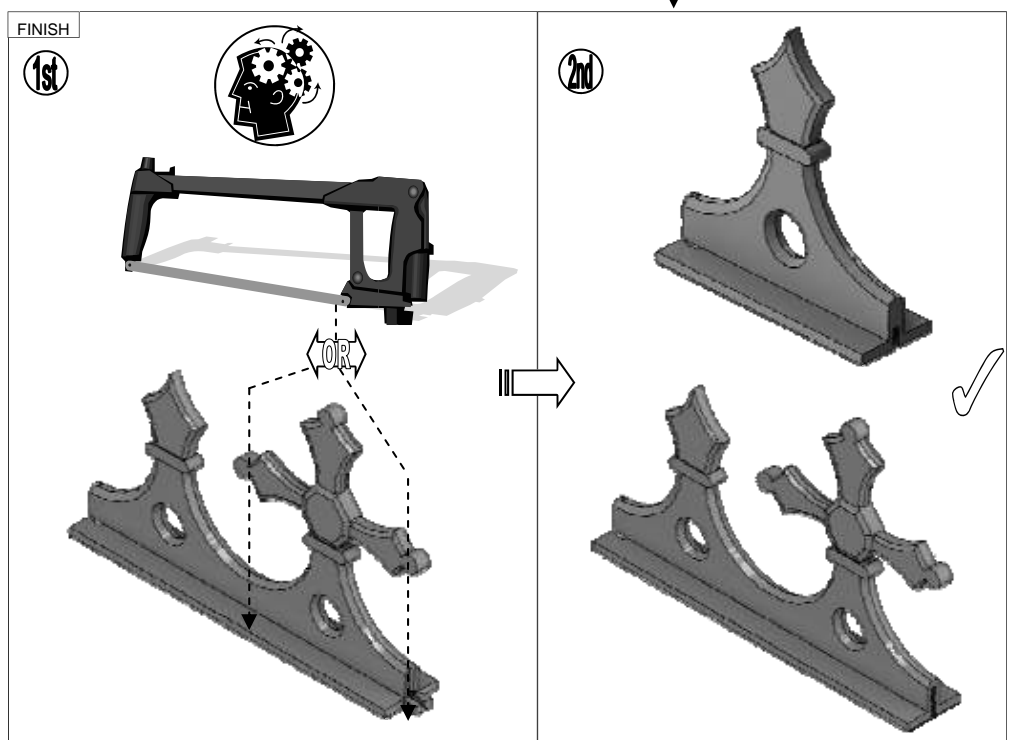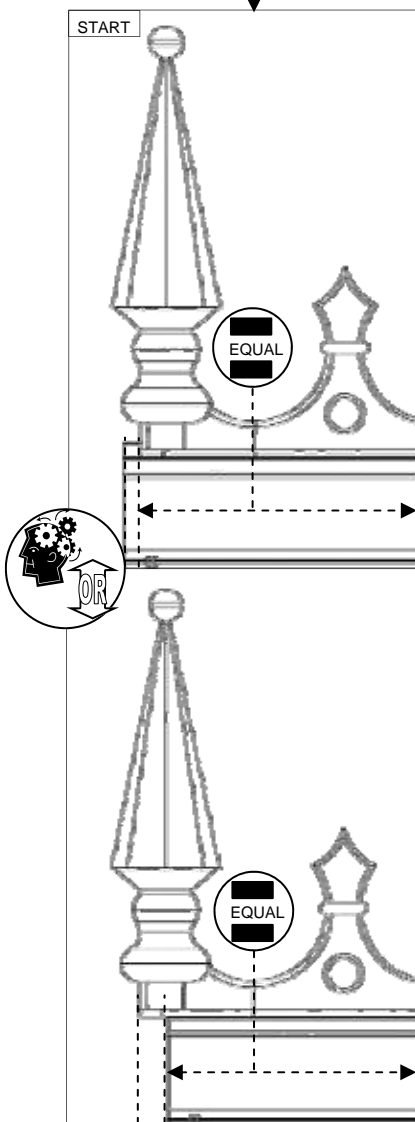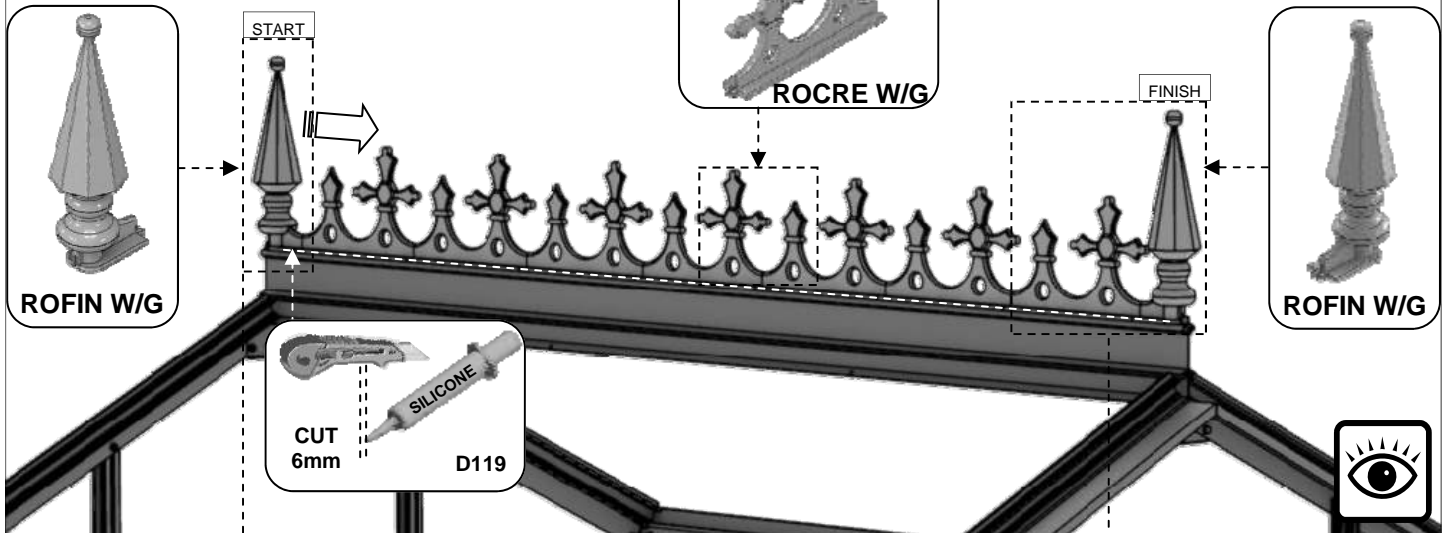


15



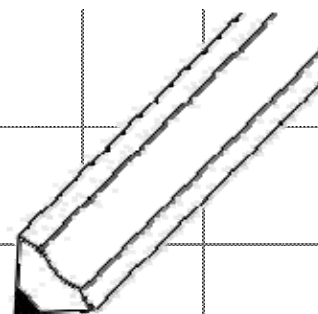

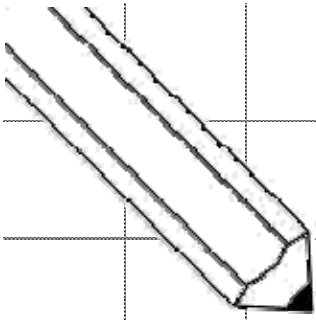

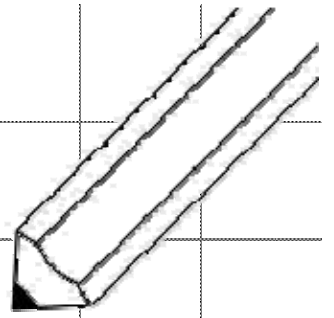

Please be aware that this is a new multi-national manual. If you spot any errors or have any constructive comments regarding the manual please email james@thegreenhousepeople.co.uk and I will make the necessary amendments. In addition any photographs of completed buildings would be most appreciated to add to our portfolio.

Here's how you can earn £30 and have your new greenhouse feature in our next brochure....

We are always interested to hear how you went on assembling your greenhouse, and we are particularly interested to see photos of the finished article.

We like to see where you've put it, how you're using it and how it looks in your garden. Often we glean ideas from this which we can pass on to other gardeners as useful tips.

It is always nice if we can include 'real' greenhouse photos in the brochure, so if you send us a photo of your greenhouse to us and it is good enough to get into our next brochure, **we will send you a £30 reward.**

Please send your photos to:

Photo competition

Robinsons Greenhouses

Blythe Park

Cresswell

Stoke-on-Trent

Staffs

ST11 9RD

Or better still, email us on james.durose@greenhousepeople.co.uk

Please write on the reverse of photos your name and address and if you would like them back, please write 'please return' on them too.

We wish you all the best with your new greenhouse, and we look forward to seeing your photos in the near future!

THIS GREENHOUSE BOX WAS PACKED BY:

DATE: _____



www.robinsonsgreenhouses.co.uk

To contact Robinsons Customer Services email us at sales@robinsonsgreenhouses.co.uk or call us on 01782 385 409.

Our address is Robinsons Greenhouses, Unit 19 Blythe Park, Cresswell, Stoke-on-Trent, Staffordshire, ST11 9RD